

KEY SYSTEMS SERVICE MANUAL

VOLUME I



Key System Manual Vol I

Comments concerning content, usability, and adequacy of this manual will be welcomed. This sheet may be removed and mailed directly to the Bell System Practices Organization. This sheet is not to be used for ordering manuals. The following page will give you ordering information.

Mail To:

Bell System
Data Design Engineering Manager
2400 Reynolda Road
Winston-Salem, N. C. 27106

Orders for these manuals should be placed on:

Western Electric
Indiana Publications Center
P. O. Box 26205
Indianapolis, Indiana 46226

KEY SYSTEMS SERVICE MANUAL VOL I

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

Printed in U.S.A.

INTRODUCTION

The Key Systems Service Manual consists of Volumes I, II, and III. Volume I contains three parts: Common Key System Information, General Apparatus, and Telephone Sets. Volume II contains information concerning 1A, 1A1, and 1A2 Key Telephone Systems. Volume III includes those BSPs unique to COM KEY* services. The sections are compiled in the manual numerically and not in the order they appear in the Table of Contents.

This manual supports plant craft personnel in their daily work operations. The sections contained in the manual provide information necessary for installing and maintaining key systems.

For information not included in this manual, refer to the standard BSP files.

*Trademark of AT&T Company

TABLE OF CONTENTS

VOLUME I

Section Number	Issue	Subject	Section Number	Issue	Subject
COMMON INFORMATION			● 512-210-103	6	Separately Mounted Keys — 6040-, 6041-, 6050-, and 6051-Types — Identification, Installation, and Connections
460-110-130	1	Marking Physical Location of Station Equipment and Cable	● 512-220-100	7	549- and 551-Type Pushbutton Keys — Identification, Installation, Maintenance, and Connections
● 461-200-101	7	Connector Cables — Identification	● 512-700-100	5	4A Speakerphone Components — Identification, Installation, Operation, and Maintenance
Add 461-200-102	1		POWER		
461-200-102	6	Adapter for Use With Connector Cables	167-416-201	7	101G (J86731) Power Plants — Identification, Installation, and Connections
● 461-604-100	1		167-440-201	6	Power Units — 19- and 20-Type — Identification, Installation, Connections, and Maintenance
● 461-604-100	5	Connecting Blocks — 66-Type — Tools, Terminating, Adapters, and Maintenance	167-446-101	5	Power Units — 29- and 30-Type — Identification, Installation, and Connections
● 461-604-101	4	Connecting Blocks — 66-Type — Numbering and Wiring Plan	167-447-101	1	Power Units — 34B1 and 34C1 — Identification, Installation, and Connections
● 461-604-102	6	Connecting Blocks — 66A, B, C, and M1 Types — Identification	● 167-449-101	2	Power Unit — 47C — Identification, Installation, and Connections
461-604-103	3	Connecting Blocks — 66E3-25, 66E4-25, and 66E8-25 — Identification and Installation	TELEPHONE SETS		
● 461-604-105	2	Connecting Blocks — 66M3-50R and 66M4-50R — Identification, Installation, and Maintenance	SERVICE		
● 461-608-100	3	Connecting Blocks and Wiring Blocks — 88-Type	● 502-501-100	1	554BMS and 2554BMS Telephone Sets — Identification, Installation, and Maintenance
461-620-100	2	Matrix Block — 1A1 — Identification, Installation, Wiring, and Maintenance	502-541-406	2	564HD
● Add 463-130-100	1		● 502-541-407	5	564HK, 564HL, 564HLM, and 564HLMs
463-130-100	12	Backboards — Identification and Installation	502-541-410	2	565HD
● 463-140-100	9	Equipment Cabinets and Apparatus Mountings — Identification	● 502-541-414	6	565GK, 565GKM, and 565GKMS
● 463-210-100	5	Lamp Indicators — Identification and Installation	● 502-541-415	8	565HK, 565HKM, and 565HKMS
● 501-120-100	11	Buzzers and Bells — Identification, Installation, Maintenance, Limitations, and Connections	● 502-541-416	8	565LK, 565LKM, and 565LKMS
501-150-102	5	Designation Strips and Cards	● 502-543-403	6	2565GK and 2565GKM
● 502-110-100	3	Key Telephone Sets — Standard Features and Options — Basic Wiring Requirements	● 502-543-405	8	2565HK, 2565HKM, and 2565HKMS
● Add 502-110-102	1		● 502-543-406	8	2565LK, 2565LKM, and 2565LKMS
502-110-102	4	Nonkey Telephone Sets — Conversion for Use With 1A1 or 1A2 Key Telephone Systems	502-580-405	4	500L/M and 500MM
502-500-120	4	Telephone Sets — 540, 560, 1560, and 2560 Series — Common Installation and Maintenance Information	● 502-582-400	5	2500M and 2500MM
502-600-100	3	Telephone Sets — 630, 1630, and 2630 Series	502-610-406	2	630A, B, C, D and 631A, B, C, D
● 512-210-101	4	Separately Mounted Keys — 6017-, 6026-, KS-21254-, and KS-21776-Types — Identification, Installation, and Connections	● 502-610-407	8	630DA, 630DAM, 630DAMS1, 631DA, 631DAM, and 631DAMS1

Section Number	Issue	Subject
● Add 502-610-409	1	
502-610-409	2	634A, B, C, D and 635A, C, D
502-610-410	2	636A, B, C and 637A, B, C, D
502-610-417	5	634DA, 634DAM, 635DA, and 635DAM
● 502-610-418	6	636CA, 636CAM, 636CAMS, 637DA, 637DAM, and 637DAMS
502-612-400	3	2630D and 2631D
● 502-612-401	6	2630DA, 2630DAM, 2631DA, and 2631DAM
502-612-403	2	2634D and 2635D

Section Number	Issue	Subject
502-612-404	1	2636- and 2637-Type
502-612-409	5	2634DA, 2634DAM, 2635DA, and 2635DAM
502-612-410	5	2636CA, 2636CAM, 2637DA, and 2637DAM
● 503-601-101	8	851- and 2851-Type
● 503-603-101	4	2872A1M or 2872A2M — ITOUCH-A-MATIC Automatic Dialer
● 503-603-102	2	872A1M (TOUCH-A-MATIC Set)
● 503-701-101	9	830- and 2830-Type
● 503-702-101	9	831- and 2831-Type

VOLUME II

KEY TELEPHONE SYSTEMS — 1A, 1A1, AND 1A2

COMMON INFORMATION

518-010-101	2	Centralized Key Telephone Installations
518-010-105	2	Key Telephone System — Grounding and Special Protection Requirements
518-010-106	3	Power Unit Selection — Key Telephone Systems and Key Service Units
518-010-107	1	Key Telephone Systems — Reserve Power — 47C Power Unit
● 518-010-108	4	Common Audible Signaling — Key Telephone Systems
● 518-010-109	2	Voice Station Signaling on Manual Intercoms — Identification, Installation, and Maintenance
518-010-110	1	2A1 Matrix Block — Identification, Installation, Connection, and Maintenance
● Add 518-010-111	1	
518-010-111	2	Message Waiting Consoles Used With 1A, 1A1, or 1A2 Key Telephone Systems
● 518-010-115	2	Hands-Free Answering on Intercom — 1A1, 1A2, 6A, and 6B Key Telephone Systems
● 518-010-116	1	Paging Adapter Circuit — 278A Adapter
● 876-300-100	8	Electrical Protection — Stations and Customer Premises Equipment

SERVICE — 1A KTS

518-112-420	1	50-Type Packaged Units
518-112-421	2	Tie Line and Control Services
518-112-422	1	Intercom Services

REFERENCE — 1A1 KTS

● 518-114-105	2	Identification and Arrangements
● 518-114-108	2	Installation and Maintenance
● 518-114-110	4	Key Telephone Units
Add 518-114-115	1	
518-114-115	1	Packaged Key Telephone Units
518-114-116	2	TOUCH-TONE Adapters

SERVICE — 1A1 KTS

518-114-425	3	Key Telephone Units
518-114-430	1	200F, G, and K Packaged Key Telephone Units
Add 518-114-431	1	
518-114-431	3	200H Packaged Units
518-114-432	1	Key Service Units

REFERENCE — 1A2 KTS

● 518-215-100	7	Identification and Arrangements
---------------	---	---------------------------------

SERVICE — 1A2 KTS

● 518-215-400	7	Key Telephone Units — Line Services
● Add 518-215-401	1	
518-215-401	3	Key Telephone Units — Auxiliary Line Services
● 518-215-402	4	Key Telephone Units — Intercom Services
518-215-403	2	Key Telephone Units — Control Services
● Add 518-215-404	1	
518-215-404	1	Key Service Units — 501- and 502-Type
● Add 518-215-405	1	
● 518-215-405	7	Key Service Units — 513-, 514-, and 515-Type

Section Number	Issue	Subject
● Add 518-215-407	2	
518-215-407	1	Key Service Units — 550- and 551-Type
● Add 518-215-410	1	
● 518-215-410	8	Panels — 583- and 584-Type
● 518-215-417	7	Panels — 597- and 598-Type
518-215-418	2	Panels — 601-, 602- and 603-Type
● 518-215-419	5	Modular Panels — 620A (IMD), 641A, and 642A
● Add 518-215-420	1	
● 518-215-420	6	Apparatus Mountings — 69B, D, and G
● Add 518-215-421	2	
● 518-215-421	2	Modular Panel — 626A
● 518-215-422	3	Apparatus Mounting — 110A

Section Number	Issue	Subject
● 518-215-424	1	630 Key Service Panel and 113A1 Connecting Unit — Identification, Installation, and Connections
● 518-411-100	2	68 Key Telephone System — DIALOG Intercom System
518-300-413	4	259-Type Key Telephone Unit — Identification
518-300-417	1	272A Key Telephone Unit — Identification

COMMON KTUs

518-310-401	2	227A (IMD) and 227B Key Telephone Units — Audible and Visual Signaling — Identification and Connections
518-310-405	5	StationLine Concentrators — 235- and 236-Type Key Telephone Units — Identification and Connections
518-310-407	8	Key Telephone Unit — 237-Type — Identification, Operation, and Connections

VOLUME III

COM KEY* TELEPHONE SETS

● 503-603-120	3	575AM and 2575AM
● 503-701-110	4	832- and 2832-Type
● 503-702-110	4	833- and 2833-Type

COM KEY SYSTEMS

● Add 518-450-100	1	
● 518-450-100	4	7A Communication System — (COM KEY 718)

● Add 518-450-102	2	
518-450-102	3	14A Communication System — (COM KEY 1434)
518-450-105	2	4A Communication System — (COM KEY 416)
● 518-450-106	3	4A Communication System — (COM KEY 416) Using 981/2981- and 983/2983-Type
● Add 518-450-110	1	
● 518-450-110	2	21A Communication System — (COM KEY 2152) — Descriptive and Ordering Information

● Indicates sections that have been added, reissued, or added since last issue of manual.