


TELEPHONE SETS — 500L, M (SEPARATE RINGER OR CONTROL CIRCUIT) COMMON BATTERY — CONNECTIONS

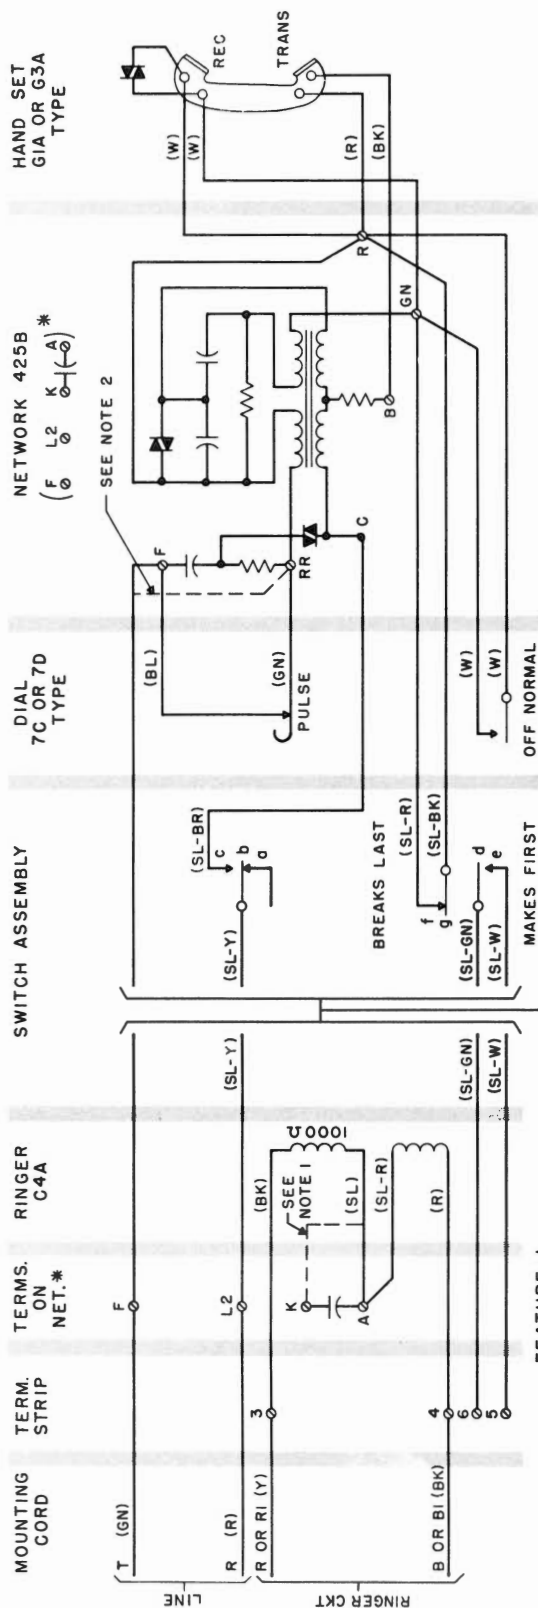

Note 1: When ringer capacitor is required in series with ringer on Feature 1, transfer slate ringer lead to K terminal on network.

Note 2: For manual service (Feature 1) transfer the green mounting cord conductor from F to RR terminal on network. For Feature 2 transfer the black ringer lead and green mounting cord conductor from F to RR terminal. When either feature is used, replace the dial with the appropriate apparatus blank.

Note 3: When both features are required, place 6-conductor mounting cord and terminate BL and W leads on 5 and 6 terminals, respectively.

Note 4: Sets wired for 1A1 will have an asterisk (*) on the base after the code number.

TABLE A
RINGER LEAD CONNECTIONS
TO SILENCE RINGER PERMANENTLY

Class of Ringer Service	Ringer Leads			
	R	BK	SL	SL-R
Individual or Bridged	A	K	K	A

TABLE B
LINE AND RINGER CONNECTIONS

Features (See Note 3)	Connections to Terminals in Set						Mtg Cord Connections to Conn Block			
	Mtg Cord			Ringer Leads			Line		Ringer	
	R	GN	Y	BK	R	SL	Ring	Tip	Ring	Tip
1 Ringer Circuit Brought Out Separately in Mounting Cord	L2	F	3	4	4	3	A	R	Y	BK
2 Control Leads for 1A1 Key Telephone Systems and 101-Type Key Equipment	L2	F	5	6	L2	F	A	R	GN	Y BK