CIVIL AIR DEFENSE WARNING SYSTEM

(CADW)

BELL AND LIGHTS

STATION EQUIPMENT — CONNECTIONS

I. GENERAL

- 1.01 This section shows how to connect station equipment at civil defense control points and warning stations.
- 1.02 This section is reissued to delete the D3AY cord from Fig. 1 and to correct Fig. 2.



Because of the important function of the CADW system, no work of any kind shall be done on the apparatus and equipment described in this section without proper authorization.

2. F-50090 DIAL

2.01 Fig. 1 shows the method of terminating any 3-conductor mounting cord in the F-50090 dial. Inside wire replaces the cord on wall mountings.

3. STATION SIGNAL INDICATOR

3.01 Connections for audible and visual signals are shown in Fig. 2.



No rewiring of the station signal indicator is ever required. Restrictions on warning signals to be received at warning stations are controlled at the central office.

- 3.02 Provide a signaling ground wire between each station indicator and the connecting block, protector, cable terminal, or other grounding point (except as indicated in 3.04).
- 3.03 Tag signaling ground wire at the station signal indicator to give location of the ground connection.


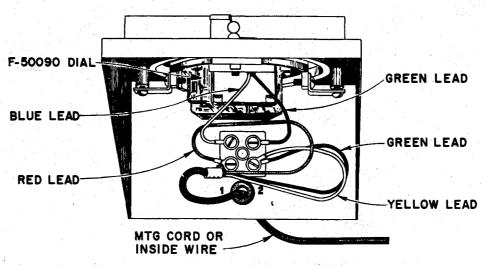


Fig. 1 — Terminating Mounting Cord

American Telephone and Telegraph Company, 1963 Printed in U.S.A.

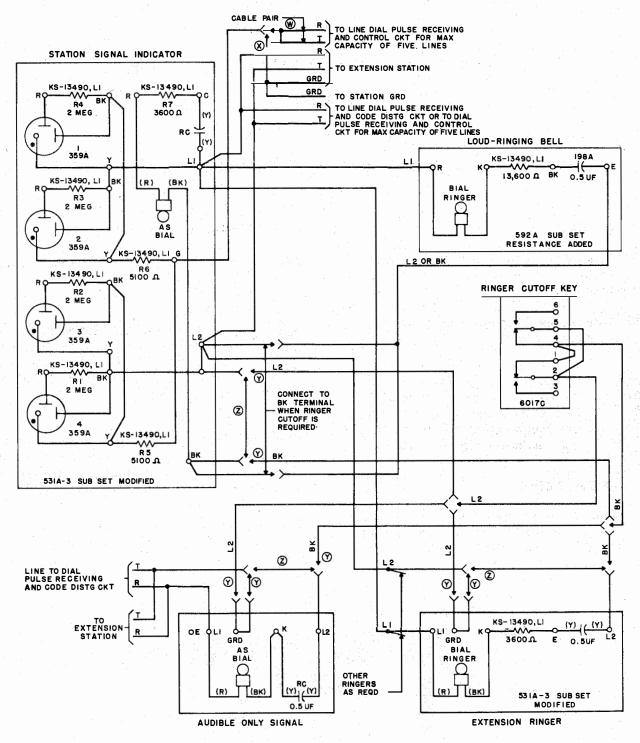

- W CENTRAL OFFICE CONTROL EQUIPMENT WITH A SINGLE--OR 5-LINE CAPACITY.
- X CENTRAL OFFICE CONTROL EQUIPMENT WITH 8- OR 50- TO 200-LINE CAPACITY.
- Y RINGER CUTOFF REQUIRED.
- Z RINGER CUTOFF NOT REQUIRED.

Fig. 2 — Civil Air Defense Warning System, Connections

- 3.04 Where the station signal indicator is controlled by a single-line or 5-line capacity unit at the central office, two cable pairs are assigned, one pair being used as a single conductor. In such cases, local signaling ground is not required.
- 4. PUBLIC SIGNAL CONTROL CIRCUIT (SIRENS)
- **4.01** The KS-16626,L6 power relay set connects to a line as shown in Fig. 3.

- **4.02** Do not use the KS-16626,L1 power relay set since false signals may result due to the breakdown of the capacitor used in this set.
- 4.03 At stations where the line is to be placed under continuous test, connect a KS-8512,
 L6A resistor equipped with No. 241 terminals across line (Fig. 3). Insulate exposed leads of the resistor with tape or tubular insulation.

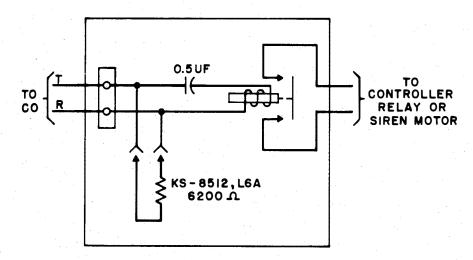


Fig. 3 - Modification of KS-16626, L6 Power Relay Set