

SUBSCRIBER SETS—400CD
MAGNETO
USED WITH HAND TELEPHONE SETS
CONNECTIONS

1.00 INTRODUCTION

This section covers the combination of apparatus, circuit diagrams, and connections for 400CD magneto subscriber sets used with hand telephone sets.

2.00 GENERAL

2.01 These sets may come equipped with either a 104A or 113D induction coil, but the coils are not interchangeable in the field. The corresponding terminals of the two coils are given below:

| | | | | | |
|-----------|-----|----|----|----|----|
| 104A — L1 | RBK | C | A | BL | SL |
| 113D — S | S1 | S2 | S3 | P | P |

2.02 Means are provided in the sets whereby any one of four different network connections, A to D, may be made in the induction coil balancing circuit to obtain a satisfactory sidetone balance when sets are used on the different types of subscriber loops employed in the plant.

2.03 Unless otherwise specified, sets are furnished with the type A network as shown in the circuit diagrams herein. To obtain other types of networks, changes in the connections of the set must be made as indicated below:

Sets Equipped with 104A Induction Coils

Network B: Disconnect capacitor leads from terminals A and BK. Terminate both leads on an unused terminal in the set. Connect a KS-8058, 400-ohm resistor between terminals A and BK (see Notes 1 and 3).

Network C: Disconnect capacitor lead from terminal A and connect to terminal C.

Network D: Disconnect capacitor leads from terminals A and BK. Terminate both leads on an unused terminal in the set. Disconnect one end of the strap from terminal C and connect it to terminal BK.

Sets Equipped with 113D Induction Coils

Network B: Disconnect strap between terminals A and BK. Terminate both ends of strap on terminal C. Connect a 63FD or KS-8058, 280-ohm resistor between terminals A and BK (see Notes 1, 2, and 3).

Network C: Disconnect strap between terminals A and BK. Terminate both ends of strap on terminal C. Connect a 449H, or equivalent, capacitor between terminals C and BK (see Note 3).

Network D: Disconnect end of strap from terminal A and connect it to terminal C.

Note 1: The KS-8058 resistor requires no mounting.

Note 2: The 63FD resistor mounts in the upper lefthand corner of the set, approximately $\frac{5}{8}$ inch from the top and $\frac{3}{4}$ inch from the side.

Note 3: Capacitors and resistors are not furnished as part of the set and must be ordered separately.

2.04 A 1-uf line capacitor is optional and has the following uses:

- When connected in series with the talking circuit only, as shown in Table B, the bells on the line can be rung with a receiver off hook.
- When connected in series with the ringer only (see Table C), the line may be tested on the same basis as common battery lines. This arrangement is also used in some special cases where there is battery on the magneto line and the switchboard drop operates whenever a receiver is removed from its hook.

Note 1: When used in series with a high-impedance ringer, the capacitor should be 0.5 uf (449H or equivalent).

Note 2: An HA1 receiver should not be used where there is battery on the line.

- When connected in series with both the talking circuit and the ringer, as shown in Table D, the bells at stations where a receiver is off hook can be rung and the line can be tested on the same basis as a common battery line. This arrangement cannot be used where switchhook supervision is employed as in the special case described in 2.04.

TABLE A
COMBINATION OF APPARATUS

| Sub. Set Code | Components | | | |
|---------------|---------------------|----------------------------|-------------------|-----------|
| | Induction Coil | Capacitor | Ringer | Generator |
| 400CD | 104A or 113D* | 149A, 449F, 1149B, or 449H | 66JA or B1E | 22A |

* Furnished only when specified.

TABLE B
CAPACITOR IN SERIES WITH TALKING CIRCUIT

| Wire or Lead | | Terminals | | |
|-------------------------------------|----|-----------------------|------------|-----------|
| | | Individual or Bridged | Ring Party | Tip Party |
| Capacitor Lead | Y | L1 | L1 | L1 |
| | Y | COND | COND | COND |
| Lead from L1 or S on Induction Coil | SL | COND | COND | COND |

TABLE C
CAPACITOR IN SERIES WITH RINGER

| Wire or Lead | | Terminals | | |
|----------------|----|-----------------------|------------|-----------|
| | | Individual or Bridged | Ring Party | Tip Party |
| Capacitor Lead | Y | COND | COND | COND |
| | Y | L2 | L2 | L1 |
| Ringer Lead | R | COND | COND | COND |
| | BK | L1 | GND | GND |

TABLE D
CAPACITOR IN SERIES WITH TALKING CIRCUIT AND RINGER

| Wire or Lead | | Terminals | | |
|-------------------------------------|----|-----------------------|------------|-----------|
| | | Individual or Bridged | Ring Party | Tip Party |
| Capacitor Lead | Y | COND | COND | COND |
| | Y | GN | GN | L1 |
| Ringer Lead | R | COND | COND | COND |
| | BK | L1 | GND | GND |
| Mounting Cord or Local Wiring | R | R | R | R |
| | Y | Y | Y | Y |
| | BK | BK | BK | BK |
| | GN | COND | COND | GN |
| Lead from L1 or S on Induction Coil | SL | L1 | L1 | COND |

3.00 CONNECTIONS

3.01 To connect the subscriber set to its associated hand telephone set, the appropriate circuit diagram herein should be matched with the fold-out page in the section covering the connections for the hand telephone set.

3.02 Connections in table form are also given for each type of subscriber set connection. Table F covers the connections for the subscriber set when used with hand telephone sets.

3.03 The 400CD subscriber set may be used in combination with any hand telephone set of the types listed in Table E.

TABLE E

ASSOCIATED APPARATUS

| Desk Type | Hangup Type |
|--------------|----------------------|
| 202H 215A | 201A 211E 213E |

TABLE F

CONNECTIONS

| Wire or Lead | | Terminals | | |
|------------------------------------|------|-----------------------|------------|-----------|
| | | Individual or Bridged | Ring Party | Tip Party |
| Inside Wire from Protector or Line | Ring | L2 | L2 | L2 |
| | Tip | L1 | L1 | L1 |
| | GND | GND | GND | GND |
| Ringer Lead | R | L2 | L2 | L1 |
| | BK | L1 | GND | GND |
| Magneto Type | R | L2 | L2 | L2 |
| | BK | L1 | L1 | L1 |
| Mounting Cord or Local Wire | R | R | R | R |
| | Y | Y | Y | Y |
| | BK | BK | BK | BR |
| | GN | GN | GN | GN |

Note: Extension stations without ringer shall be connected in the same way as the associated main station except that both leads from the ringer shall be connected to GND terminal.

3.04 Circuit diagram of 400CD subscriber set when used with hand telephone set:

INSIDE WIRE
FROM PROTECTOR
OR LINE

RINGING CIRCUIT

TALKING CIRCUIT

MTG CORD OR
LOCAL WIRING

