

EQUIPMENT TEST LIST
ANNOUNCEMENT TRUNKS
NO. 4A AND 4M TOLL SWITCHING SYSTEMS

	CONTENTS	PAGE
1.	GENERAL	1
10.1	4A	2
10.2	4M	2

1. GENERAL

1.01 This section provides an index and information access system to locate the standard tests applicable to equipment listed in the preceding table of contents. Test classification and frequency of periodic routine are also provided.

1.02 This Equipment Test List (ETL) is reissued to incorporate changes which are indicated by an arrow to the left of each line which has been changed.

1.03 Comments on this section should be made by following the instructions in Bell System Practices (BSP), Section 000-010-015.

1.04 Routine test information is arranged in the following order from left to right: Section number, issue/addendum, test letter or paragraph number, test title, test class, frequency, and the last space is for a locally assigned job number.

1.05 Section 010-300-011 provides Equipment Test List instructions.

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

10.0 ANNOUNCEMENT TRK

10.1 ANNOUNCEMENT TRK; 4A

FOR ALL UNITS

212-528-501	(8/0)	A	ANCMT CONN TRK-REORDER TONE	MW 12M	-----
		B	ANCMT CONN TRK-NO CIRCUIT TONE	MW 12M	-----
		C	ANCMT CONN TRK-TEST BUSY	MW 12M	-----
		D	ANCMT CONN TRK-ANNOUNCEMENT	MW 12M	-----
		E	ANCMT CONN TRK-ALM & HELD-BUSY INDICATION	MW 12M	-----
		F	ANCMT CONN TRK-LINE BUSY TONE	MW *	-----
212-528-502	(1/0)	A	CKT BUSY ANCMT TRK-GROUP BUSY FEATURE	MW 12M	-----
		B	NC LAMP & SWBD OVERFLOW IND FEATURE	MW 12M	-----
		C	DIRECTIONAL RESERVATION CKT- OPR TST(WITHOUT THRESHOLD SWITCH)	MW 12M	-----
		D	DIR RSV CKT-USING TST FEAT. WITHIN CKT (WITHOUT THRESHOLD SWITCH)	MW 12M	-----
		E	DIR RSV CKT-OPR TST (WITH THRESHOLD SWITCH)	MW 12M	-----
		F	DIR RSV CKT USING TEST FEATURE (WITH R&N OPTION AND THRESHOLD SWITCH)	MW *	-----
		G	DIR RSV CKT--USING TST FEATURE (WITH THRESHOLD SWITCH)	MW 12M	-----

10.2 ANNOUNCEMENT TRK; 4M

FOR ALL UNITS

212-528-501	(8/0)	A	ANCMT CONN TRK-REORDER TONE	MW *	-----
		B	ANCMT CONN TRK-NO CIRCUIT TONE	MW *	-----
		C	ANCMT CONN TRK-TEST BUSY	MW *	-----
		D	ANCMT CONN TRK-ANNOUNCEMENT	MW *	-----
		E	ANCMT CONN TRK-ALM & HELD-BUSY INDICATION	MW *	-----
		F	ANCMT CONN TRK-LINE BUSY TONE	MW *	-----
212-528-502	(1/0)	A	CKT BUSY ANCMT TRK-GROUP BUSY FEATURE	MW *	-----
		B	NC LAMP & SWBD OVERFLOW IND FEATURE	MW *	-----
		C	DIRECTIONAL RESERVATION CKT- OPR TST(WITHOUT THRESHOLD SWITCH)	MW *	-----
		D	DIR RSV CKT-USING TST FEAT WITHIN CKT(WITHOUT THRESHOLD SWITCH)	MW *	-----
		E	DIR RSV CKT-OPR TST (WITH THRESHOLD SWITCH)	MW *	-----
		F	DIR RSV CKT USING TEST FEATURE (WITH R&N OPTION AND THRESHOLD SWITCH)	MW *	-----
		G	DIR RSV CKT--USING TST FEATURE (WITH THRESHOLD SWITCH)	MW *	-----