


TELEPHONE SETS

701D

CONNECTIONS

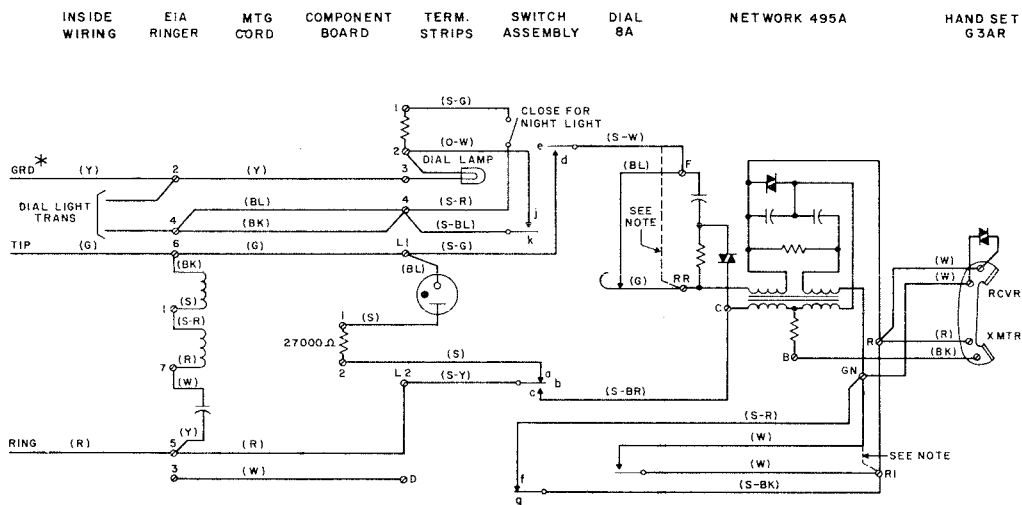

Note: For manual service, remove lead from Terminal F and connect to RR and remove white dial lead from Terminal GN and connect to R1.

* Ground may be omitted; not required for protection of dial-light transformer.

Fig. 1 — Connections for 701D Telephone Set

TABLE A
LINE AND RINGER CONNECTIONS

WIRE OR LEAD			Individual or Bridged	WIRE OR LEAD			INDIVIDUAL OR BRIDGED
Line at Ringer	Ring	R	5	Mounting Cord at Ringer	Y		2
	Tip	G	6		BL		4
	Grd	Y	2		W		3
Ringer		R	7		BK		4
		S-R	1	Mounting Cord at Set	R		L2
		BK	6		G		L1
		S	1		Y		3
Capacitor in Ringer		W	7		BL		4
		Y	5		W		D
Transformer Leads at Ringer		1	2		BK		4
		2	4	Message-Waiting Lamp Leads	S		1†
Mounting Cord at Ringer		R	5		BL		L1
		G	6				