

MAINTENANCE TOOLS

Bulletin 540

AUTOMATIC ELECTRIC

Subsidiary of

GENERAL TELEPHONE & ELECTRONICS





Factory, development laboratories, and general office at Northlake, Illinois, U.S.A.

AUTOMATIC ELECTRIC COMPANY is an organization of designing, engineering, and manufacturing specialists in the fields of communication, electrical control, and allied arts. For more than sixty years the company has been known throughout the world as the originator and parent manufacturer of the Strowger Automatic Telephone System. Today Strowger-type equipment serves over 75% of the world's automatic telephones. The same experience and technique that have grown out of the work of Automatic Electric engineers in the field of telephone communication are also being successfully applied on an ever-increasing scale to the solution of electrical control problems in business and industry.

PRINCIPAL PRODUCTS

Strowger Automatic Telephone Systems—Complete automatic central-office equipment for exchange areas of any size, from small towns to the largest metropolitan networks.

Community Automatic Exchanges—Unattended automatic units for small rural or suburban areas, with facilities for switching into attended exchanges.

Automatic Toll Boards—An adaptation of Strowger principles to toll switching, resulting in simplification of operators' equipment and greater economy of operating and toll-circuit time.

Private Automatic Exchanges—Available in various capacities, with or without central-office

connections, and with facilities for special control services to meet the needs of the user.

P.B.X. Switchboards—A complete range of cordless and cord types for the modern business.

Telephone Instruments—Modern designs for automatic or manual exchanges, including the Monophone—the world's most attractive and efficient handset telephone.

Exchange Accessory Equipment—Auxiliary exchange and substation equipment, including manual desks, testing apparatus, transmission equipment, and all accessories needed for the operation and maintenance of the modern telephone exchange.

Makers also of electrical control apparatus for industrial, engineering, and public utility companies, telephone apparatus for railroads and pipe-line companies, private telephone systems of all types, electrical and communication devices for aircraft and airways control, and special communication apparatus for military and naval departments.

FOREWORD

This bulletin is an up-to-date listing, with descriptions and functions, of the principal tools most useful in the maintenance of central-office equipment and telephones manufactured by Automatic Electric Company.

In addition to tools such as screwdrivers, pliers, and soldering irons, the listing includes a wide variety of special tools and gauges which serve particular purposes in the maintenance of specific items of apparatus, as well as such devices as resistance boxes, test sets, and the like. So far as practicable, the various tool illustrations are grouped in classifications according to use.

The tool descriptions show, in addition to the illustrations, the name of the tool, its code number, and the use to which it is put. Included also is supplementary information such as precautions to be taken and dimensions which affect tool use.

All tools listed are indexed alphabetically in the front of the bulletin and numerically in the back. Distributing-frame test plugs and cord assemblies have not been listed numerically but have been collected and put in tabular form.

In some cases, two or more tools may be listed under the same name. An example is the "Adjuster, Vertical Armature" having code numbers H-7056, H-13398, and H-13700. Unless otherwise identified, it is suggested that the tool with the highest code number be ordered. This tool is ordinarily associated with the latest type of equipment. The lower-numbered tools may be better suited for older types of equipment or may be preferred by service personnel.

Customers in the United States or possessions may obtain any of the tools listed through the Automatic Electric Sales Corporation, Northlake, Illinois, U.S.A. Orders from customers abroad should be placed with Automatic Electric International, Inc., at the same address.

CONTENTS

Alphabetic Index

<u>NAME</u>	<u>PAGE</u>
A	
Adjuster, Armature	H-7056 1
Adjuster, Armature	H-14768 1
Adjuster, Armature	H-56518 1
Adjuster, Armature	H-88502-1 1
Adjuster, Armature	H-88503-1 7
Adjuster, Armature Stop	H-46410 1
Adjuster, Armature Stop	H-14769 2
Adjuster, Backstop and Armature Arm	H-884149-1 8
Adjuster, Bank Contact	H-7068-3 2
Adjuster, Cam	H-47202 2
Adjuster, Detent	H-46413 2
Adjuster, Double Dog	H-7067 2
Adjuster, Frame	H-13701 2
Adjuster, Paystation	P-60481-1 3
Adjuster, Plunger Arm	H-10001-3 3
Adjuster, Pole Pieces	H-883595-1 7
Adjuster, Rotary Pawl	H-23413-1 3
Adjuster, Spring	H-7059 3
Adjuster, Spring	H-7066 3
Adjuster, Spring	H-16978-1 3
Adjuster, Spring	H-20179-1 3
Adjuster, Spring	H-20777 4
Adjuster, Spring	H-24600 4
Adjuster, Spring	H-42873 4
Adjuster, Spring	H-44359 4
Adjuster, Spring	H-45590 4
Adjuster, Spring	H-46411 4
Adjuster, Spring	H-46716-1 4
Adjuster, Spring	H-46974-1 5
Adjuster, Spring	H-46975-1 5
Adjuster, Spring	H-64670 5
Adjuster, Spring	H-64980 5
Adjuster, Spring	H-88385 5
Adjuster, Spring	H-88390 5
Adjuster, Spring	H-88504-1 and 2 6
Adjuster, Spring	H-881602-1 and 2 6
Adjuster, Spring	H-881603-1 6
Adjuster, Spring	H-881859-1 6
Adjuster, Spring	H-883998-1 7
Adjuster, Spring	H-883999-1 7
Adjuster, Spring	H-884000-1 8
Adjuster, Spring	H-884148-1 8
Adjuster, Spring	H-46412 8
Adjuster, Spring Holder	H-881384-1 6
Adjuster, Stepping Tool	H-13398-1 6
Adjuster, Vertical Armature	H-13700 7

CONTENTS - Cont'd.

Alphabetic Index

<u>NAME</u>		<u>PAGE</u>
B		
Bender (See Adjuster)		
Box, Harmonic Ringer	D-40059-A to G	8
Box, Resistance	H-25314-1	8
Box, Steel Blueprint	H-46557	8
Box, Steel Tool	H-46556	9
Bracket, Test Telephone	D-731450-A and B	8
Brush, Bank Cleaning	H-88844-1 and 2	9
Burnisher, Contact	H-883699-1	9
C		
Cable Stripper	H-884210-1	10
Certi-Lok Insertion Tool	H-883584-1	17
Cleaning, Tool	H-47386-1	10
Cleaning, Tool	H-56628-4	11
Cleaning Tool, Bank	H-16590-1 and 2	11
Cleaning Tools	H-56628-1 and 2	10
Clip, Busy	D-15455-A	10
Clip, Plug Cushion Placing	H-883348-1	11
Cord Assembly, Ground	D-542407-A	11
Cord Test	H-74573-1 and 2	10
D		
Dial Escutcheon Tool	H-26917	12
Distributing Frame, Test Plugs and Cord Assemblies		35
E		
Extractor, Heat Coil	H-44514-1	13
Extractor, Lamp	H-882568-2	13
Extractor, Lamp Cap	H-883114-1	13
Extractor, Multi-jack	H-881425-1	13
F		
Fuse, Dummy	D-57043-A	14
Fuse, Repair Kit	H-14315-1	14

CONTENTS - Cont'd.

Alphabetic Index

<u>NAME</u>		<u>PAGE</u>
G		
Gauge Block, Lineswitch Plunger	H-7541-3	15
Gauge, Jack Sleeve	H-88409	15
Gauge, Manual Board Plug	MP-5127-A	15
Gauges, Paystation	P-60481-4	15
Gauge, Push-pull Tension		16
Gauge, Push-pull Tension		16
Gauge, Push-pull Tension	H-881513-1	16
Gauge, Thickness	H-46795-1 and 50	16
Gauge, Thickness	H-883596-1	16
Gauge, Gram	H-882816-1 and 2	15
Gauge, Gram	H-882816-3 and 4	15

H

Handle, Remover	H-881419-1	16
---------------------------	----------------------	----

I

Impulse (deprecated, pulse used throughout)

L

Lamp, Inspection	H-880922-1	17
Lamp Visual Face Tool	MP-4425-A	17
Lineswitch Mounting Tool	H-24528	17

M

Monophone Tool	H-50754	17
Monophone Tool	H-43172	17

P

Pliers, Duck Bill	H-50620	18
Pliers, Duck Bill	H-74611	18
Pliers, Duck Bill 30°	H-88436 (P-60481-3)	18
Pliers, Jack Spring	H-880621-1	18

CONTENTS - Cont'd.

Alphabetic Index

<u>NAME</u>	<u>PAGE</u>
Pliers, Insulation Skinning	H-883312-1 19
Pliers, Long Nose	H-50619 19
Pliers, Oblique Cutting	H-22945 19
Pliers, Paystation	H-883377-1 19
Pliers, Spring Adjusting (Dial Pliers)	H-16290-7 18
Pliers, Wiper	H-881674-1 20
Pliers, Wiper Spring	H-881637-1 19
Product-Tool-Usage Guide	 36

S

Scraper, Wire	H-25906-1 21
Screwdriver	H-24664 22
Screwdriver	H-45963-1 and 2 22
Screwdriver	H-880622-1 22
Screwdriver	H-883858-1 23
Screwdriver, Guide Pin	H-883182 22
Screwdriver, Off-set	H-21766 22
Screwdriver, Key Type	H-883794-1 22
Screwdriver, Key Type	H-883882 22
Screwdriver, Right Angle Ratchet	H-47754-1 22
Sleeve, Plug	D-18175-A 21
Sleeving, Cleaning Tool	D-542539-A 21
Soldering Iron, Electric	H-883614-1 and 2 20
Spacer, Insulating	D-440197-A and B 21
Spacer, Insulating	D-44757-A 21
Support, Switch	H-26221-1 21
Switch Tester, Type 26 (Portable)	H-883635-1 24

T

Test, Hand Telephone	L-965 29
Test, Lamp	H-16339-1 and 5 27
Test Plug	D-57048-A 2 Pt. 28
Test Plug	D-57030-A 4 Pt. 28
Test Plug	D-57037-A 6 Pt. 28
Test Plug	D-57038-A 8 Pt. 28
Test Plugs and Cord Assemblies, Distributing Frame	 35
Test Set, Buzzer	H-23355-1, 2, 3 and 4 25
Test Set, Current Flow	H-882790-1 (Model S) 24
Test Set, Dialing and Talking	H-880859-1 23
Test Set, Linefinder	H-881444-1 and 2 25
Test Set, Portable	H-880132-1 and 14 28
Test Set, Pulsing (Varying Machine)	H-882240-1 25
Test Set, Rotary	H-881174-1 23
Test Set, Toll Selector "C" Relay	H-880623-3 25
Test Set, Trunk Circuit	H-881192-1 24
Test Set, Wire Chief's	H-882803-1 27

CONTENTS - Cont'd.

Alphabetic Index

<u>NAME</u>	<u>PAGE</u>
Test Stand, Double Width Switch Base	H-880263-1 26
Test Stand, Strowger Switch	H-881346-1 26
Test Stand, Strowger Switch	H-881346-3 26
Test Stand, Strowger Switch	H-881346-2 26
Test Stand, Universal Strowger Switch	H-881346-4 27
Tester, Lineswitch	H-7443-5, 6, 7, 10, 12 and 13 27
Tool, Bending	H-882979-1 29
Tool, Tension Adjusting	H-883857-1 29

V

Vertical Magnet Armature Adjuster	H-7056 1
Vertical Magnet Armature Adjuster	H-13398-1 6
Vertical Magnet Armature Adjuster	H-13700 7

 
W

Webbing (See Sleeving)	
Wiper, Assembly Tool	H-50829-1 34
Wrench, Armature Bending	H-883847-1 34
Wrench, Cam Nut Socket	H-16480 32
Wrench, Dial	H-25937 33
Wrench, End	H-23865 33
Wrench, Hexagon Socket	H-7058-1 31
Wrench, Hexagon Socket	H-10053-1 31
Wrench, Hexagon Socket	H-10772 32
Wrench, Hexagon Socket	H-11841-1 30
Wrench, Hexagon Socket	H-13748-1 30
Wrench, Hexagon Socket	H-46440-1 30
Wrench, Hexagon Socket	H-883772-1 34
Wrench, Jack Fastener	M-6656-1 and 2 30
Wrench, Jack Thimble	MP-1221-A 32
Wrench, Monophone Spanner	H-43173-1 31
Wrench, Open End	H-880771-1 33
Wrench, Open End	H-880772-1 33
Wrench, Open End	H-880773-1 32
Wrench, Open End	H-880672-1 33
Wrench, Paystation	P-60481-2 33
Wrench, "S"	H-7062 32
Wrench, "S"	H-7063 33
Wrench, "S"	H-20309 33
Wrench, "S"	H-50448 32
Wrench, "S" Hexagon	H-10774 30
Wrench, "S" Hexagon	H-20703 32
Wrench, Slotted Nut	H-7065-1 31
Wrench, Socket Key	H-883793-1, 2 and 3 3
Wrench, Spintite	H-46437-1 32
Wrench, Square Socket	H-7061-1 31
Wrench, Wiper	H-7057 34

MAINTENANCE TOOLS

ADJUSTER, ARMATURE

H-7056

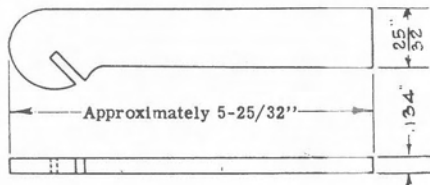


1/8" slot

For use on Strowger switch rotary armature

ADJUSTER, ARMATURE

 H-56518

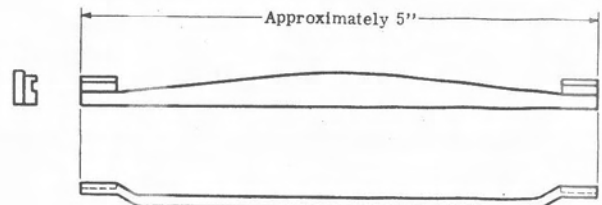

.114" saw slot in each end

 
For use on Type 10 alternating current relay

ADJUSTER, ARMATURE


H-88502-1

ADJUSTER, ARMATURE

H-14768

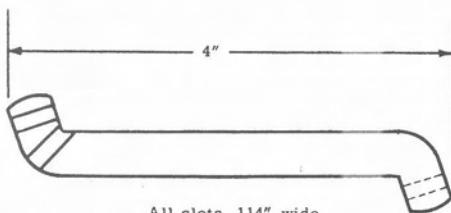


All slots .114" wide

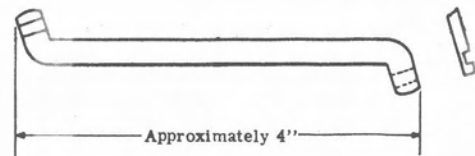 

.115" width of slot in each end

 For use on Type 57AL relay

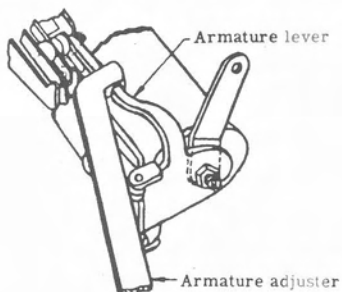


ADJUSTING THE ARMATURE LEVER

For use on horizontal (Class A) relays

ADJUSTER, ARMATURE STOP

 H-46410

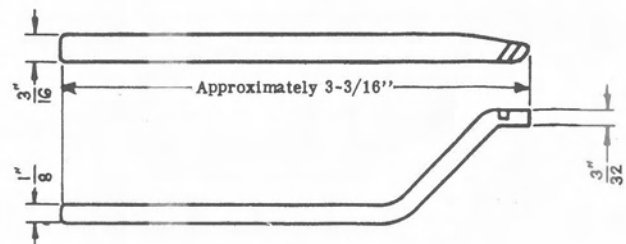

.055" slot

For use on 8 and 2 position mechanical indicators on Power Supervisor's Board



BULLETIN 540

ADJUSTER, ARMATURE STOP

H-14769


ADJUSTER, DETENT

  H-46413

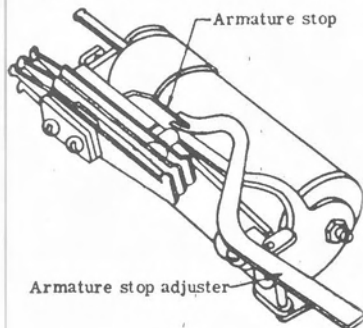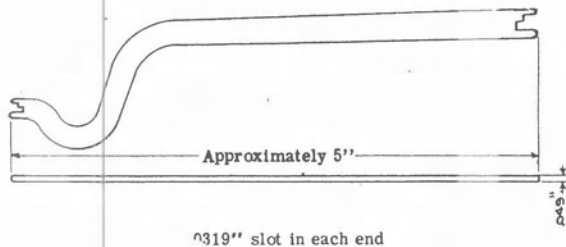

ADJUSTMENT OF ARMATURE BACKSTOP

 For use on horizontal (Class A) relays

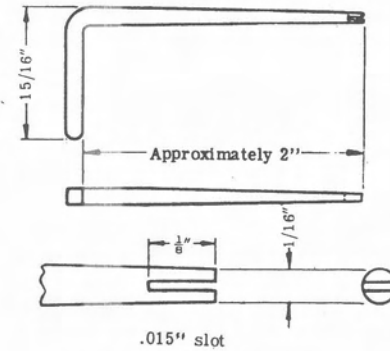


ENLARGED VIEW

For use on 8 position mechanical indicators in Power Supervisor's Board, paystation springs and dial governor wings

ADJUSTER, DOUBLE DOG

 
H-7067

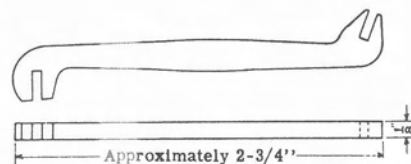


3/32'' slot in each end

ADJUSTER, BANK CONTACT

 H-7068-3

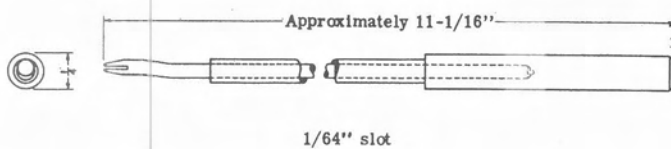

 For use on plunger lineswitch bank contacts

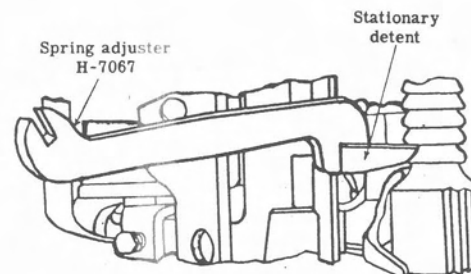

ADJUSTING STATIONARY DETENT

 
For use on Strowger switch double dog

ADJUSTER, CAM


H-47202

ADJUSTER, FRAME

H-13701

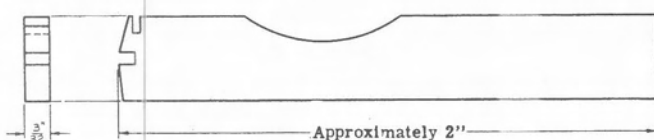

Both slots .028'' min. and .030'' max.

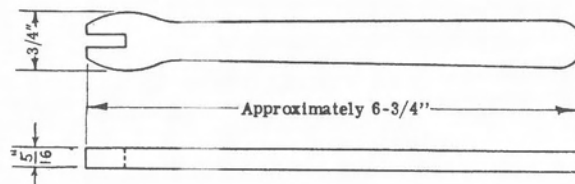 

1/8'' slot

For use on Strowger switch multi-level normal post cam

For use on plunger lineswitch bank frame

 
MAINTENANCE TOOLS

ADJUSTER, PAYSTATION

P-60481-1

ADJUSTER, SPRING

H-7066

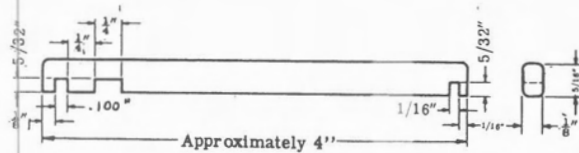


DETAIL NO. 1

For use in adjusting polar relay of pre-pay and post-pay paystations (adjusting upper housing lock bracket)

ADJUSTER, PLUNGER ARM

 
H-10001-3

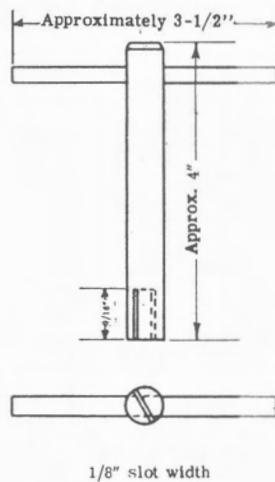

For use on plunger lineswitch

ADJUSTER, ROTARY PAWL

 
H-23413-1

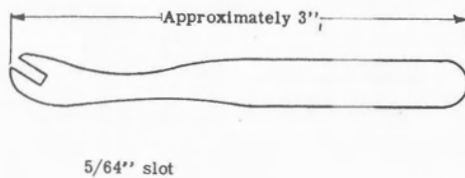



For use on Strowger switch rotary pawl

ADJUSTER, SPRING

 H-7059

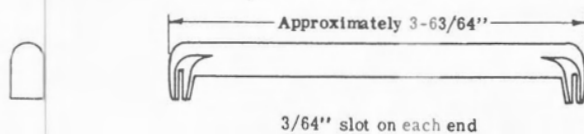

  
For use on Monophone hook switch springs

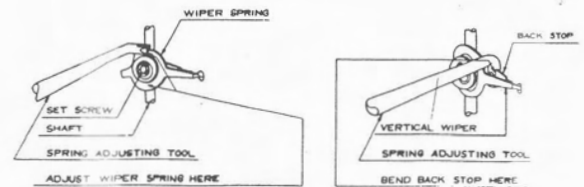

For use on plunger lineswitch, horizontal (Class A) relay, cam and off-normal springs, vertical wiper spring and backstop.

ADJUSTER, SPRING

 
H-16978-1

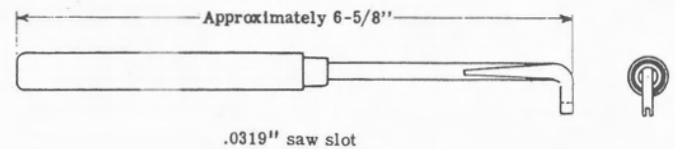

For use on rotary lineswitch relay

ADJUSTER, SPRING

 H-20179-1

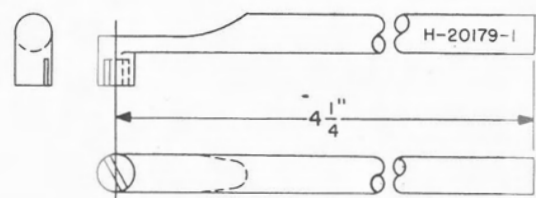

For use on rotary lineswitch.



BULLETIN 540

ADJUSTER, SPRING

H-20777

ADJUSTER, SPRING

  H-44359

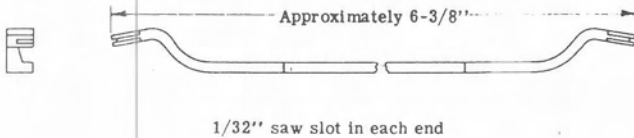


ADJUSTING SPRINGS TO MEET GAUGING REQUIREMENTS

For use on horizontal (Class A) type relays

ADJUSTER, SPRING


 
H-24600

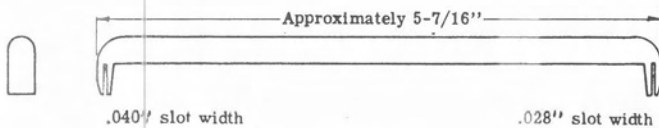

For use on horizontal (Class A) relay springs


ADJUSTER, SPRING

  H-42873

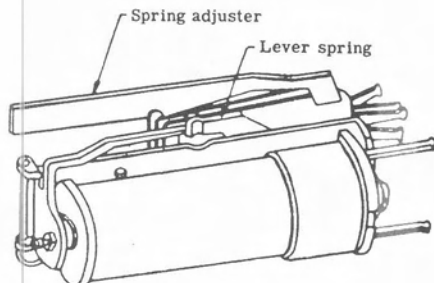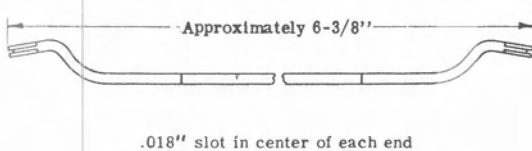

ADJUSTING LEVER SPRINGS FOR TENSION

 
For use on horizontal (Class A) relays

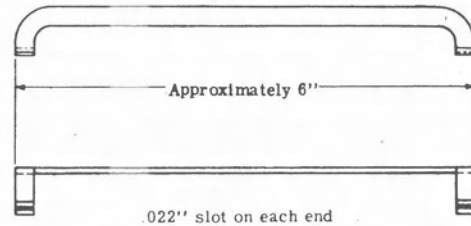

For use on Type 27 manual relay

ADJUSTER, SPRING

 
H-45590

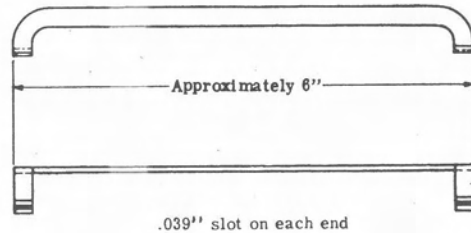

For use on Type 27 manual relay

ADJUSTER, SPRING

 
H-46411

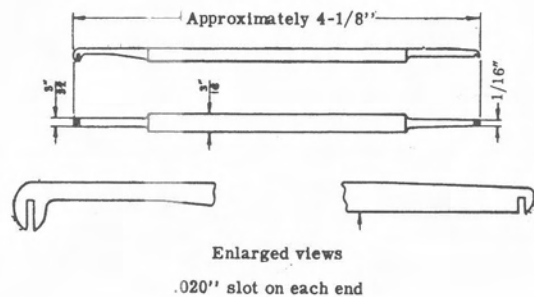

For use on 8 and 2 position mechanical indicator on Power Supervisor's Board

ADJUSTER, SPRING

 H-46716-1

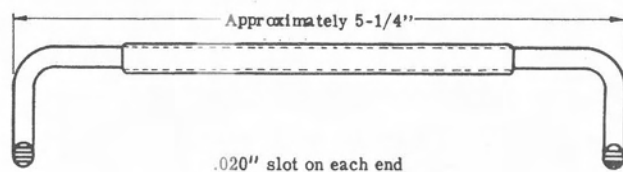


For use on plunger lineswitch line relay springs

MAINTENANCE TOOLS

ADJUSTER, SPRING

 
H-46974-1

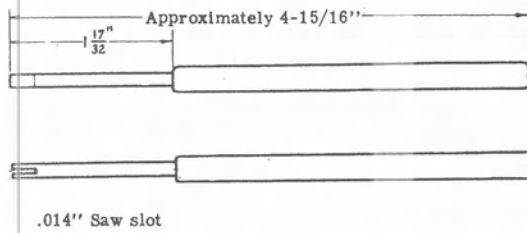

For use on class "S" relay

ADJUSTER, SPRING


 
H-46975-1

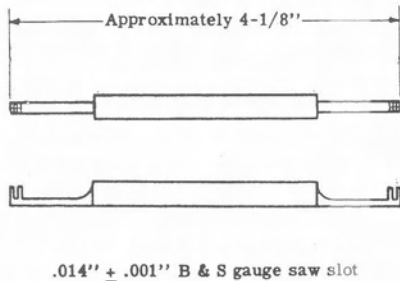

For use on class "S" relay

ADJUSTER, SPRING

  H-64670

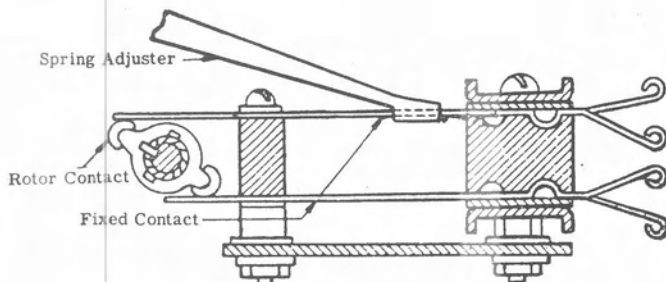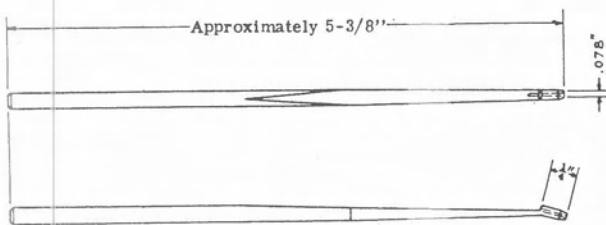


METHOD OF USING ROTOR RELAY CONTACT
SPRING ADJUSTER

For use on rotor relay contact springs

ADJUSTER, SPRING

 
H-64980

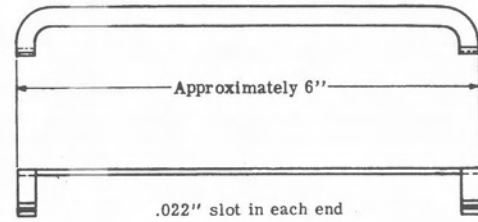

For use on minor type relays

ADJUSTER, SPRING

 
H-88385

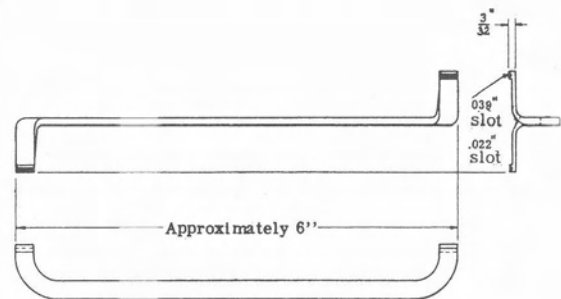

For use on Type 27 manual relay

ADJUSTER, SPRING

 H-88390

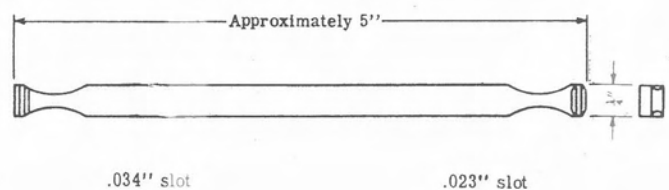


For use on Type 26 lever keys

BULLETIN 540

ADJUSTER, SPRING

 H-88504-1
and 2

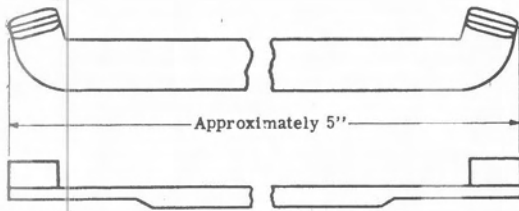


H-88504-1 (.034" slot in each end)
H-88504-2 (.018" slot in each end)

For use on Type 57 relays

ADJUSTER, SPRING

 
H-881859-1

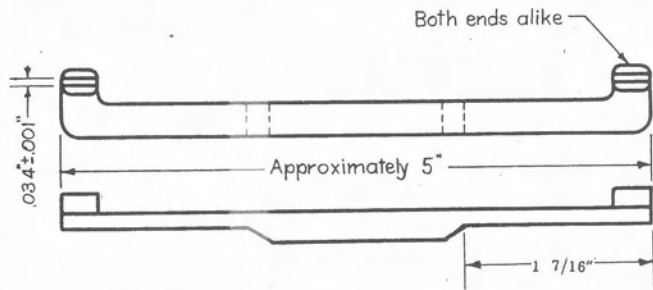

For use on Type 57A relay

ADJUSTER, SPRING

 
H-881602-1&2

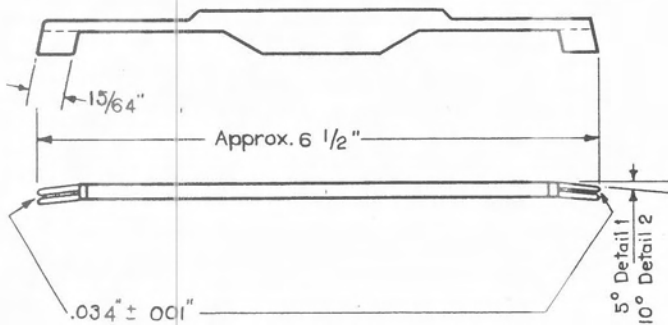

For use with Type 57-A relays. Special back to back mounted relays.

ADJUSTER, SPRING HOLDER

 
H-46412

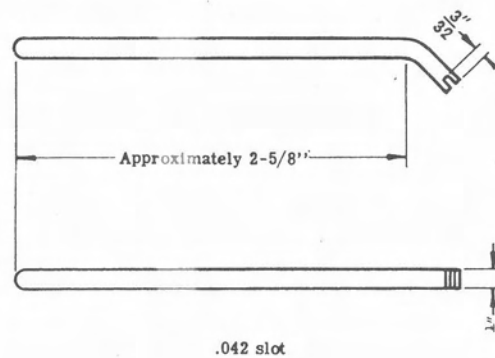

For use on 8 and 2 position mechanical indicators on Power Supervisor's Board

ADJUSTER, SPRING

 
H-881603-1

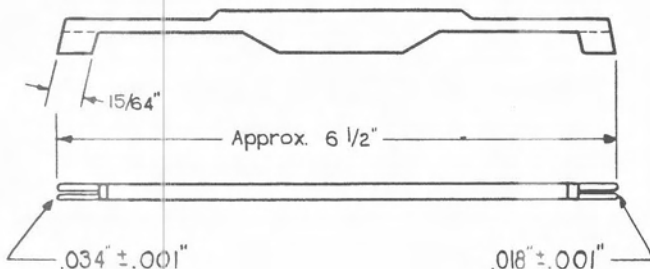

For use with Type 57-A relays

ADJUSTER, VERTICAL ARMATURE

 H-13398-1

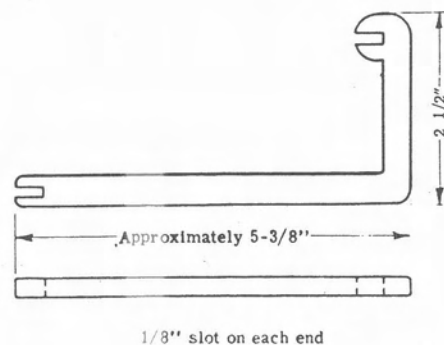


For use on Strowger switch vertical armature

MAINTENANCE TOOLS

ADJUSTER, VERTICAL ARMATURE

 H-13700

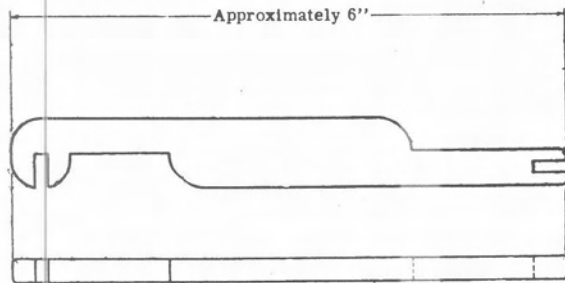


1/8" slot on each end

For use on Strowger switch vertical and rotary armature

ADJUSTER, STEPPING TOOL

 
H-881384-1

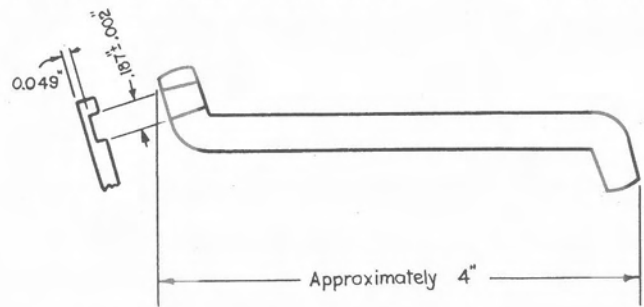

For use with type 44 rotary switch

ADJUSTER, ARMATURE

 
H-88503-1

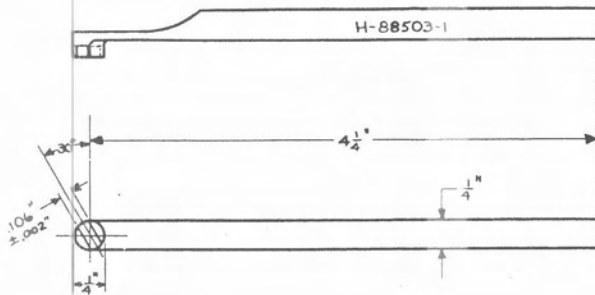

For use on Type 57-A relay

ADJUSTER, SPRING

 
H-883998-1

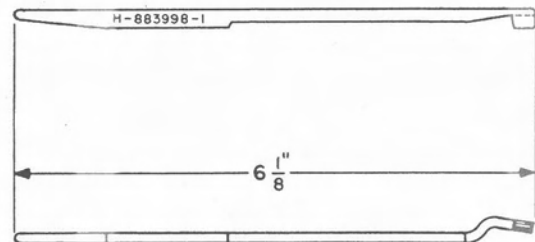

For use on BarRelay (Type 59 Detector).

ADJUSTER, POLE PIECES

 
H-883595-1

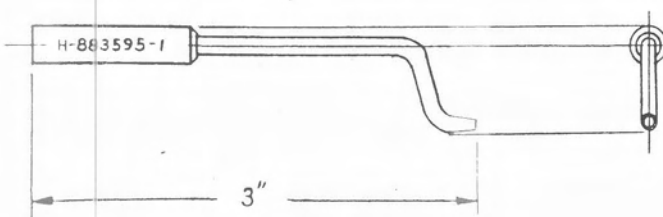

For use on polarized relay

ADJUSTER, SPRING

 H-883999-1

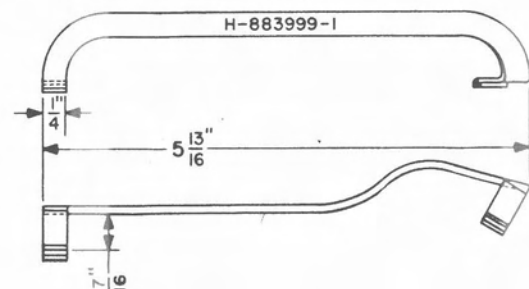

For use on BarRelay (Type 59 Detector).


BULLETIN 540

ADJUSTER, SPRING


H-884000-1

BOX, RESISTANCE

 H-25314-1

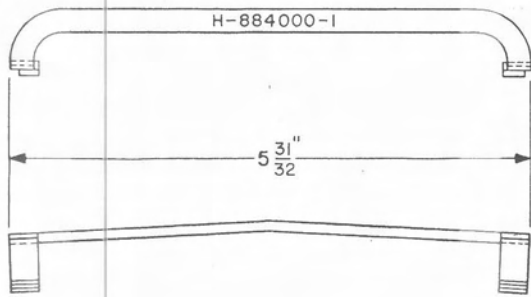


For use on BarRelay (Type 59 Detector).

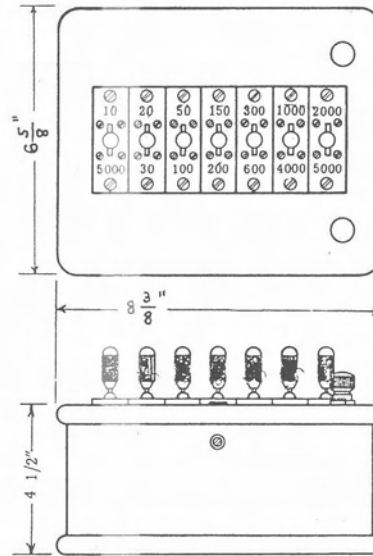 

ADJUSTER, SPRING

H-884148-1

 For use in mechanical adjustments of switches and relays

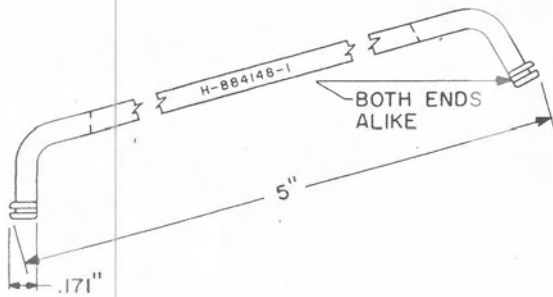


For Class E relay.

BOX, HARMONIC RINGER

D-40059-A
B,C,D,E,F,G

 Approximately 1'-7 3/4" high x 7 1/2" wide x 5 1/4" deep

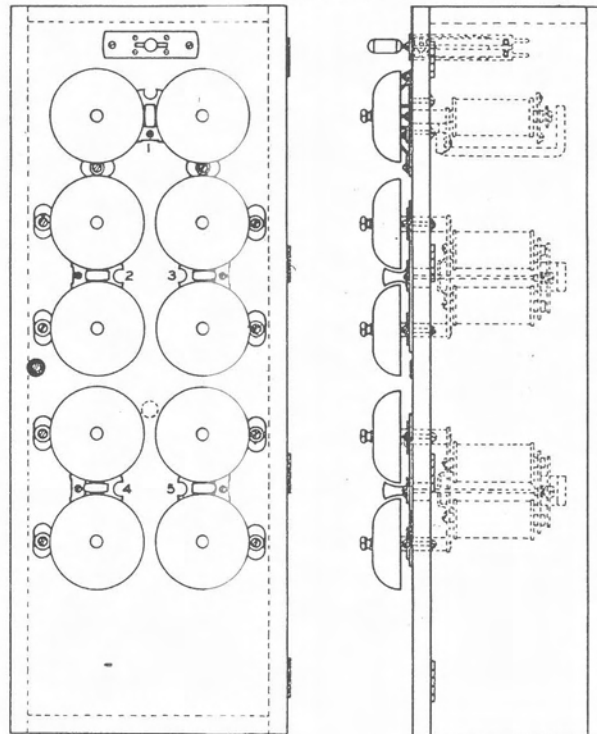


A (Multiple Ring)
B (Non-Multiple Ring)
C (Non-Multiple Ring-No induction Coil)
D (Multiple Ring-No Induction Coil)

E (Multiple Ring-No Key)
F (Non-Multiple ring-No Key)
G (Decimonic Ring)

For use with connector routine test sets

ADJUSTER, BACKSTOP and
ARMATURE ARM

 H-884149-1

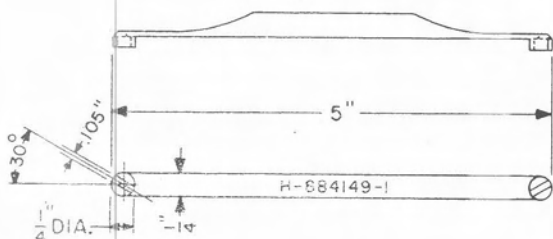


For Class E relay.

MAINTENANCE TOOLS

BOX, STEEL TOOL

 
H-46556

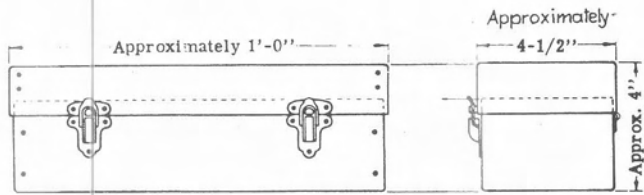

For general use

BURNISHER, CONTACT

 
H-883699-1

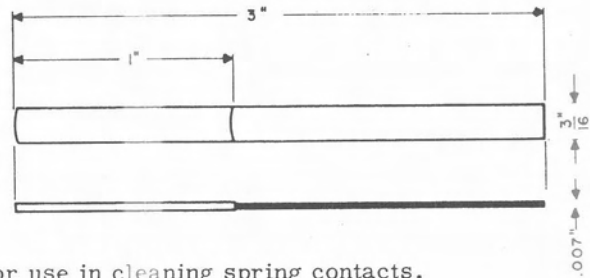

For use in cleaning spring contacts.

BOX, STEEL, BLUEPRINT

 
H-46557

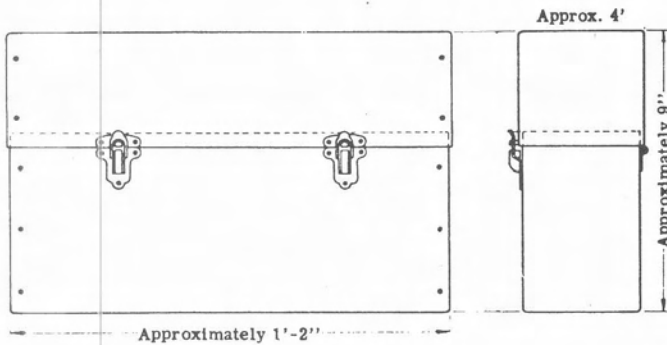

For use in holding maintenance prints

BRUSH, BANK CLEANING

 
H-88844-1
and 2

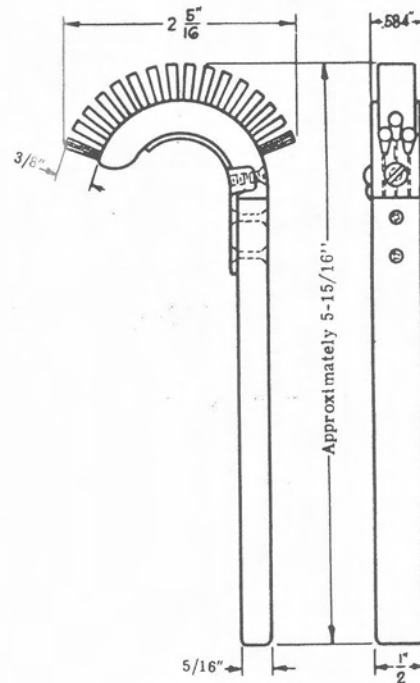

ASSEM. 1

BRACKET, TEST TELEPHONE

 
D-731450-A&B

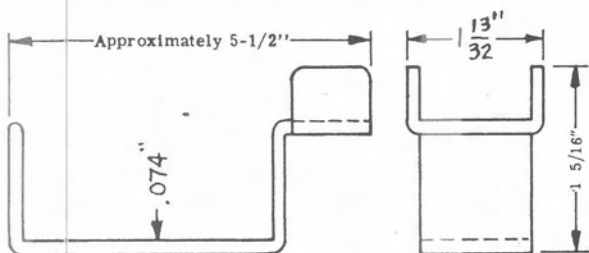

A-Gray baking enamel

B-Light gray equipment enamel

 For use with hand test telephone

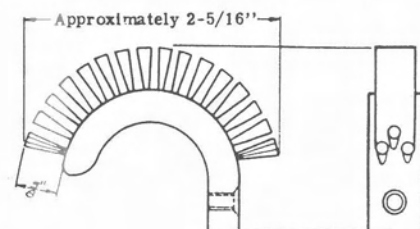


ASSEM. 2

For use in cleaning Strowger switch banks

BULLETIN 540


CABLE STRIPPER

 H-884210-1

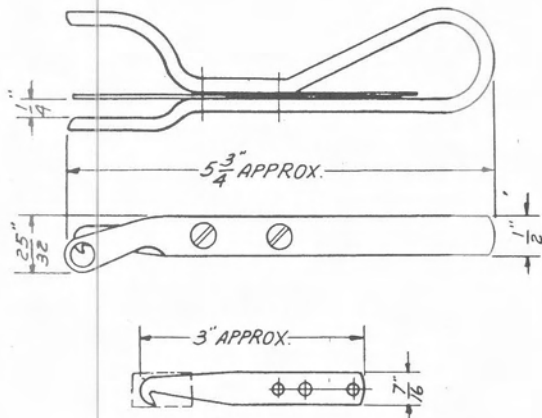

CLEANING TOOL

 
H-47386-1

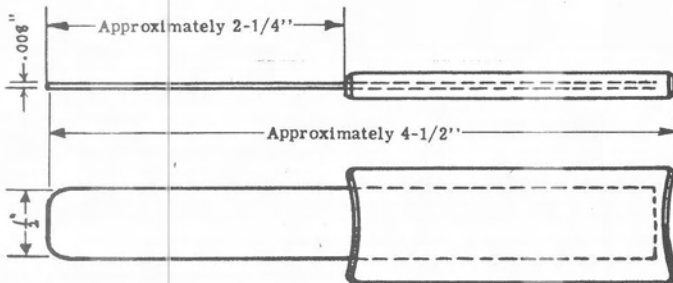

For use on rotary switch wiper spring hubs and banks

CLIP, BUSY

 
D-15455-A

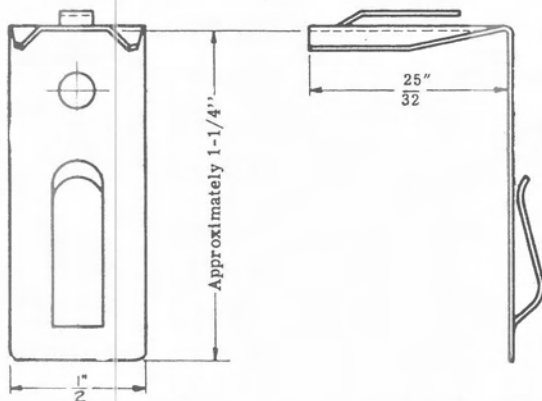


For use in busying equipment not equipped with busy key

CLEANING TOOLS

 H-56628-1
and 2

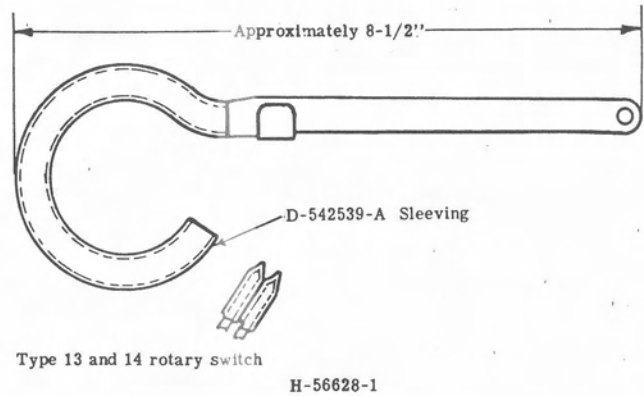

H-56628-1

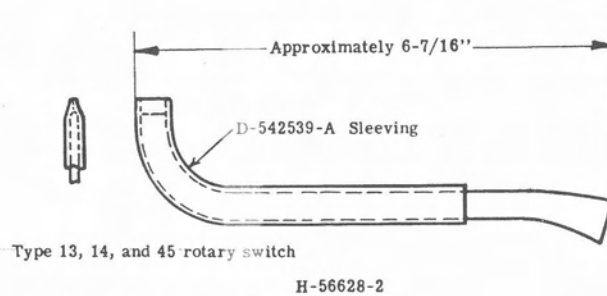 


H-56628-2

For use on rotary lineswitch banks

CORD, TEST

 H-74573-1
and 2



ASSEM. 1



ASSEM. 2

For use with current flow test set H-88733-1

 
MAINTENANCE TOOLS

CLEANING TOOL, BANK

H-16590-1
and 2



CLIP, PLUG CUSHION PLACING

H-883348-1

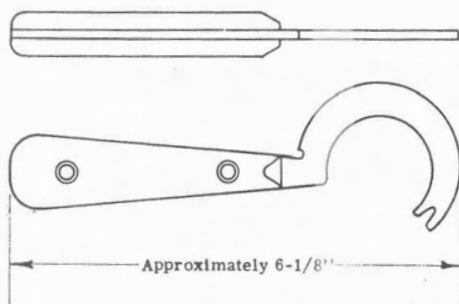

DRAWING H-16590-1 200 point .042" thick
DRAWING H-16590-2 100 point .072" thick

  
For use on Strowger switch banks

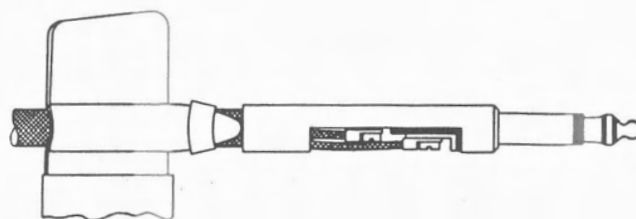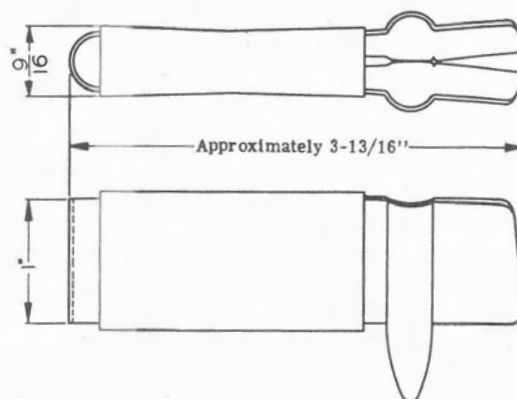

CORD ASSEMBLY, GROUND

D-542407-A

 
For use in putting plug cushion over plug and on cord

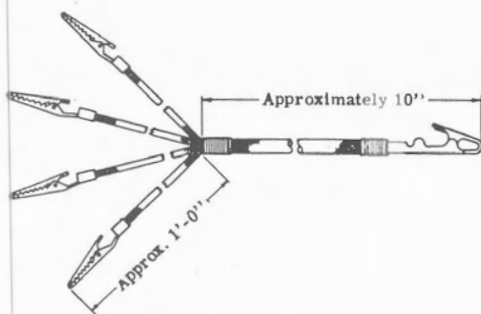

For use in busying out of order lines

CLEANING TOOL

 H-56628-4


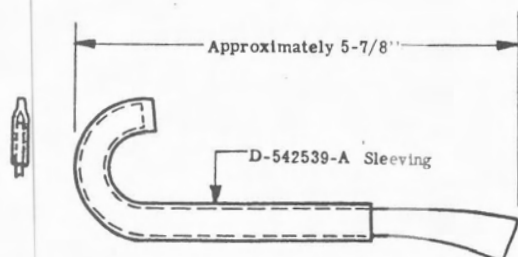


For use on Type 44 rotary switch banks

BULLETIN 540

DIAL ESCUTCHEON TOOL

  
H-26917

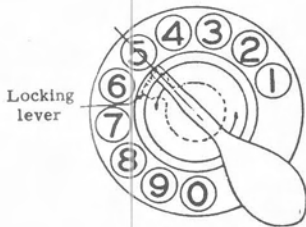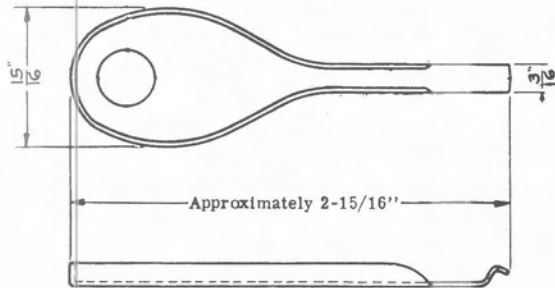

TO UNLOCK ESCUTCHEON RING



 ESCUTCHEON RING UNLOCKED

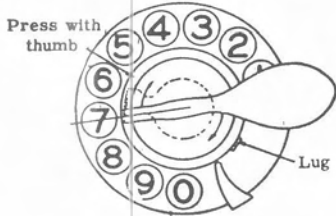

TO LOCK ESCUTCHEON RING



 
ESCUTCHEON RING LOCKED

For use in removing dial escutcheon

MAINTENANCE TOOLS

EXTRACTOR, LAMP


H-882568-2

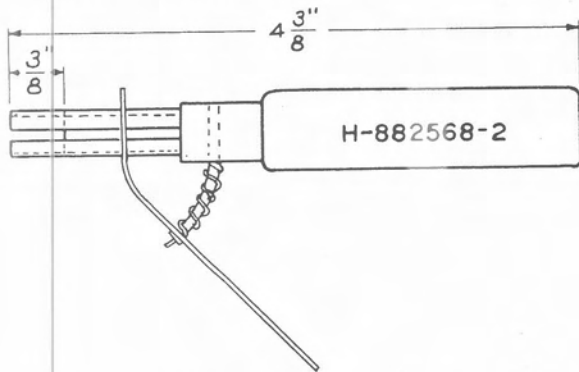

For use in removing switchboard lamps


EXTRACTOR, MULTI-JACK

 H-881425-1

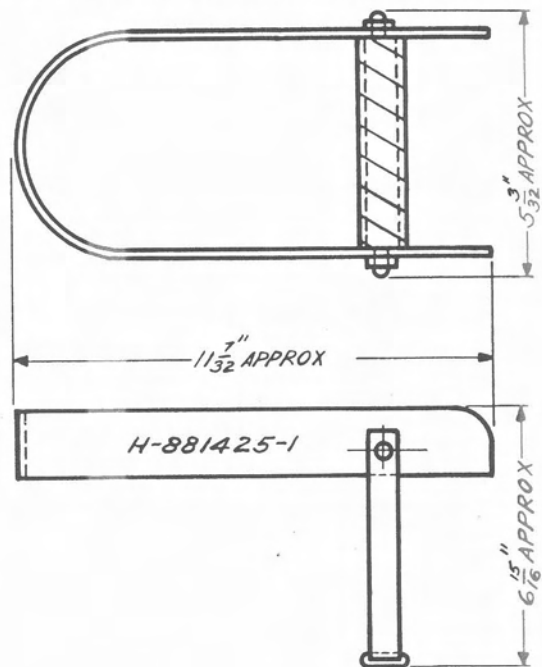

EXTRACTOR, HEAT COIL

 
H-44514-1

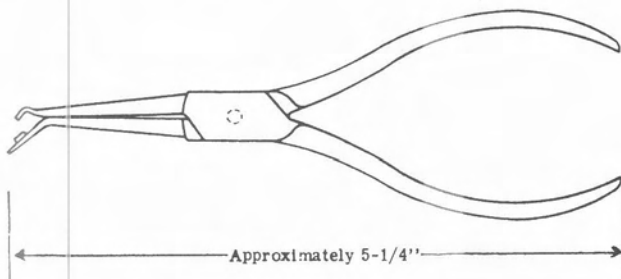

For use in removing Automatic Electric Company Type 676 heat coils

EXTRACTOR, LAMP CAP

 H-883114-1

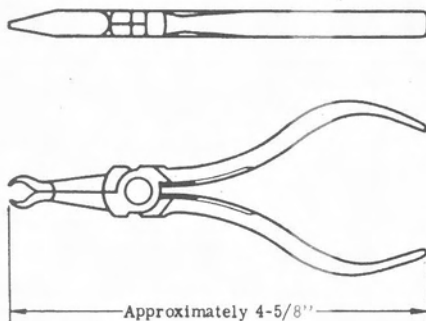


For use in extracting lamp caps, number plates and W. E. Co. heat coils

BULLETIN 540

FUSE, DUMMY

 D-57043-A

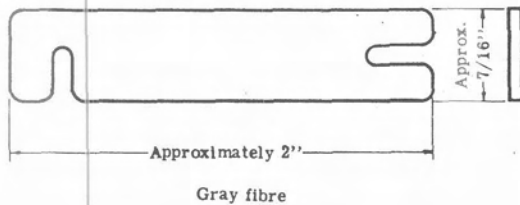

For use in vacant alarm type fuse locations

FUSE REPAIR KIT

H-14315-1

Flux Automatic Electric Company Specification 2003

Fuse wire Automatic Electric Company Specification 5129
(1-1/3, 3 and 5 amperes)

Solder Automatic Electric Company Specification 2001

Consisting of fuse wire, solder, soldering flux and sandpaper

For use with indicating and alarm fuses

 
MAINTENANCE TOOLS

GAUGES, PAYSTATION

P-60481-4


GAUGE, JACK SLEEVE

H-88409

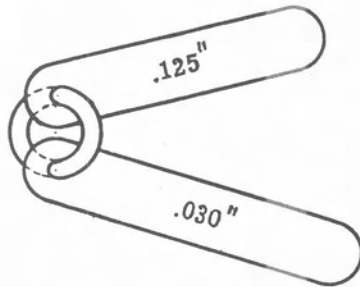

DETAIL NO. 4

 
For use in adjusting polar relay of pre-pay and post-pay paystations (thickness, feeler gauges)

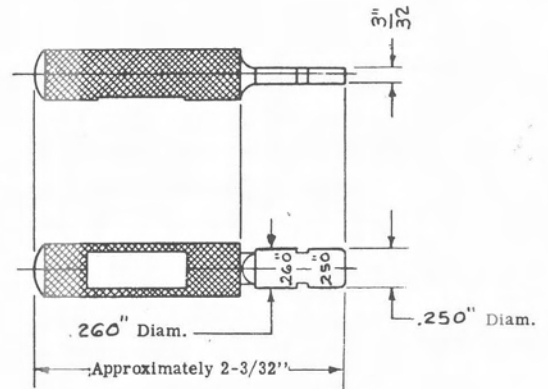

For use on manual switchboard jacks

GAUGE BLOCK, LINE SWITCH
PLUNGER

 
H-7541-3

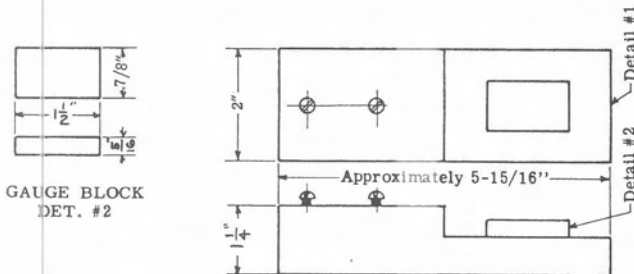

For use in adjusting plunger of plunger lineswitch

GAUGE

 H-882816-1
and 2

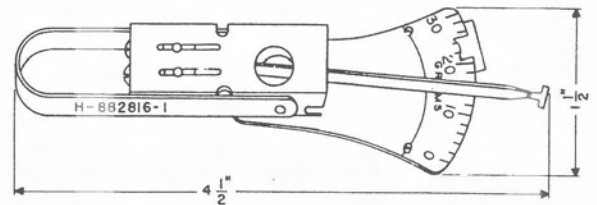


0-30 Grams (H-882816-1)
0-150 Grams (H-882816-2)

For general use

GAUGE, MANUAL BOARD PLUG

 MP-5127-A

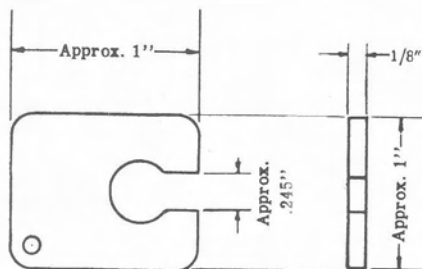


Opening .2455\" max., .2445\" min.

For use in checking worn plugs

GAUGE

 H-882816-3
and 4

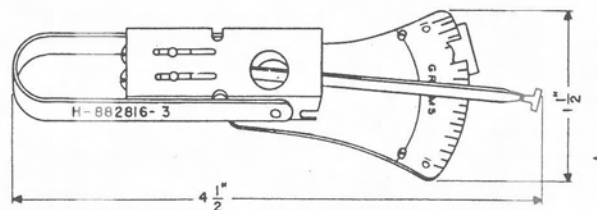


10-0-10 Grams (H-882816-3)
50-0-50 Grams (H-882816-4)

For use in adjusting SATT (Strowger Automatic Toll Ticketing) dial springs

BULLETIN 540

GAUGE, PUSH-PULL TENSION

 H-884369-2




0-1000 Grams

For general use

GAUGE, PUSH-PULL TENSION

 H-881513-1

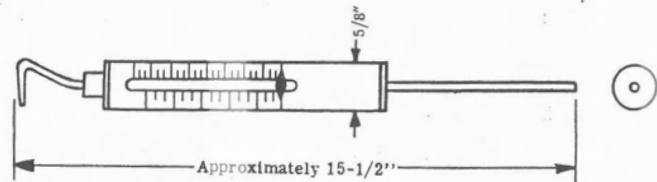


0-500 Grams (Accurate 75 to 500)
0-16 Ounces

For general maintenance use and measuring tension on retractile, "double dog" and interrupter springs on Strowger and other types of switches.
(An inexpensive gauge for use in the horizontal position only)

*GPP-5 Small Sub
E.M.F.*

GAUGE, PUSH-PULL TENSION

 H-884369-1




0-200 Grams

For general use

\$100.00


HANDLE REMOVER

 H-881419-1

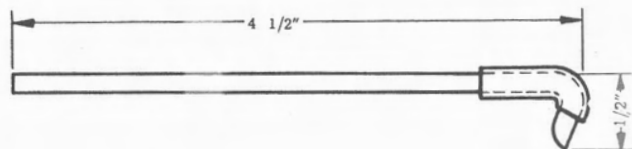

GAUGES, THICKNESS

 H-46795-1 and 50

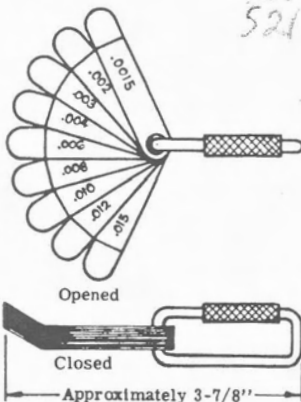

Assem. 1

ASSEM. 1


.0015 "
.002 "
.003 "
.004 "
.006 "
.008 "
.010 "
.012 "
.015 "

ASSEM. 50
(* Gauge width tapered)
.002 " .011 "
.003 " .012 "
.004 " *.012 "
.005 " .013 "
.006 " .014 "
.007 " .015 "
.008 " .016 "
.009 " *.016 "
.010 " .017 "
*.010 " .018 "

For general use

GAUGE, THICKNESS

 H-883596-1

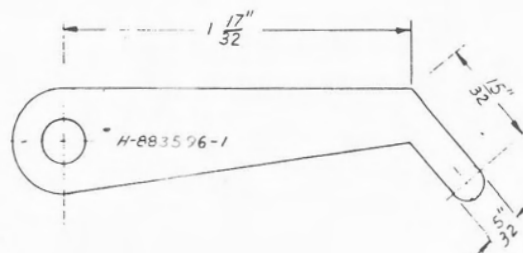

For checking residual gap on polar relay

 
LAMP VISUAL FACE TOOL

MAINTENANCE TOOLS


MP-4425-A

CERTI-LOK INSERTION TOOL

H-6

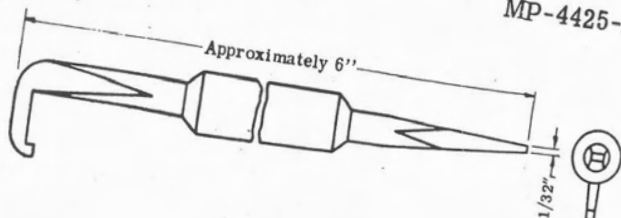

 For use in removing designation strip and lamp caps from manual switch boards

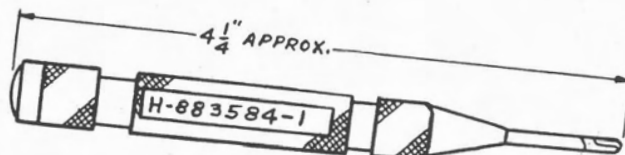


For use with the detector access unit and the "D.U." field

LAMP, INSPECTION


H-880922-1

MONOPHONE TOOL

 H-50754

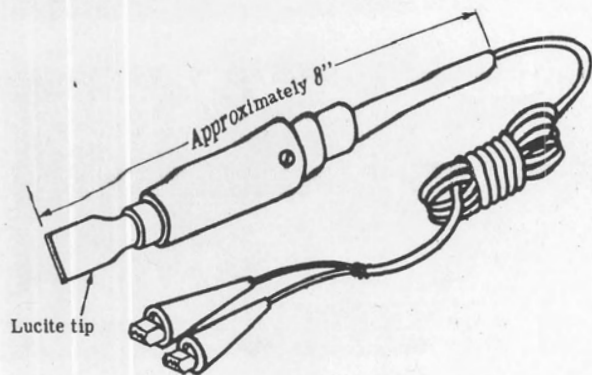

 For use in visual inspection and gauging of relay contacts

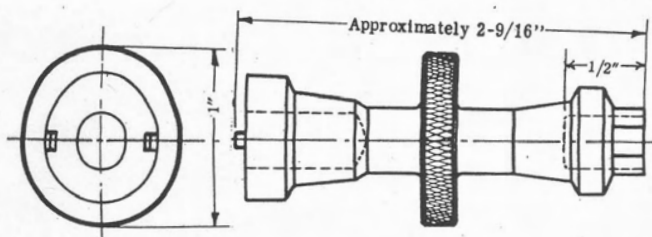


For use on Types 1A, 31, 35A5 and 50 Monophones and Type 38 handset as a receiver earpiece wrench, a spanner wrench and with hookswitches having a collapsible (telescoping) plunger. For solid plunger use H-43172-1.

LINESWITCH MOUNTING TOOL


H-24528

MONOPHONE TOOL

 H-43172

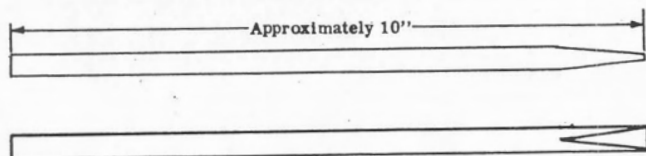

 For use in aligning plunger lineswitches

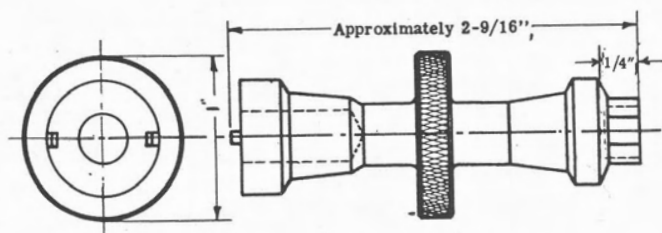

For use on Types 1A, 31, 35A5 and 50 Monophones and Type 38 handset as a receiver earpiece wrench, a spanner wrench and with hookswitches having a solid plunger. For collapsible (telescoping) plunger use H-50754-1.


BULLETIN 540

PLIERS, DUCK BILL


H-50620

PLIERS, JACK SPRING

 H-880621-1

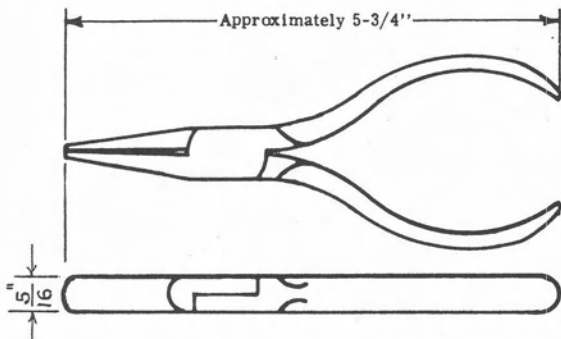

For general use

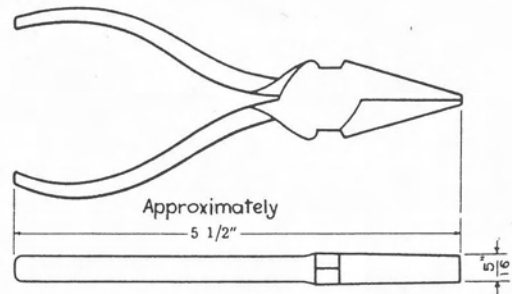 


ASSEM. 1

For use in adjusting jack springs

PLIERS, DUCK BILL

 
H-74611

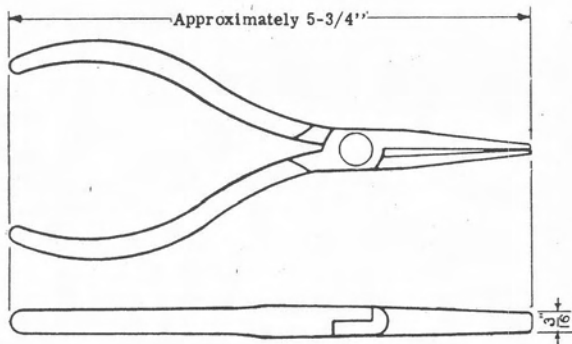

For general use in adjusting springs on relays, switches, etc.


PLIERS, SPRING ADJUSTING
(DIAL PLIERS)

 H-16290-7

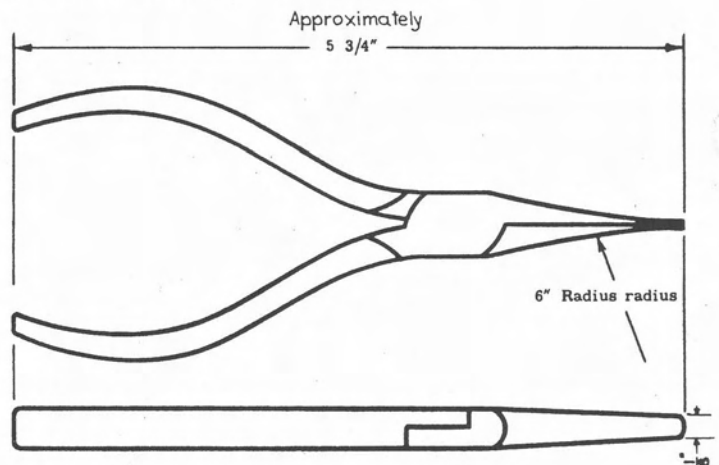


PLIERS, 30° DUCK BILL

 H-88436
P-60481-3

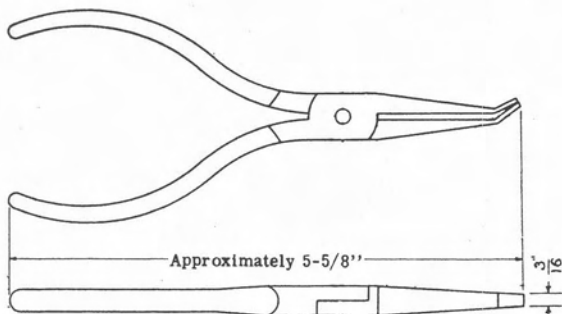

 For use with rotary cam springs and general spring adjustment. Also for use in adjusting polar relay of pre-pay and post-pay paystations (spring adjusting)

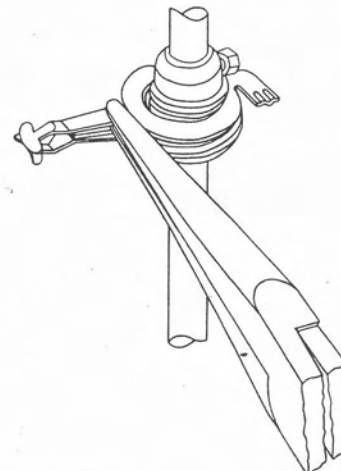

For use in adjusting tension on dial governor, pulse and shunt springs, Strowger switch wipers, and tensioning master-switch governor springs.

 
MAINTENANCE TOOLS

PLIERS, LONG NOSE


H-50619

PLIERS, OBLIQUE CUTTING

H-22945

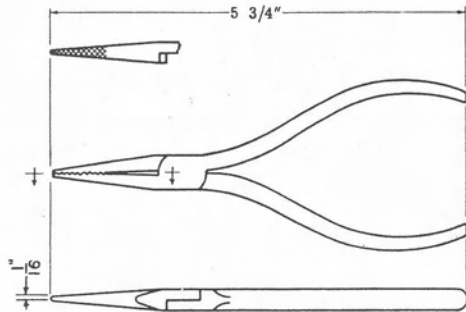


For general use

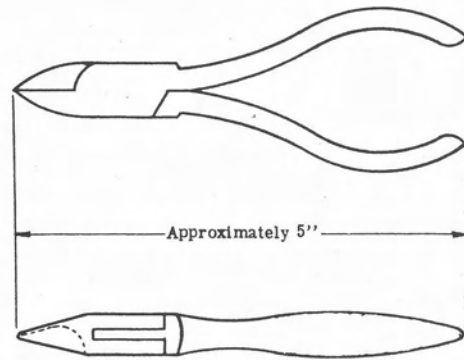 


For general use

PLIERS, WIPER SPRING AND STROWGER SWITCH

 H-881637-1

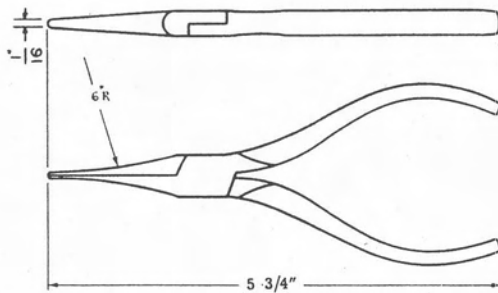


For general use

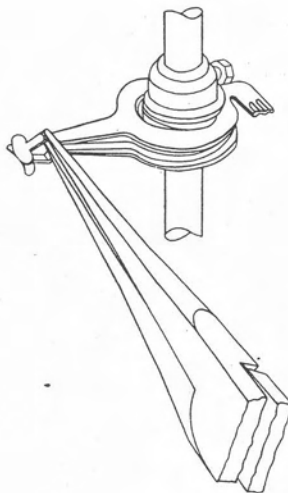 

PLIERS, PAYSTATION

 H-883377-1

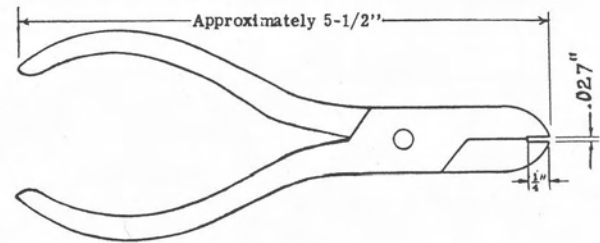


DETAIL NO. 5

For use in adjusting polar relay of pre-pay and post-pay paystations (crimping)

PLIERS, INSULATION SKINNING

 
H-883312-1

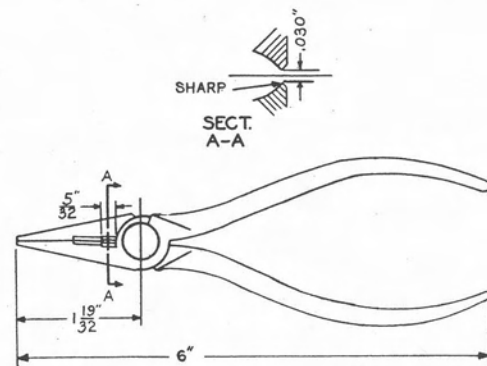

For use on P.V.C. (22 A.W.G.) wire

PLIERS, WIPER


 
H-881674-1

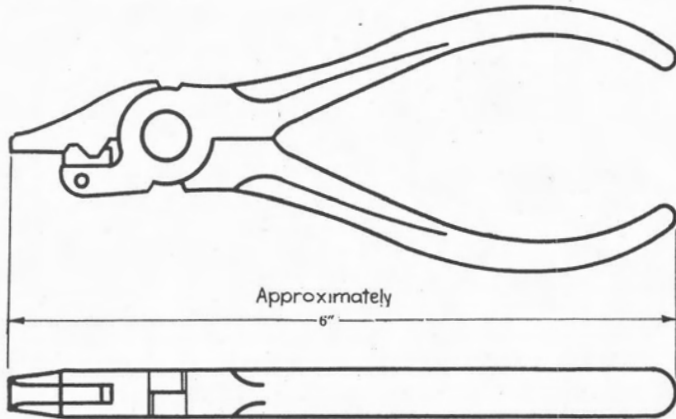


For use in readjustment of Strowger switch wipers and reforming wiper tips that may be accidentally damaged

SOLDERING IRON, ELECTRIC

  
H-883614-1
and 2

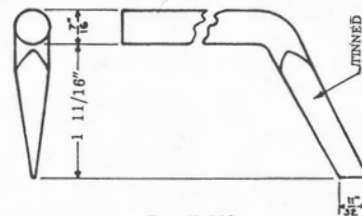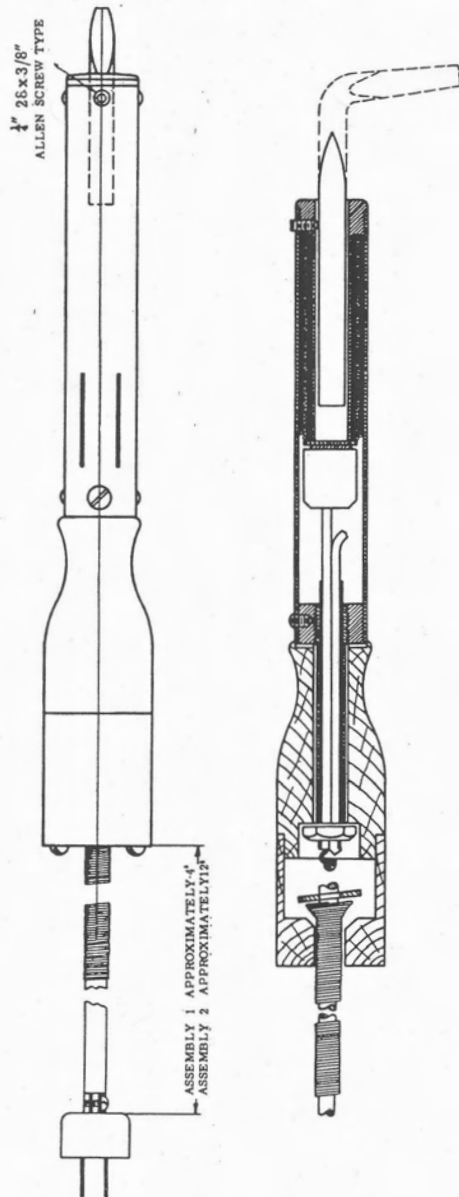


Detail #13

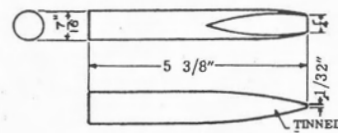 

Detail #14

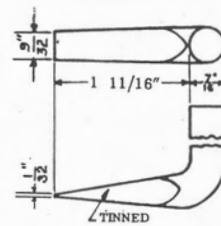 

Detail #15

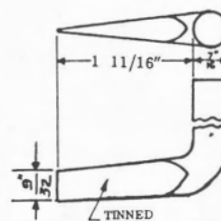 

Detail #16

For general use

 
MAINTENANCE TOOLS

SCRAPER, WIRE


H-25906-1

SLEEVE, PLUG

D-18175-A

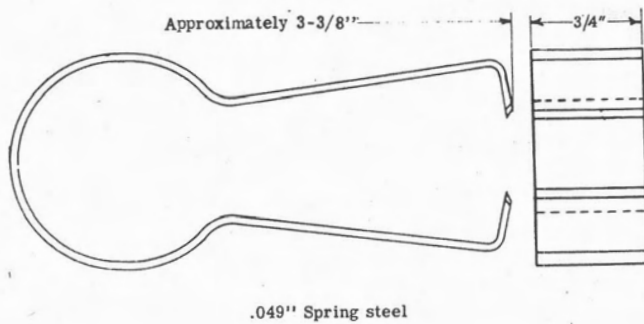


For general use

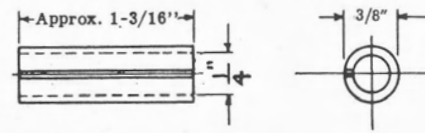 

For use on plug sleeve (out of order plugs)

SPACER, INSULATING

 D-440197-A
and B

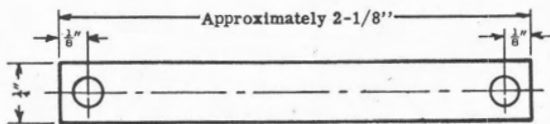


D-440197-A 1/16" thick
D-440197-B 3/32" thick

Red fibre

For use in blocking out lines on line and cut-off relays

SLEEVING, CLEANING TOOL

 D-542539-A

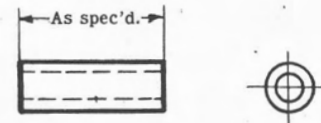


D-542539-A Packed Dry (Order per foot)
H-880842-1 (90 ft. can with bottle of oil)
H-881496-1 (90 ft.) abrasive webbing

See Bulletin No. 506 "Care of
Strowger Switch Bank Contacts"
for other materials and instructions

For use with 100 and 200 point bank cleaning tools
H-16590-2 and 1 respectively.

SPACER, INSULATING

 D-44757-A

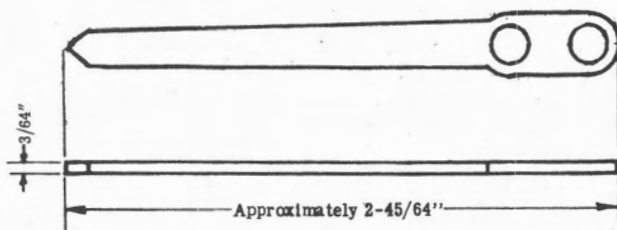


Gray fibre

For use in separating springs on B.C.O. (bridge
cut-off) relay, to insulate protector springs and to hold
relay springs operated.

SUPPORT, SWITCH

 H-26221-1

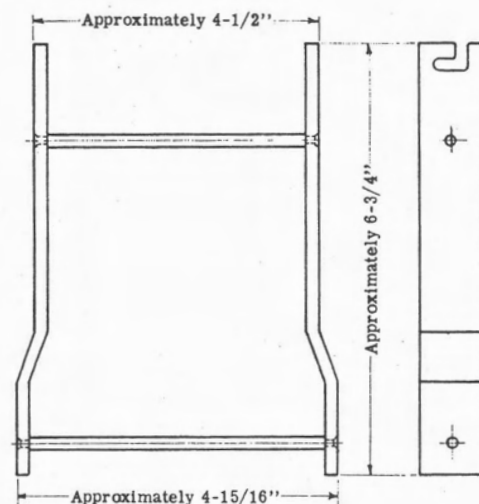


For use in checking rear of Strowger switch while on
shelf

BULLETIN 540-

SCREWDRIVER


 
H-24664

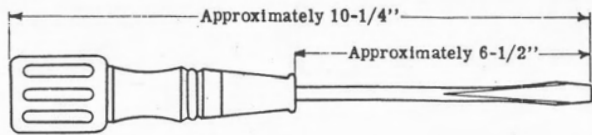

For general use

SCREWDRIVER, RIGHT ANGLE RATCHET

  
H-47754-1

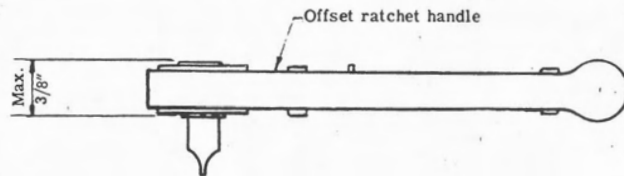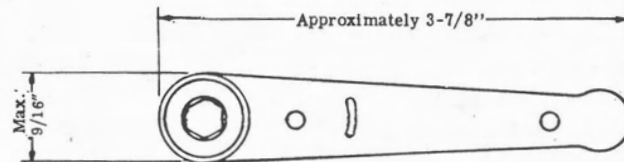

For use on short lever relay armature and general use

SCREWDRIVER

 H-45963-1
and 2

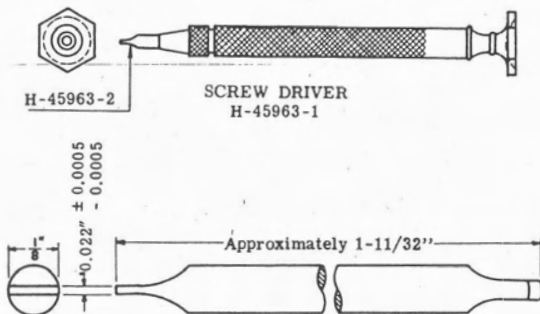


SCREW DRIVER
H-45963-1
SCREW DRIVER BLADE
FOR ABOVE
H-45963-2

For use on power supervisor's board

SCREWDRIVER, GUIDE PIN

 
H-883182

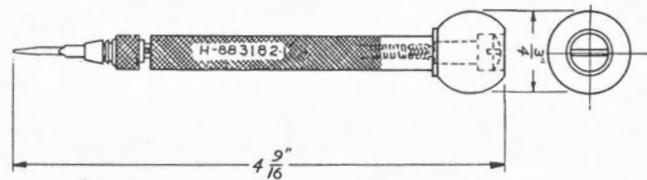

For use on switchboard cord and plug assembly

SCREWDRIVER

 
H-880622-1

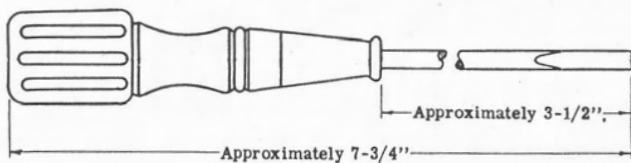

For general use

SCREWDRIVER, KEY TYPE

 
H-883794-1

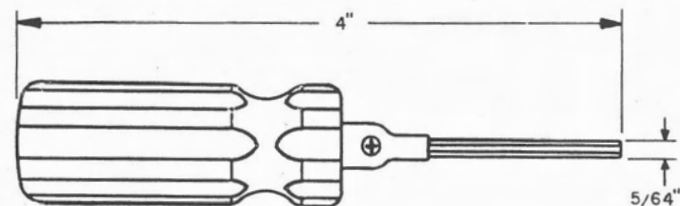

For use on Model 21 I.B.M. writer assembly (ticket printer)

SCREWDRIVER, OFF-SET

 H-21766




Blade on each end .037" maximum thickness

For general use

SCREWDRIVER, KEY TYPE

 H-883822




For adjusting setscrews on series PTW polar relays

MAINTENANCE TOOLS

SCREWDRIVER

 
H-883858-1

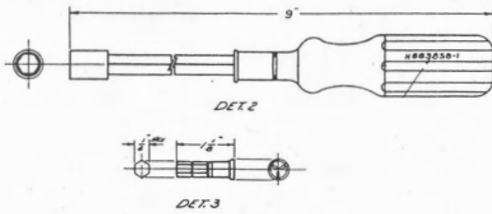

For use on 8 Holt pan head screw (emergency reporting telephone).

TEST SET, ROTARY

 H-881174-1

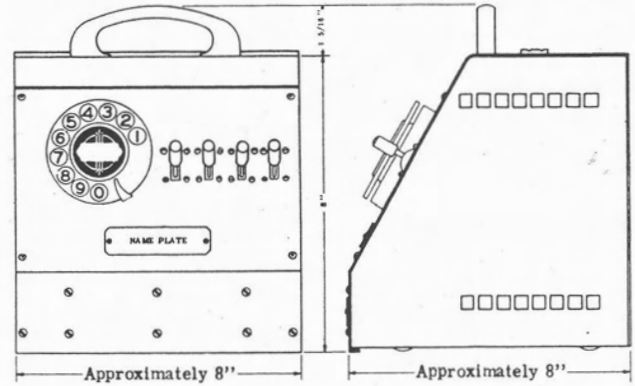


For use in routine maintenance of relay-interrupted 10- and 20-trunk battery-searching selectors.


PRECAUTION: Circuits of test sets must match those of equipment to be tested.

TEST SET, DIALING AND TALKING


 
H-880859-1

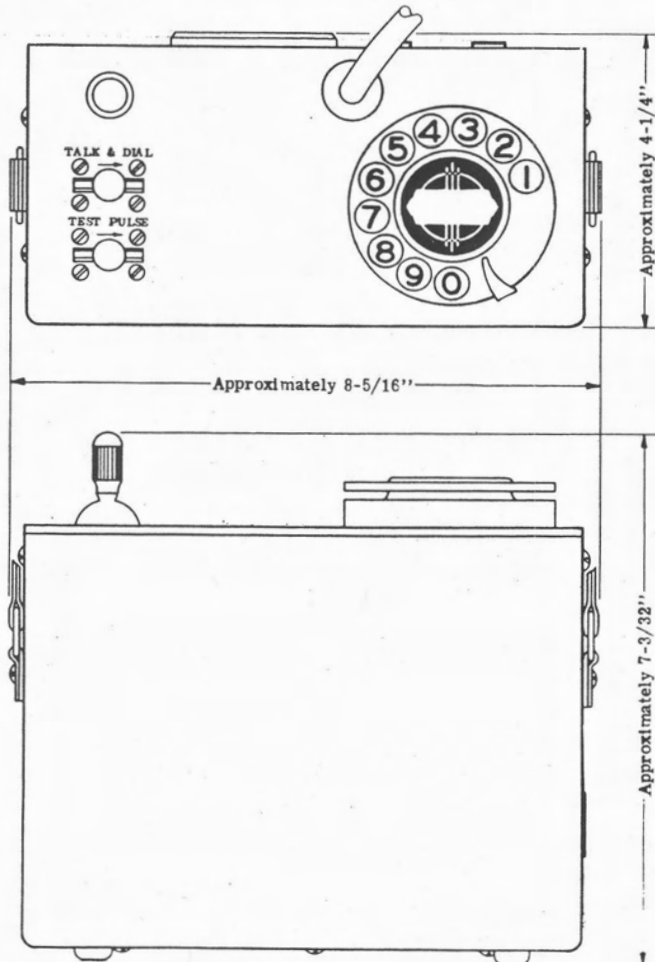

 For use in testing simplex-dialing intertoll selectors and trunks.




  TEST CLIP (D-542626-A) USED WITH A ONE CONDUCTOR CORD




Used with 4 conductor cord and spade terminations

 TEST PLUG (D-541784-A) USED WITH A FOUR CONDUCTOR CORD

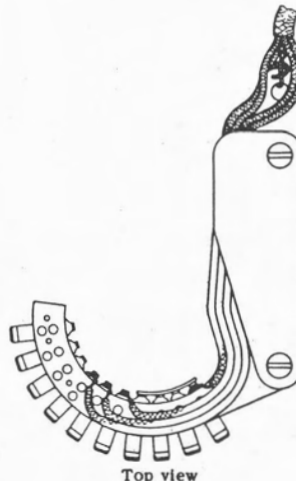

Top view

 BANK BUSYING TOOL
(H-78977-12) (10 PT)

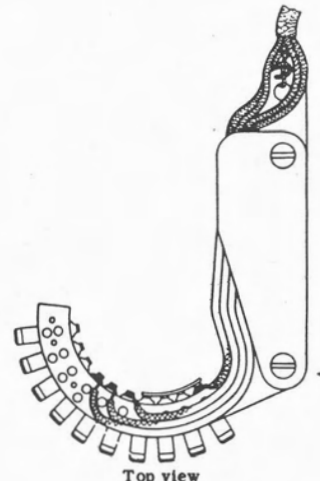

Top view

BANK BUSYING TOOL
(H-78977-1) (20 PT)


BULLETIN 540

TEST SET, TRUNK CIRCUIT

H-883127-1


SWITCH TESTER, TYPE 26
(PORTABLE)

 H-883635-1

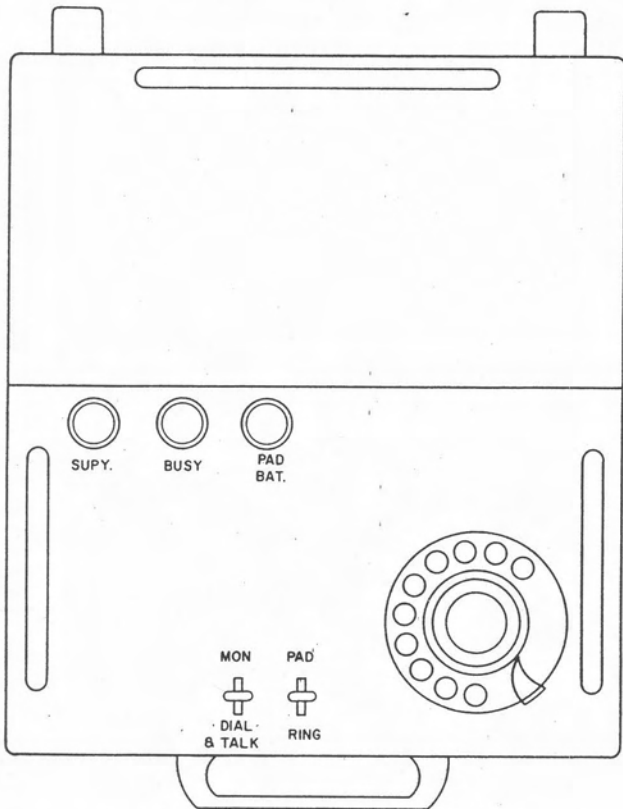


10-3/16" x 1' 0-13/16" x 8-1/8"

 For use in testing type 31 toll board trunk circuits

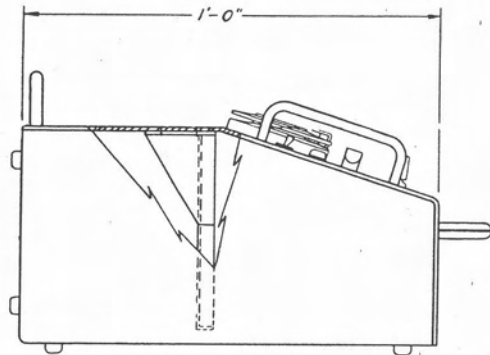


PORTABLE CASE, LESS COVER

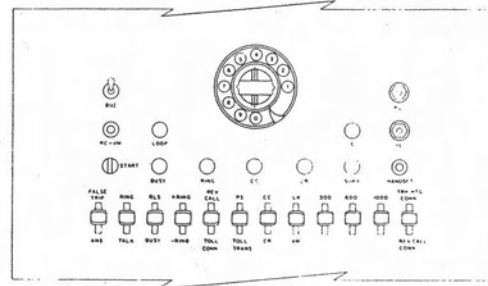 


TEST SET, CURRENT FLOW

H-882790-1
(Model S)

 CONTROLS AND INDICATORS

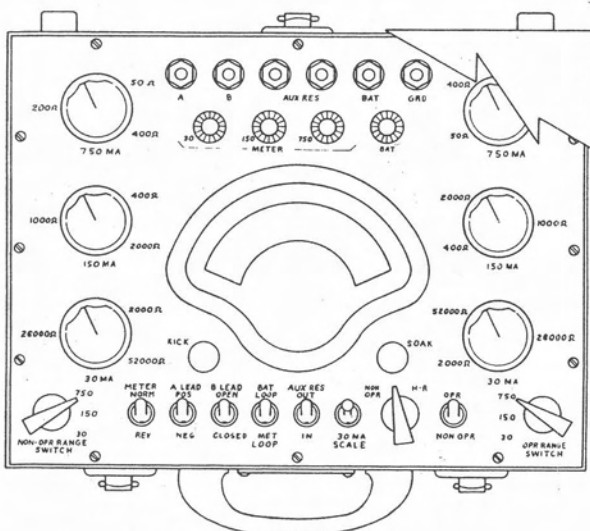

1' 0-1/2" x 11-15/16" x 7-9/16"

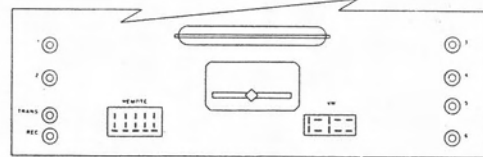 

JACKS

 
For general switch testing use.

Use to check adjustments of switches and relays

MAINTENANCE TOOLS

TEST SET, PULSING (VARYING MACHINE)

H-882240-1

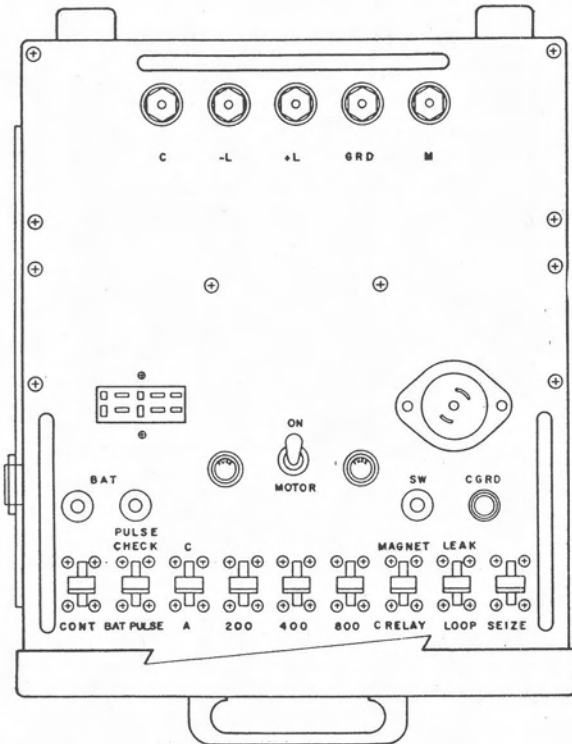


NOTE: Test sets are arranged for bench or remote (shelf mounted) testing.

For use in testing, pulsing, stepping and "B" relay action of the Strowger switch

TEST SET, BUZZER

 H-23355-1,
2, 3 and 4

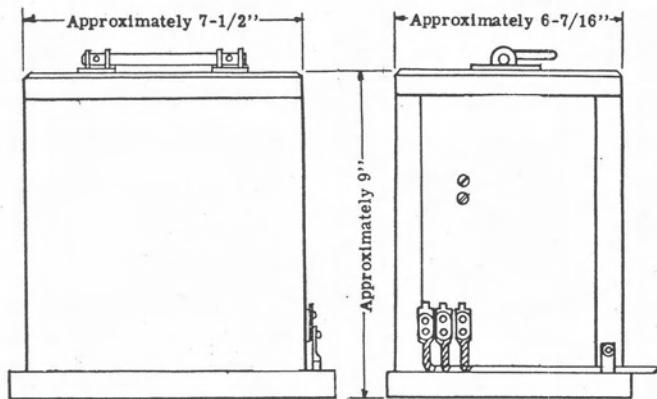

Assem. 1 for long distance
Consists of dry cells, buzzer, jack, cord, operators telephone set, condenser and resistor

Assem. 2 for buzzer set
Consists of dry cells, buzzer, jack, cord, condenser and resistor

 
 
Assem. 3 battery set for long distance
Consists of dry cells, jack, operator's telephone set

Assem. 4 for trunk testing
Consists of dry cells, buzzer, jack, relays, cord, condenser and resistor

For use in trunk testing

TEST SET, TOLL SELECTOR "C" RELAY

H-880623-3

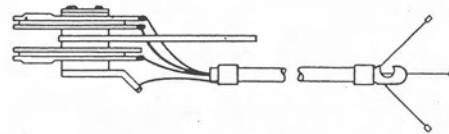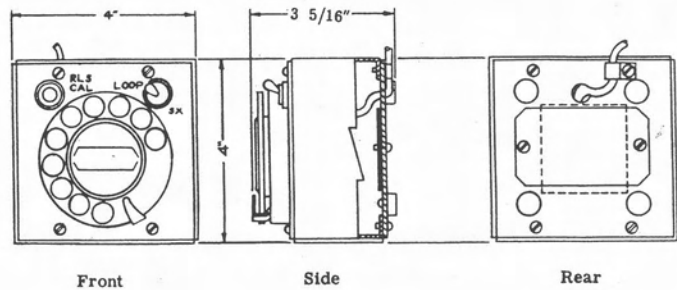


CORD & TEST PLUG ASSEMBLY D-543081-A
(THIS CORD AND TEST PLUG ASSEMBLY IS PART OF THE TEST SET)

For use with toll selectors (Loop and simplex pulsing)

TEST SET, LINEFINDER

 H-881444-1&2

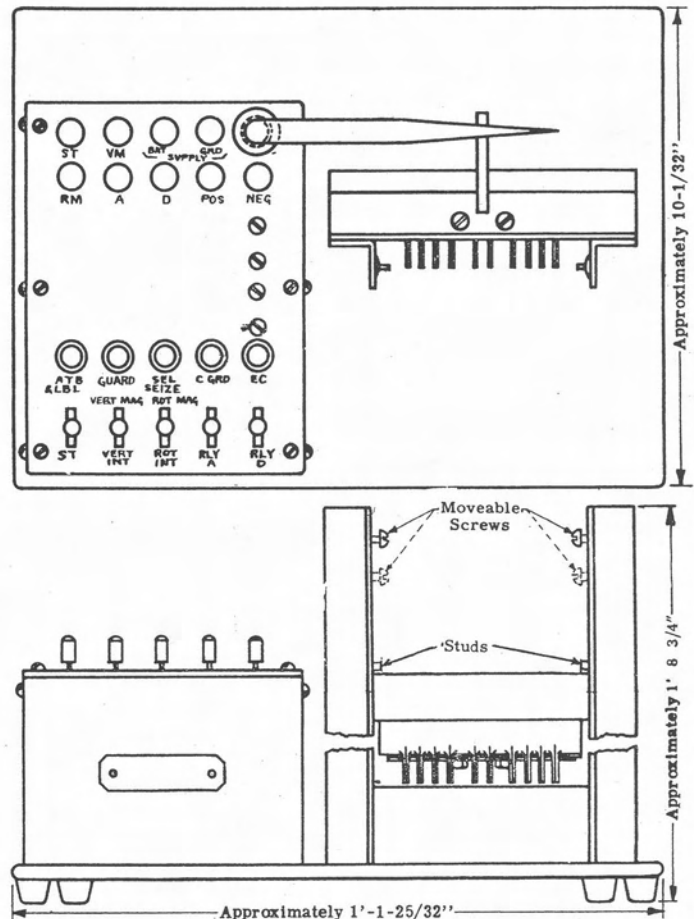

For use with linefinder switch


BULLETIN 540

TEST STAND (STROWGER SWITCH)

H-881346-3

TEST STAND, DOUBLE WIDTH SWITCH BASE

 
H-880263-1

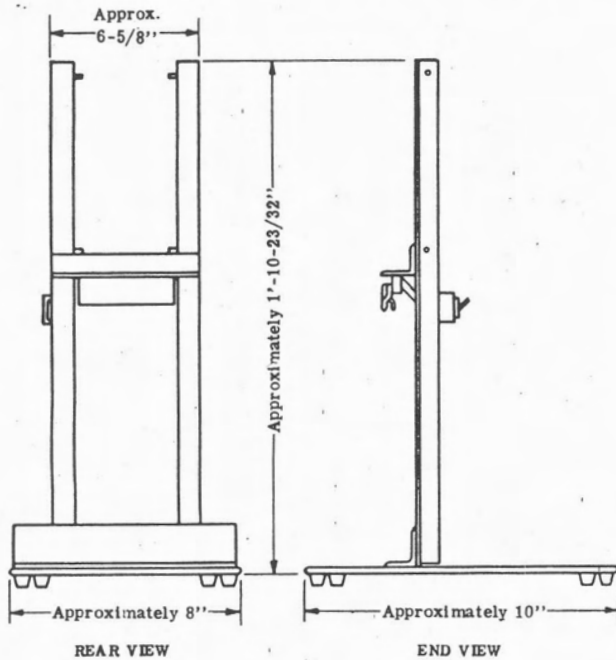

ASSEMBLY 3

All steel construction using a 32 point shelf jack

 For use with linefinders, connectors and selectors having Navy jacks

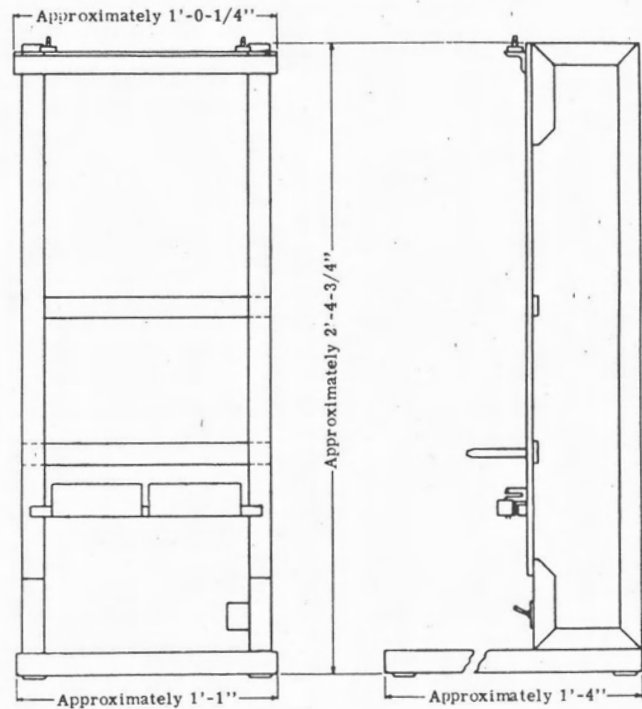

ASSEM. 1

 
For use in adjusting and testing ticketer

TEST STAND (STROWGER SWITCH)

H-881346-1


TEST STAND (STROWGER SWITCH)

H-881346-2

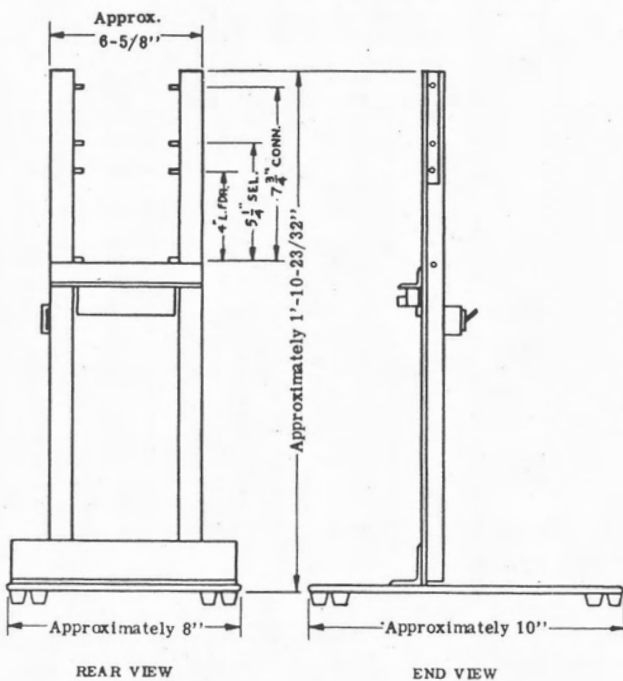

ASSEMBLY 1

 For use with selectors, connectors, linefinders and miscellaneous relay groups having standard jacks.

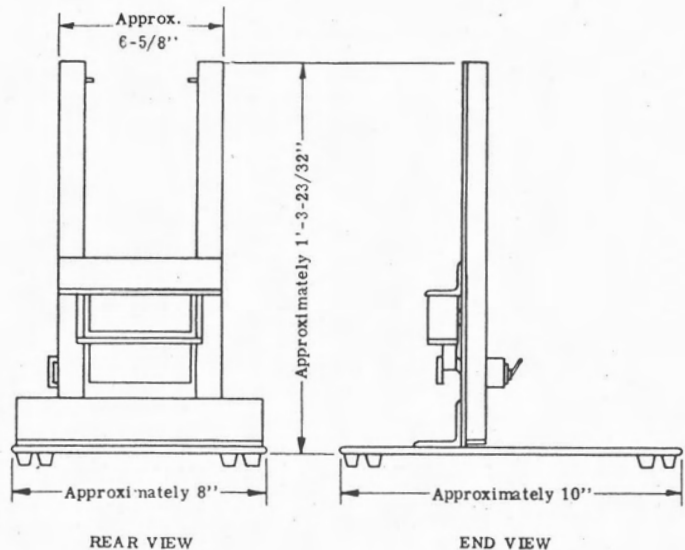

ASSEMBLY 2

For use with switches having a connector mounting and Navy type jacks

 
MAINTENANCE TOOLS

TEST STAND, UNIVERSAL (STROWGER SWITCH)


H-881346-4

TEST SET, WIRE CHIEF'S

H-882803-1

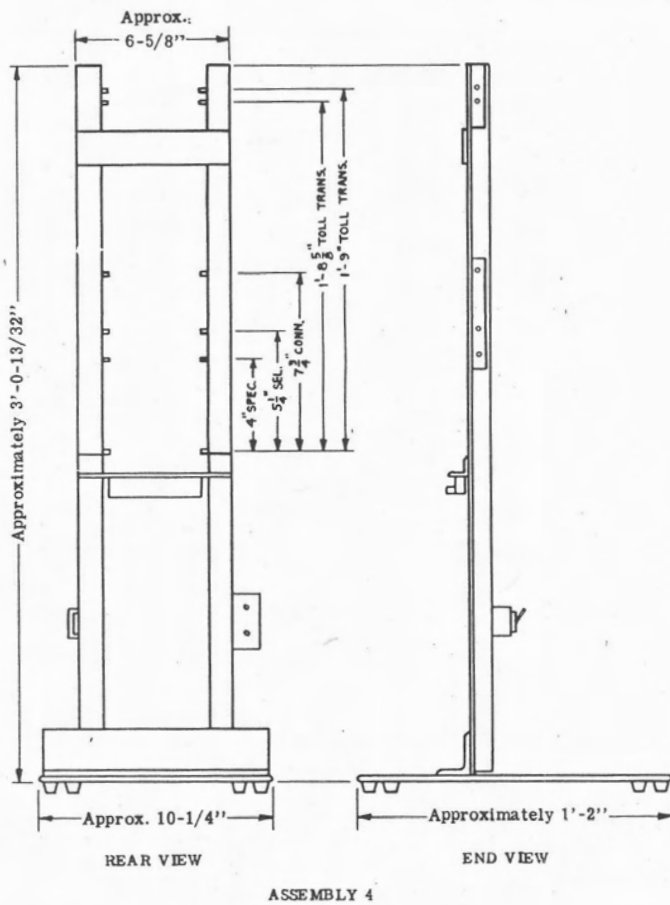

 For use as a holding fixture when testing and adjusting standard and special length Strowger switches and relay groups having standard switch jacks.

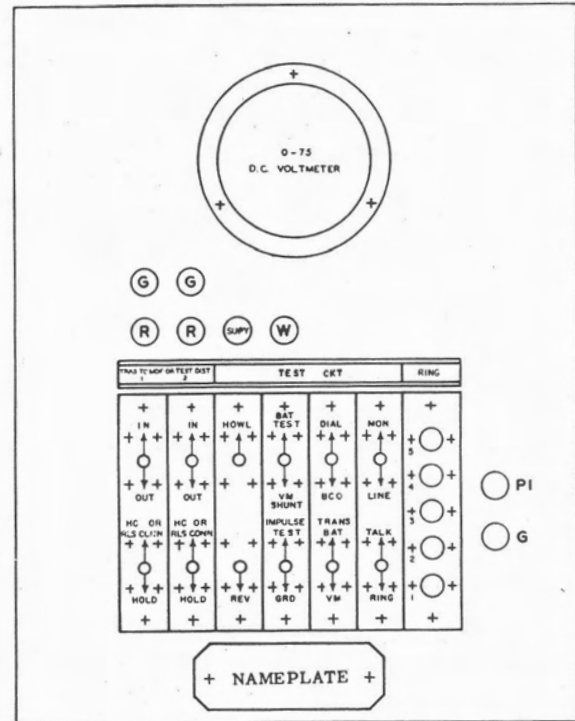


Approximate Dimensions 10 3/4" x 1' 1 5/8"

For use in small automatic or manual exchanges for testing outside plant conditions and general exchange operation.

PRECAUTION: Circuits of test sets must match those of equipment to be tested.

TEST LAMP

 H-16339-1
and 5

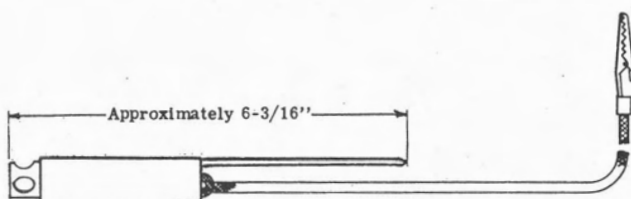


48 volt switchboard lamp D-94005-A ASSEMBLY 1
24 volt switchboard lamp D-94025-A ASSEMBLY 5

For general use

TESTER, LINESWITCH

 H-7443-5,6,7,
10,12, & 13



LINE SWITCH TEST PENCIL

ASSEMBLY NO.	RESISTANCE
H-7443-5	500
H-7443-6	600
H-7443-7	750
H-7443-10	1000
H-7443-12	1200
H-7443-13	1650

For use in testing plunger lineswitch operation.

BULLETIN 540

TEST SET, PORTABLE

H-883227-1

 
TEST PLUGS

D-57048-A 2 PT

~~D-57030-A 4 PT~~


D-57037-A 6 PT

D-57038-A 8 PT

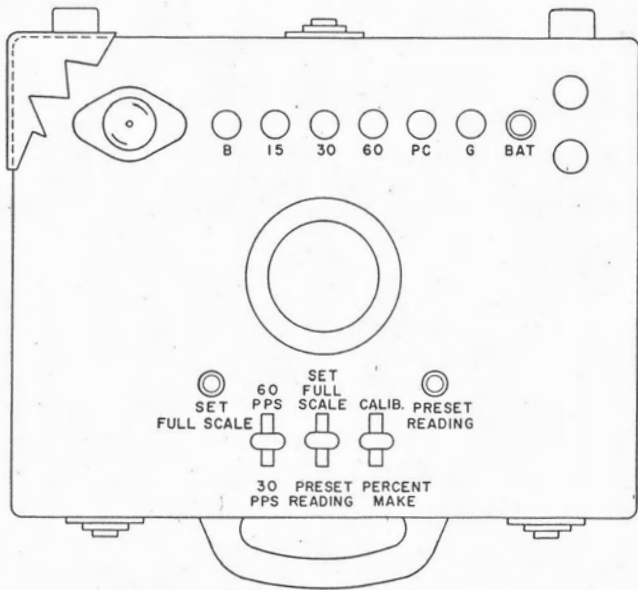


1' 0-1/2" x 11-5/16" x 7-9/16"

 
For use in making speed and percent make measurements on loop, ground, or battery pulses or pulses derived from another source of 44 to 52 volts.





2 PT.

 



4 PT.

 

6 PT.

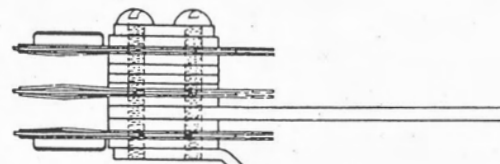  

8 PT.

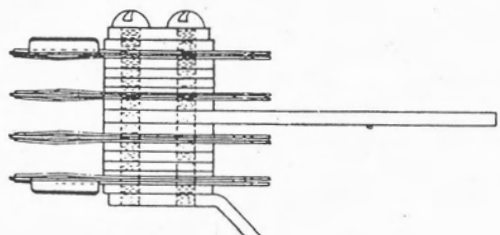  

For use in general testing

 
 
 
MAINTENANCE TOOLS

TEST, HAND TELEPHONE

L-965

TOOL, BENDING


H-882979-1

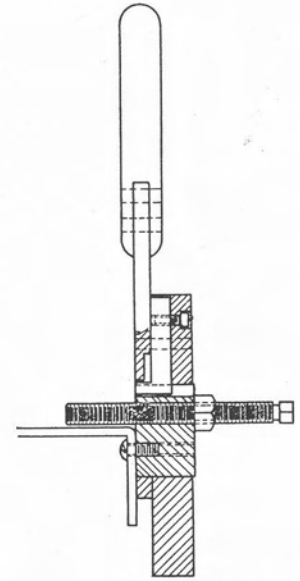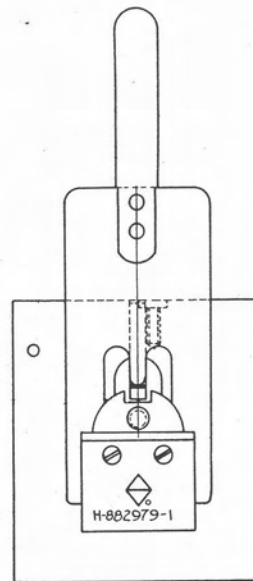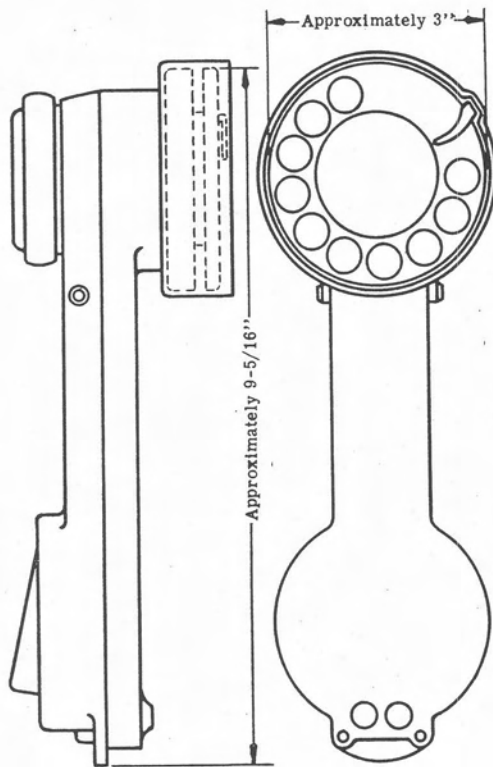

For snap-on type normal post cam.

\$40.00

 For general switch room use and watchman's service.
Uses plugs and cords below:

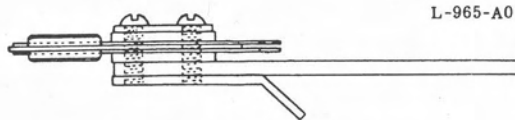


L-965-A0

D-542313-A (Cord included)

2 POINT TEST PLUG ASSEMBLY


TOOL, TENSION ADJUSTING

 H-883857-1

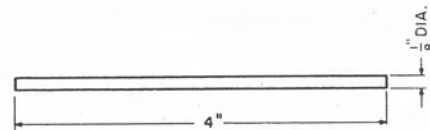

For emergency reporting telephone.

 
L-965-A6



D-542349-A

CORD AND PLUG ASSEMBLY

 L-965-A2



D-542320-A

CORD AND TEST CLIP ASSEMBLY


BULLETIN 540-B

WRENCH, JACK FASTENER

M-6656-1, 2

WRENCH, HEXAGON SOCKET

 H-11841-1

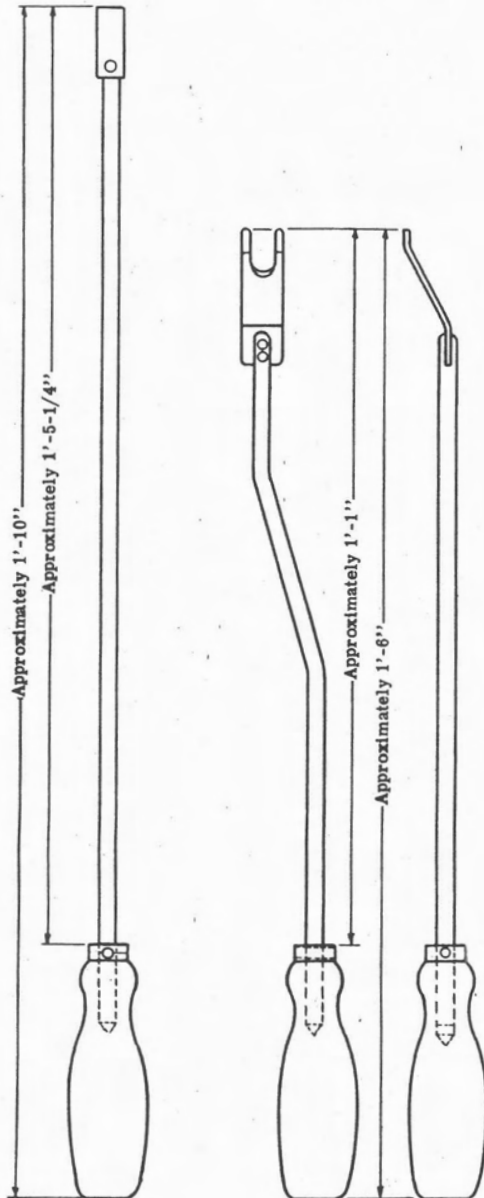


Assem. 1

Assem. 2

For use in mounting manual board jack strips

WRENCH, "S" HEXAGON

 H-10774

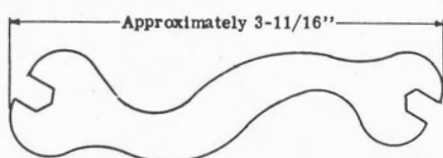


3/8" nut

.065" thick

5/16" nut

 For general use

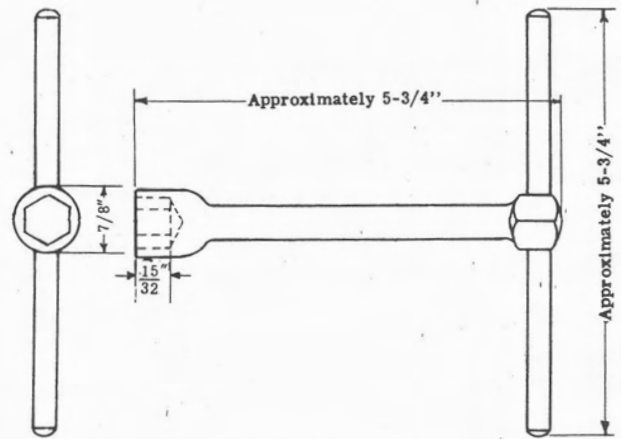


For 9/16" nut

For use on line switchboard sections

WRENCH, HEXAGON SOCKET

 H-13748-1

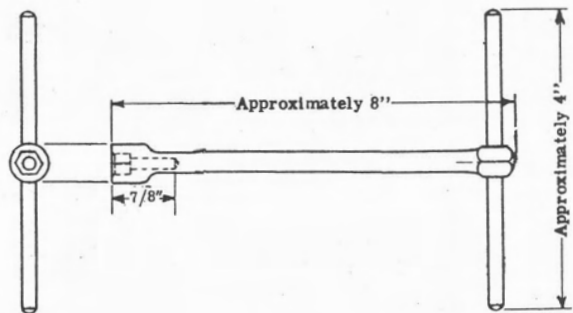


For 5/16" nut

For use on plunger lineswitch banks

WRENCH, HEXAGON SOCKET

 H-46440-1

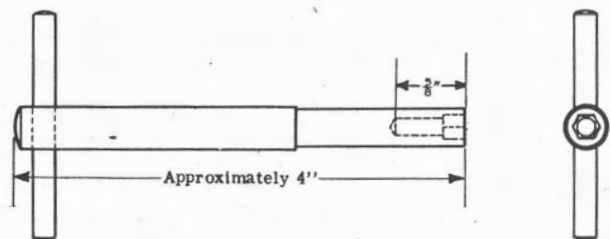


For 7/32" nut

For use on hexagon head screw that fastens the double dog clamp, rotary and vertical clamp and the shaft spring

MAINTENANCE TOOLS

WRENCH, HEXAGON SOCKET

 H-7058-1

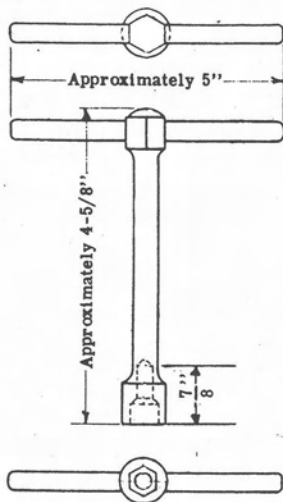


For 3/8" nut

For use on Strowger switch rotary magnets and general use

WRENCH, HEXAGON SOCKET

 H-10053-1

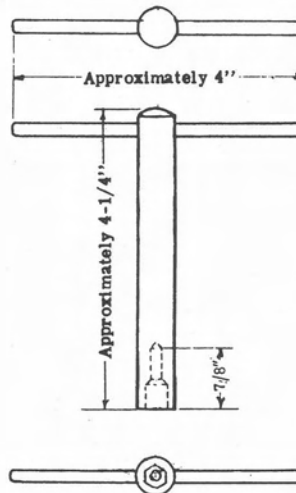


For 5/16" nut

For use on plunger lineswitches and general use

WRENCH, SQUARE SOCKET

 H-7061-1

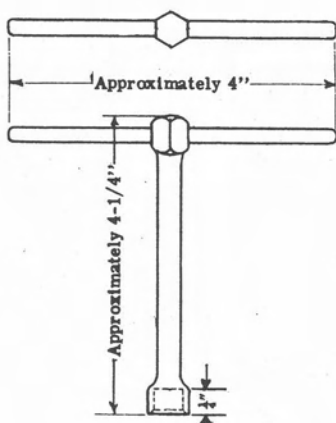


For 1/4" nut

For use on master switch shaft clamping screws

WRENCH, MONOPHONE SPANNER

 
H-43173-1

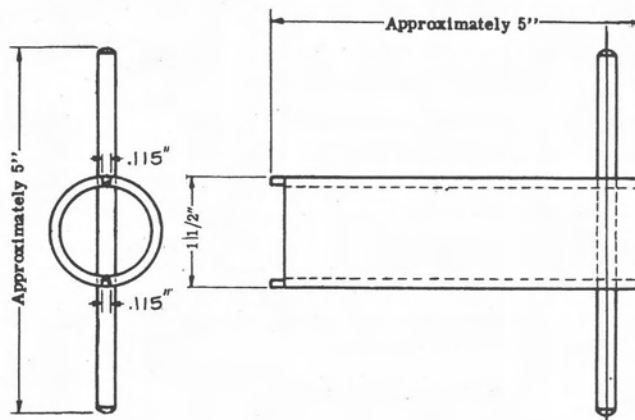

For use in removing cradle from Types 1A and 31. Monophones

WRENCH, SLOTTED NUT

 H-7065-1

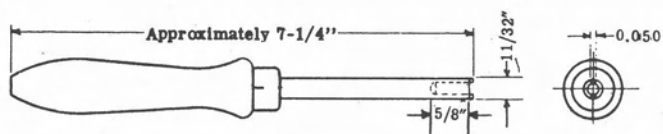


For use on #8 circular slotted nuts

BULLETIN 540

WRENCH, JACK THIMBLE

 
MP-1221-A

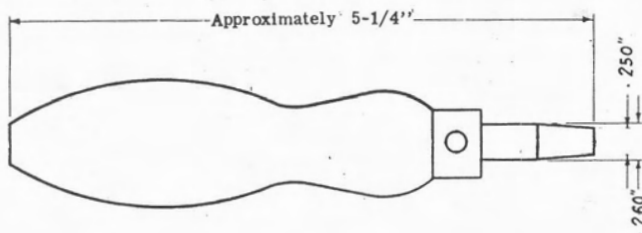

For use on jack thimble of magneto manual boards

WRENCH, "S" HEXAGON

 H-20703

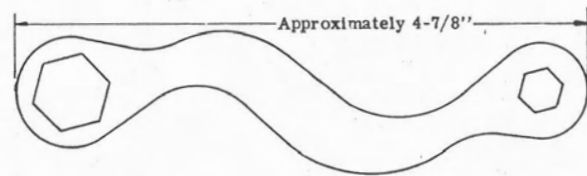

For 5/8" hexagon nut

 
.095" thick

For 5/16" hexagon nut

For use on rotary line switch Types 13 and 14

WRENCH, SPINTITE

H-46437-1

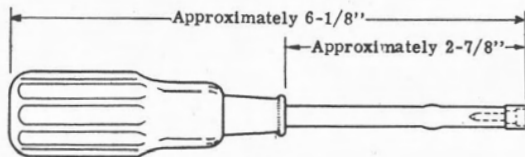


For 3/16" nut

For use in assembling wipers to Strowger switch shaft

WRENCH, OPEN END

 H-880773-1

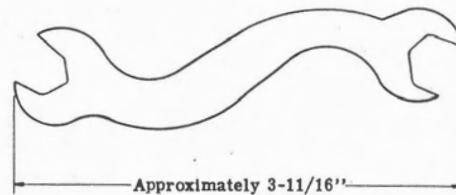

3/8" nut

 
1/8" thick

7/16" nut

For use with Type 44 and 45 switch

WRENCH, CAM NUT SOCKET


H-16480

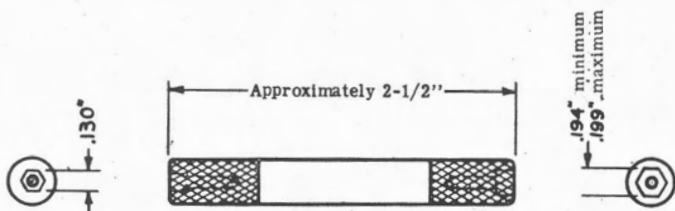

For use on dial cam nut

WRENCH, "S"

 
H-50448

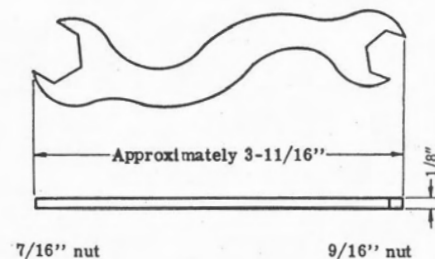

For use on Type 29 ringing converter and general use

WRENCH, HEXAGON SOCKET

 H-10772

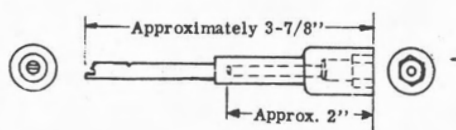


For 5/16" nut

For use on flat type terminal strip assemblies used in a hand drill or screw drivers having a chuck for holding interchangeable blades

WRENCH, "S"

 H-7062

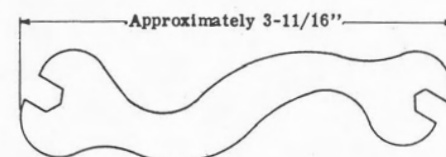

1/4" nut

.065" thick

 
7/32" nut

For general use and adjusting residual screw on relays

MAINTENANCE TOOLS

WRENCH, "S"

H-7063

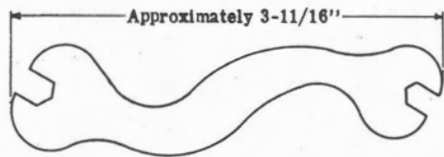


3/8" nut 1/8" thick 5/16" nut

For general use

WRENCH, OPEN END

 H-880772-1

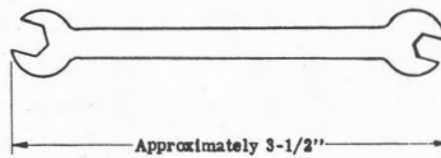


1/4" nut .083" thick 3/16" nut

For use with Type 44 and 45 rotary switch

WRENCH, DIAL

 H-25937

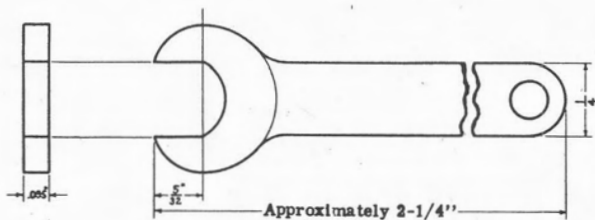


Opening .256" max., .253" min.

For use on dial governor and cam nut

WRENCH, END

 H-23865

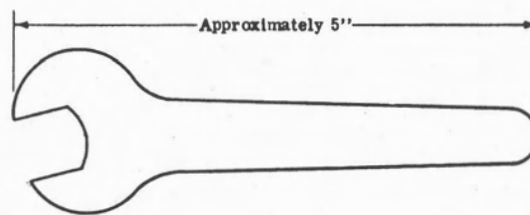


5/8" nut

For use on rotary lineswitch armature adjusting screw

WRENCH, "S"

 H-20309

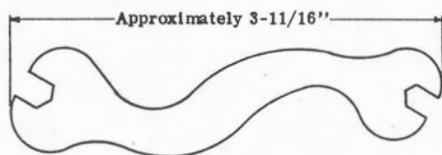


5/16" nut 1/8" thick 7/32" nut

For use on harmonic ringer

WRENCH, OPEN END

 H-880672-1

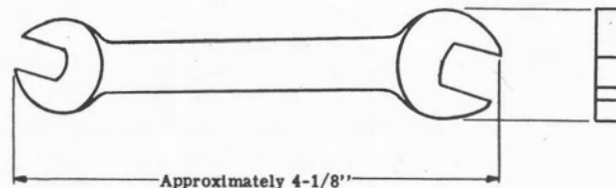


5/16" nut

25/64" nut

For use on Strowger switch vertical and rotary magnet locking cap and general use

WRENCH, PAYSTATION

 P-60481-2

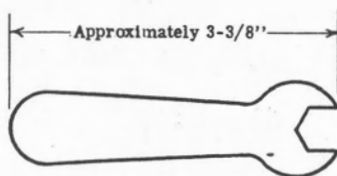


DETAIL NO. 2
3/16" THICK
5/16" nut

For use in adjusting polar relay of pre-pay and post-pay paystations (tightening pivot screw lock nut)

WRENCH, OPEN END

 H-880771-1

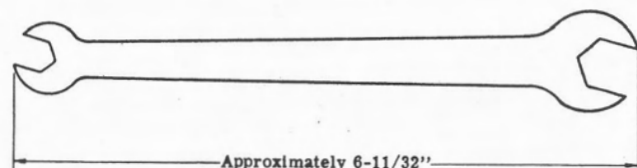

5/16" nut

.083" thick


1/2" nut

For use on Type 45 rotary switch

BULLETIN 540

WRENCH, WIPER


 
H-7057

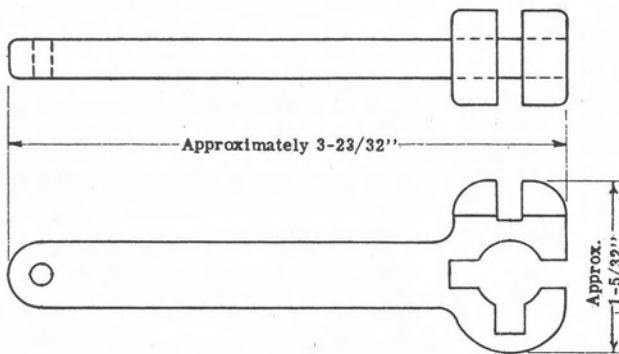

For use on Strowger switch wiper with threaded hub and nut.

WRENCH, SOCKET KEY

  H-883793-1,
2 and 3

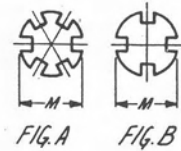
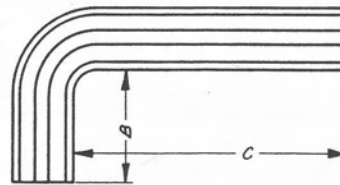


DRG. NO.	FIG. NO.	B	C	M
H-883793-1	B	21/32"	1-27/32"	.069"
H-883793-2	A	45/64"	1-31/32"	.094"
H-883793-3	A	3/4"	2-3/32"	.110"

For use on Model 21 I.B.M. writer assembly (ticket printer)

WIPER, ASSEMBLY TOOL

  H-50829-1

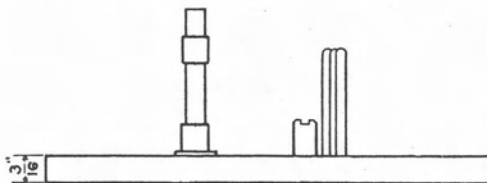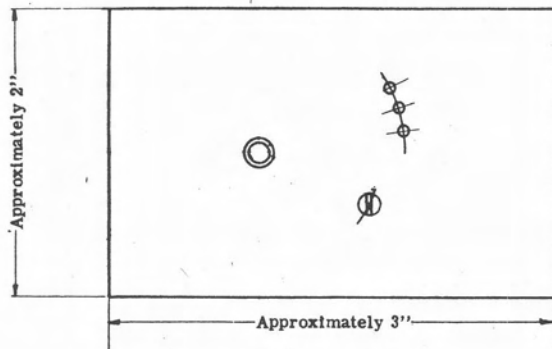


Assem. 1

For use in reassembling minor switch wiper

WRENCH, ARMATURE BENDING

 
H-883847-1

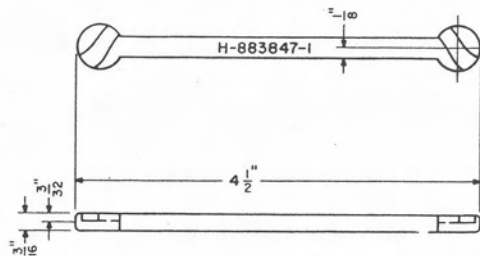

For use on horizontal (Class A) relays.

WRENCH, HEXAGON SOCKET, DOUBLE-END WITH SCREW-DRIVER

 H-883772-1




For use in adjusting relay armature residual screws and nuts (Engages 7/32" and 1/4" hexagon nuts) (Screw driver .02" thick)

MAINTENANCE TOOLS

TEST PLUG AND CORD ASSEMBLIES

 See table for code numbers

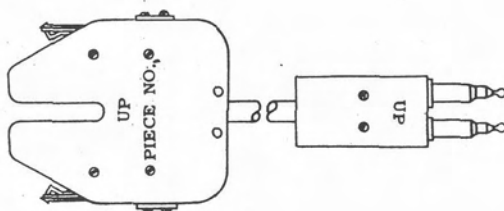

TYPICAL PLUG AND CORD ASSEMBLY

For Protector	Length of Cord	USE ASSEMBLY			
		With twin plug for jack assembly		With twin plug for H-47082-1 jack box or H-11022-11 test box	With spade terminal (Replacing twin plug)
		H-50830-1 & 2	H-880982-1		
A.E.Co. Type 676	12'-0" 18'-0"	D-57068-A D-57068-B	D-57068-H D-57068-J		D-57068-C D-57068-D
A.E.Co. Type 675 10, 20, 21 and 22 pair banks	12'-0" 18'-0"	D-57140-A D-57140-B	D-57140-E D-57140-F	D-57011-A	D-57140-C D-57140-D
A.E.Co. Type 675 50-51 pair banks	18'-0"	D-57107-A	D-57107-B	D-57045-A	
Cook Electric Co. Type 3800	12'-0" 18'-0"	D-57099-A D-57099-B	D-57099-E D-57099-F		D-57099-C D-57099-D
Cook Electric Co. Type 100	12'-0" 18'-0"	D-57141-A D-57141-B	D-57141-E D-57141-F	D-57021-A	D-57141-C D-57141-D
Cook Electric Co. Type 60	18'-0"			D-57017-A	
Cook Electric Co. Type 10	12'-0" 18'-0"	D-57143-A D-57143-B	D-57143-E D-57143-F	D-57014-A	D-57143-C D-57143-D
W.E.Co. Type C-50 and C-52*	12'-0" 18'-0"	D-57142-A D-57142-B	D-57142-E D-57142-F		D-57142-C D-57142-D
W.E.Co. Type 1168, 1169, 1268, 1269 and 1177-A*	18'-0"			D-57020-A	
Reliable Electric Co.	12'-0"				D-57060-A

* TEST CORD ASSEMBLIES NOT SUPPLIED WITH W.E.CO. PROTECTOR TEST PLUG.

For use with exchange distributing frames (H-50830-1 and 2 are 1/2" centers) (H-880982-1 are 1" centers)

BULLETIN 540

PRODUCT-TOOL-USAGE GUIDE

TOOLS		PRODUCTS																							
DESCRIPTION	PART NO.	STEPPING SWITCHES						RELAYS								MISCELLANEOUS									
		STROWGER (2 MOTION)	MINOR SWITCH (10 Point)	Type 13 (25 Point)	Type 14 (50 Point)	Type 26 (11 Point)	Type 44 (10 Point)	Type 45 (25 or 50 Point)	Horiz. Class "A" & Type 28 Class "Z"	Type 57-A Class "B"	Type 58-A Class "C"	Class "E"	Type 10 Class "F"	Type 27 Class "M"	Rotor Relay and BarRelay	Class S	Series YQA (Codel)	DIAL	KEYS - LEVER, PUSH and TURN	LAMP JACK STRIPS	MONOPHONE	PLUG JACK STRIPS	SLEEVE MOUNTING JACK	TARGET INDICATOR	MASTER-SWITCH AND PLUNGER LINESWITCH
Clip, Busy	D-15455-A	X																							
Box, Harmonic Ringer	D-40059-A	X																							
Spacer, Insulating	D-44757-A	X																							
Sleeving, Cleaning (DRY)	D-542539-A	X	X	X	X	X		X																	
Adjuster, Armature	H-7056	X																							
Wrench, Wiper	H-7057	X																							
Wrench, Socket	H-7058-1	X		X	X	X																			
Adjuster, Hookswitch	H-7059																			X					
Wrench, Socket	H-7061-1																								X
Wrench, "S"	H-7062	X		X	X	X			X	X	X			X											X
Wrench, "S"	H-7063	X																							
Adjuster, Spring	H-7066								X	X		X													X
Adjuster, Double Dog	H-7067	X																							
Adjuster, Bank Contact	H-7068-3																								X
Tester, Lineswitch	H-7443-5 to 13																								X
Gauge Blk., Plunger L.Sw.	H-7541-3																								X
Adjuster, Plunger Arm	H-10001-3																								X
Wrench, Socket	H-10053-1																								X
Wrench, Socket	H-11841-1																								X
Adjuster, Armature	H-13398-1	X																							
Adjuster, Armature	H-13700	X																							
Adjuster, Frame	H-13701																								X
Wrench, Socket	H-13748-1												X												X
Adjuster, Armature	H-14768								X			X													
Adjuster, Armature Stop	H-14769								X																
Pliers, Spring Adjusting	H-16290-7	X																X							
Wrench, Cam Nut Socket	H-16480																	X							
Cleaning, Bank	H-16590-1 & 2	X																							
Adjuster, Spring	H-20179-1			X	X	X																			
Adjuster, Spring	H-20777		X						X	X		X													
Adjuster, Rotary Pawl	H-23413-1	X																							
Wrench, End	H-23865			X	X	X																			

MAINTENANCE TOOLS

PRODUCT-TOOL-USAGE GUIDE

TOOLS		PRODUCTS																							
DESCRIPTION	PART NO.	STEPPING SWITCHES						RELAYS								MISCELLANEOUS									
		STROWGER (2 MOTION)	MINOR SWITCH (10 Point)	Type 13 (25 Point)	Type 14 (50 Point)	Type 26 (11 Point)	Type 44 (10 Point)	Type 45 (25 or 50 Point)	Horiz. Class "A" & Type 28 Class "Z"	Type 57-A Class "B"	Type 58-A Class "C"	Class "E"	Type 10 Class "F"	Type 27 Class "M"	Rotor Relay and BarRelay	Class S	Series YQA (Codel)	DIAL	KEYS - LEVER, PUSH and TURN	LAMP JACK STRIPS	MONOPHONE	PLUG JACK STRIPS	SLEEVE MOUNTING JACK	TARGET INDICATOR	MASTER-SWITCH AND PLUNGER LINESWITCH
Lineswitch, Mounting	H-24528								X																X
Adjuster, Spring	H-24600		X						X																
Wrench, Dial	H-25937																	X							
Dial, Escutcheon	H-26917																			X					
Adjuster, Spring	H-42873		X						X	X		X													
Burnisher, Contact	H-883699-1	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X			X	X		X
Monophone Tool	H-43172																			X					
Wrench, Spanner	H-43173-1																			X					
Adjuster, Spring	H-44359												X												
Adjuster, Spring	H-45590												X												
Adjuster, Armature Stop	H-46410																							X	
Adjuster, Spring	H-46411																							X	
Adjuster, Spring Holder	H-46412																							X	
Adjuster, Detent	H-46413																							X	
Wrench, Socket	H-46437-1	X																							
Wrench, Socket	H-46440-1	X																							
Gauge, Thickness	H-46795-50	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X							X
Adjuster, Spring	H-46974-1															X									
Adjuster, Spring	H-46975-1															X									
Adjuster, Cam	H-47202	X																							
Cleaner, Rotary Switch	H-47386-1		X	X	X	X	X	X																	
Pliers, Duck Bill	H-50620						X	X																	
Monophone Tool	H-50754																			X					
Wiper, Assembly	H-50829-1		X																						
Adjuster, Armature	H-56518											X													
Cleaner, Rotary Switch	H-56628-1			X	X																				
Cleaner, Rotary Switch	H-56628-2			X	X	X		X																	
Adjuster, Spring	H-64670													X											
Adjuster, Spring	H-64980																X								
Pliers, Jack Spring	H-880621-1																					X			
Screwdriver, Cabinet	H-880622-1																					X			
Wrench, Strowger Magnet	H-880672-1	X																							

BULLETIN 540

PRODUCT-TOOL-USAGE GUIDE

TOOLS		PRODUCTS																								
DESCRIPTION	PART NO.	STEPPING SWITCHES						RELAYS								MISCELLANEOUS										
		STROWGER (2 MOTION)	MINOR SWITCH (10 Point)	Type 13 (25 Point)	Type 14 (50 Point)	Type 26 (11 Point)	Type 44 (10 Point)	Type 45 (25 or 50 Point)	Horiz. Class "A" & Type 28 Class "Z"	Type 57-A Class "B"	Type 58-A Class "C"	Class "E"	Type 10 Class "F"	Type 27 Class "M"	Rotor Relay and BarRelay	Class S	Series YQA (Codel)	DIAL	KEYS - LEVER, PUSH and TURN	LAMP JACK STRIPS	MONOPHONE	PLUG JACK STRIPS	SLEEVE MOUNTING JACK	TARGET INDICATOR	MASTER-SWITCH AND PLUNGER LINESWITCH	
Wrench, Rotary Switch	H-880771-1						X																			
Wrench, Rotary Switch	H-880772-1						X	X			X															
Wrench, Rotary Switch	H-880773-1						X	X																		
Stepping Tool	H-881384-1						X																			
Handle Remover	H-881419-1																	X								
Adjuster, Spring	H-881602-1 & 2								X																	
Adjuster, Spring	H-881603-1								X																	
Pliers, Wiper Spring	H-881637-1	X																								
Pliers, Wiper Forming	H-881674-1	X																								
Adjuster, Bk stop & Arm.	H-884149-1										X															
Adjuster, Spring	H-881859-1								X																	
Adjuster, Spring	H-88385												X													
Adjuster, Spring	H-88390																	X								
Gauge, Jack Sleeve	H-88409																			X						
Pliers, Duck Bill 30°	H-88436	X							X												X					
Adjuster, Armature(57AL)	H-88502-1								X																	
Adjuster, Spring	H-88504-1 & 2								X																	
Cleaning, Bank Brush	H-88844-1 & 2	X																								
Wrench, Jack Fastener	M-6656-1 & 2																		X		X					
Wrench, Jack Thimble	MP-1221-A																					X				
Lamp, Visual Face	MP-4425-A																		X							
Gauge, Manual	MP-5127-A																				X					
Wrench, Hexagon Socket	H-883772-1							X																		
Extractor, Lamp Cap	H-883114-1																		X							
Extractor, Lamp Cap	H-882568-2																		X							
Tool, Bending	H-882979-1	X																								
Switch Tester, Type 26	H-883635-1	X																								
Wrench, Arm. Bending	H-883847-1							X																		
Adjuster, Spring	H-883998-1													X												
Adjuster, Spring	H-883999-1													X												
Adjuster, Spring	H-884000-1													X												
Adjuster, Spring	H-884148-1										X															

INDEX

(In Numerical Sequence)

<u>CODE NO.</u>	<u>PAGE</u>	<u>CODE NO.</u>	<u>PAGE</u>
D		H-20179-1	3
D-15455-A	10	H-20309	33
D-18175-A	21	H-20703	32
D-40059-A, B, C, D, E, F and G	8	H-20777	4
D-44757-A	21	H-21766	22
D-57030-A	28	H-22945	19
D-57037-A	28	H-23355-1, 2, 3 and 4	25
D-57038-A	28	H-23413-1	3
D-57043-A	14	H-23865	33
D-57048-A	28	H-24528	17
D-440197-A and B	21	H-24600	4
D-542407-A	11	H-24664	22
D-542539-A	21	H-25314-1	8
D-731450-A and B	8	H-25906-1	21
H		H-25937	33
H-7056	1	H-26221-1	21
H-7057	34	H-26917	12
H-7058-1	31	H-42873	4
H-7059	3	H-43172	17
H-7061-1	31	H-43173-1	31
H-7062	32	H-44359	4
H-7063	33	H-44514-1	13
H-7065-1	31	H-45590	4
H-7066	3	H-45963-1 and 2	22
H-7067	2	H-46410	1
H-7068-3	2	H-46411	4
H-7443-5, 6, 7, 10, 12, and 13	27	H-46412	6
H-7541-3	15	H-46413	2
H-10001-3	3	H-46437-1	32
H-10053-1	31	H-46440-1	30
H-10772	32	H-46556	9
H-10774	30	H-46557	8
H-11841-1	30	H-46716-1	4
H-13398-1	6	H-46795-1 and 50	16
H-13700	7	H-46974-1	5
H-13701	2	H-46975-1	5
H-13748-1	30	H-47202	2
H-14315-1	14	H-47386-1	10
H-14768	1	H-47754-1	22
H-14769	2	H-50448	32
H-16290-7	18	H-50619	19
H-16339-1 and 5	27	H-50620	18
H-16480	32	H-50754	17
H-16590-1 and 2	11	H-50829-1	34
H-16978-1	3	H-56518	1
		H-56628-1 and 2	10
		H-56628-4	11
		H-64670	5
		H-64980	5
		H-74573-1 and 2	10
		H-74611	18
		H-88385	5
		H-88390	5

INDEX (Cont'd.)

(In Numerical Sequence)

[illegible]

AUTOMATIC ELECTRIC



Subsidiary of

GENERAL TELEPHONE & ELECTRONICS

Makers of Telephone, Signaling, and Communication Apparatus . . . Electrical Engineers, Designers, and Consultants

Factory and General Offices: Northlake, Illinois, U.S.A.

ASSOCIATED RESEARCH AND MANUFACTURING COMPANIES

Automatic Electric Laboratories, Incorporated Northlake, Illinois, U. S. A.
Automatic Electric (Canada) Limited Brockville, Ontario, Canada
Automatique Electrique, S.A. Antwerp, Belgium
Automatic Electric, S.A.T.A.P. Milan, Italy

DISTRIBUTOR IN U.S. AND POSSESSIONS

AUTOMATIC ELECTRIC SALES CORPORATION

Northlake, Illinois, U.S.A.
Sales Offices in All Principal Cities

GENERAL EXPORT DISTRIBUTOR

AUTOMATIC ELECTRIC INTERNATIONAL

INCORPORATED
Northlake, Illinois, U.S.A.

REGIONAL DISTRIBUTING COMPANIES AND REPRESENTATIVES

ARGENTINA, URUGUAY, PARAGUAY, CHILE, AND BOLIVIA

L. Pitigliani
Caixa Postal 9212
Sao Paulo, Brazil

BELGIUM AND LUXEMBOURG AND NETHERLANDS

Automatique Electrique, S. A.
22 Rue du Verger
Antwerp, Belgium

BRAZIL

Automatic Electric do Brasil, S.A.
Caixa Postal 9212
Sao Paulo, Brazil

CANADA

Automatic Electric Sales (Canada) Limited
185 Bartley Drive
Toronto 16, Ontario, Canada

CENTRAL AMERICA

R. R. Sanders
Apartado 313
San Salvador, El Salvador

COLOMBIA

Automatic Electric de Colombia, S.A.
Apartado Aereo 3968
Bogota, Colombia

EUROPE, NORTH AFRICA, AND NEAR EAST

Automatic Electric International, Inc.
40 Rue Du Rhone
Geneva, Switzerland

FAR EAST

T. A. Logan
893-9 King's Road
North Point
Hong Kong

ITALY

Automatic Electric S.A.T.A.P.
Via Bernina 12
Milan, Italy

MEXICO

Automatic Electric de Mexico, S.A.
Apartado Postal 20642
Mexico 6, D.F., Mexico

PERU AND ECUADOR

J. P. Maclaren
Apartado Aereo 3968
Bogota, Colombia

VENEZUELA

Automatic Electric de Venezuela, C.A.
Apartado 9361, Caracas, Venezuela

Other Sales Representatives and Agents Throughout the World

ISSUE

9

Maintenance Tools

540

