

COIN TELEPHONE SET  
AECO PREPAY  
MAINTENANCE

CONTENTS	PAGE	3. COIN GAUGE
1. GENERAL .....	1	3.01 Inspect the coin gauge for damage and stuck coins or slugs. Remove any stuck coins or slugs with a wood instrument such as an orange stick; do not use a hard metal instrument to clear the gauge. The cause of coin sticking may be dirt in the coin gauge or coin gauge damage. If the gauge is dirty, remove the dirt with alcohol. If the coin gauge is misaligned or otherwise damaged so that a coin cannot be properly deposited, replace the upper housing with serviceable unit.
2. ROUTINE MAINTENANCE .....	1	
3. COIN GAUGE .....	1	
4. COIN CHUTE .....	1	
5. SINGLE COIL COIN RELAY ASSEMBLY .....	1	
Ground Contact Springs .....	1	
Shunt Contact Springs .....	3	
Coil- and Resistor-Shorting Contact Springs .....	4	
Coin Hopper Trap and Vane Release Test .....	5	
Coin Hopper Bias Margin Test .....	6	
Removal .....	6	
Cleaning .....	6	
Installation .....	7	
6. 2-COIL COIN RELAY ASSEMBLY ....	8	4. COIN CHUTE
Coin Hopper .....	8	4.01 When inspecting the coin chute, a check for cleanliness is important, and if a damaged coin or slug has stuck in the chute, check that the chute is not damaged. Do not attempt to clean a dirty chute. If the coin chute is dirty or damaged, replace the upper housing with a serviceable unit.
Coin Relay .....	9	4.02 With the upper housing off, check the microswitch lever (see Figure 1). The microswitch lever should latch in the pendulum notch on the first nickel deposited and should unlock after the second nickel is deposited. Insure that the shock lever engages the pendulum when the upper housing is tilted to the left 30 degrees. Deposit a dime in the nickel chute; the coin should fall out to the return chute. Perform the same check on the quarter chute.
7. COIN COLLECTION .....	10	
1. GENERAL		5. SINGLE COIL COIN RELAY ASSEMBLY
1.01 This section contains field maintenance procedures for AECO prepay coin telephone sets. Wherever appropriate (depending on local test facilities), the repairman should call a local test board or preassigned number instead of the operator where operator is specified in this section.		5.01 AECO prepay coin telephone sets with a single coil relay will have either an AECO P-60701 relay and hopper assembly or (where a field modification has been made) a Northern Electric Company (NECO) P11E964 relay and hopper assembly. Component part numbers are listed in Table 1.
2. ROUTINE MAINTENANCE		Ground Contact Springs
2.01 Check the dial for bind-free operation and correct speed. Check the switch hook for ease of operation. Inspect the condition of the handset cord and replace it if defective. Inspect handset caps and remove any dirt accumulation from the openings.		5.02 If a trouble report indicates that dial tone is not returned after coin deposit (coin-first offices), or that dialing after deposit fails to break dial tone (tone-first offices), the coin-operated ground contact springs may be at fault. With the

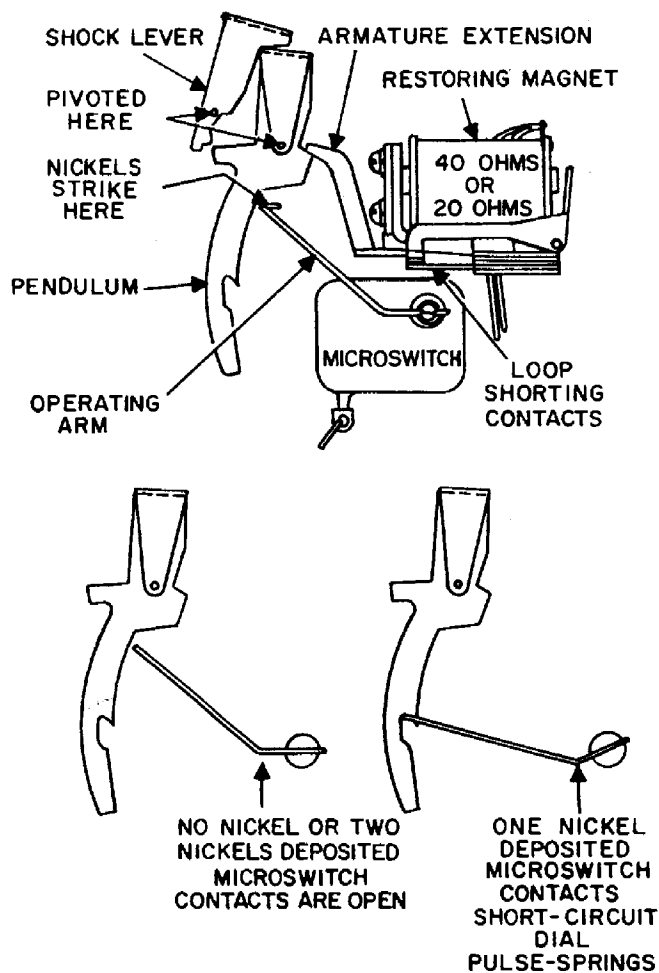


Figure 1. Two-Nickel Assembly.

upper housing removed from the instrument and connected to the lower housing by a test cord assembly (see Part 7), and with the dust cover removed from the coin relay (see Figure 2), investigate as follows:

- (1) Trip the coin trigger and make visual inspection of the contact springs. The ground contacts (see Figure 3) should make firmly. Verify by feel, using an orange stick.
- (2) Lift the handset and check for presence of dial tone. Dial a local selection digit and check for absence of dial tone.
- (3) If dial tone is not heard in coin-first office, tilt the relay selector card by pressing down on one ear, and then operate the relay armature. If dial tone is then heard, the relay has an open coil and should be replaced.
- (4) If dial tone is not heard in a tone-first office, check at the line terminals of the set for central office battery feed. If battery is not detected there, check the station and drop wiring for defects.
- (5) If dial tone is heard in tone-first office, but cannot be broken by dial-

Table 1. AECO/NECO Single Coil Coin Relay Assembly—Part Number.

PART	AECO NO.	NECO NO.
Relay and Hopper Assembly	P-60701	P11E964
Relay	P-60702	P10E786
Hopper	P-60703	P10E755
Dust Cover	P-51942	P10E783
Sems Fastener		P10E810
Upper Coin Relay Mounting Screw	D-76037-A	
Hex Head Screw		P10E752
Lower Coin Relay Mounting Screw	D-76036-A	

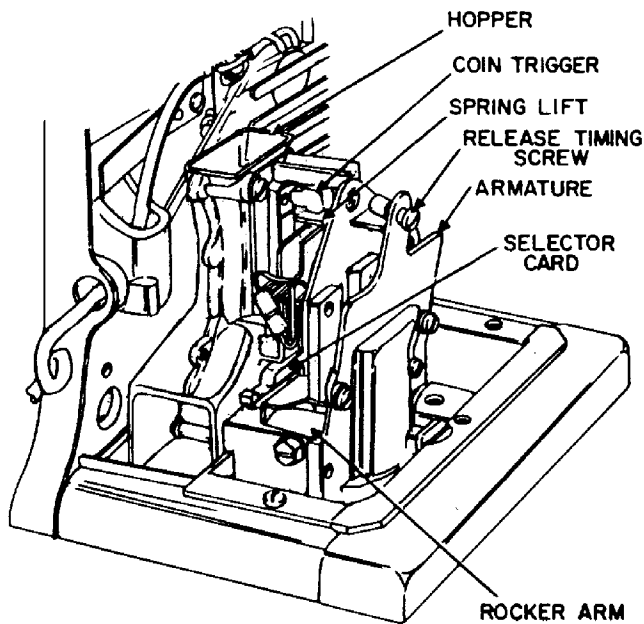


Figure 2. Single Coil Coin Relay, Installed, Cover Removed.

ing, yet the ground contacts appear to make firmly, burnish the contacts with a CB-5 contact burnisher.

- (6) If burnishing fails to clear the trouble, replace the relay.

#### Shunt Contact Springs

5.03 If fraudulent call trouble has been reported, the coin-operated contact springs which maintain a short circuit across the dial pulse contacts (or a low-resistance shunt across the oscillator of the Touch Calling unit) may be at fault. Using the same test arrangement as in Paragraph 5.02, investigate as follows:

- (1) Make a visual check of the dial shorting contacts. With the coin trigger unoperated, the contacts should be held closed, and the rear spring should exhibit perceptible follow beyond its stop spring, as shown in Figure 3. With the trigger tripped, the buffer on

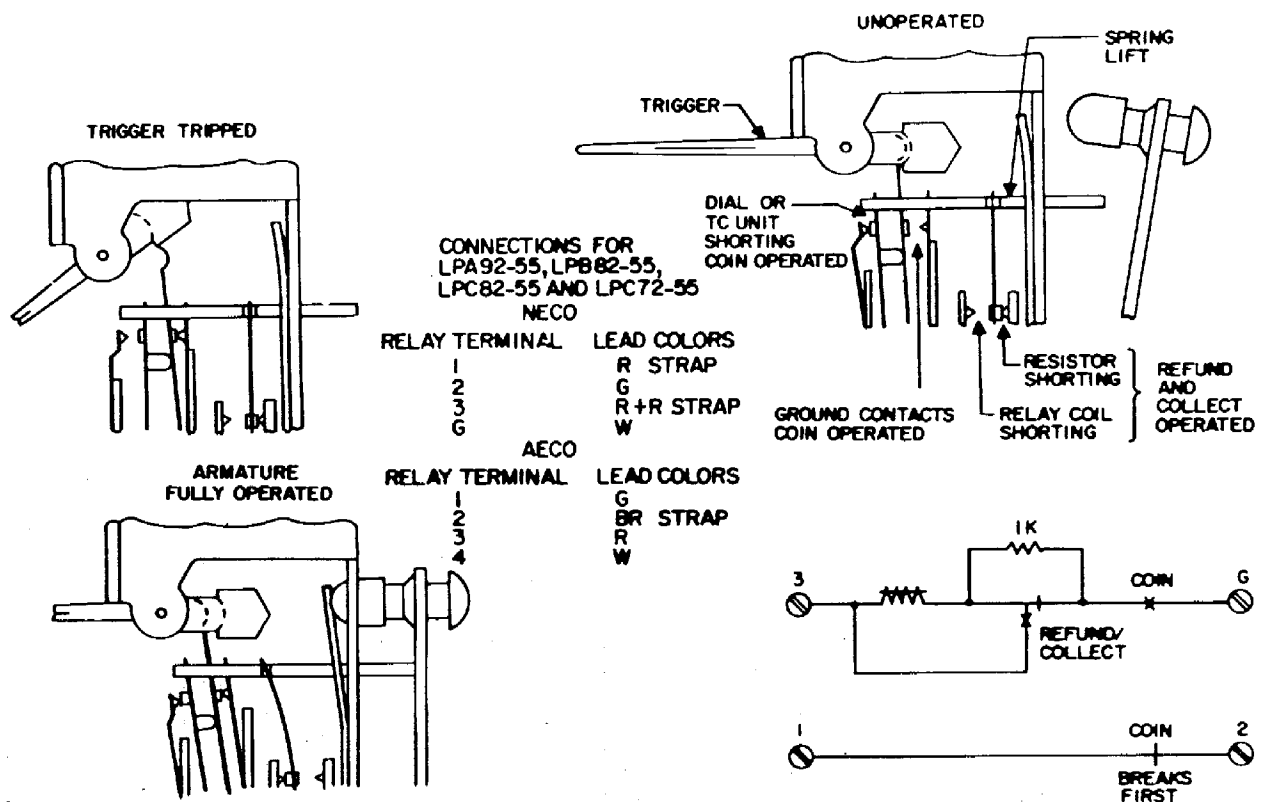


Figure 3. Coin Relay Contact Spring Assembly and Schematic.

the front spring is free to move forward, and the contacts should be open (rest position).

- (2) With the coin trigger unoperated, provide a substitute path to ground the relay. If a clip lead is available, connect it to relay terminal 4 (or G) and to the resistor lead which terminates at the first and fourth contact springs. If no such lead is at hand, slightly widen the larger U-bend of a common #1 paper clip and insert the clip under the bent portion of relay terminal 4 (or G) as shown in Figure 4, so that it touches the edge of the clamped portion of the stop spring for the fourth contact spring. Be sure the clip does not touch relay terminal 3, and is not inserted far enough to interfere with the contact springs.
- (3) Lift the handset, listen for dial tone, and dial a local selection digit. It should not be possible to break dial tone. If dial tone remains unbroken, remove the paper clip or clip lead and proceed to other tests.
- (4) If it is possible to break dial tone, check the dial shorting contacts with the trigger unoperated to insure that

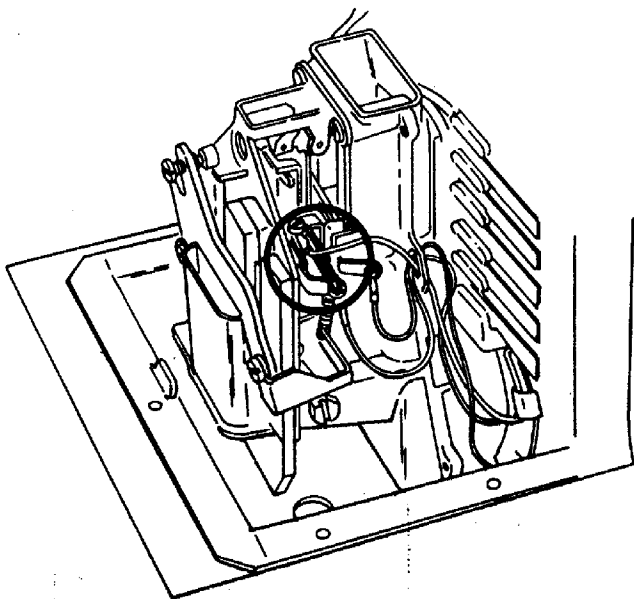


Figure 4. Use of Paper Clip to Bypass Ground Contacts.

they are firmly closed with perceptible follow. Use a CB-5 contact burnisher to burnish the contact pair.

- (5) If burnishing does not clear the trouble, check the continuity of the wiring in the upper housing from the coin signal transmitter to the micro-switch contacts; to the latch release relay contacts, through the latch release relay coil to upper housing transfer spring 2. If there is no continuity through the  $40\Omega$  relay coil (which will also cause failure to refund or collect coins), replace the latch release relay assembly.

#### Coil- and Resistor-Shorting Contact Springs

5.04 If refund or collect trouble has been reported, the armature-operated contact springs, which apply a shunt to the relay coil and remove a shunt from the  $1000\Omega$  resistor, may be at fault. Using the same test arrangement as in Paragraph 5.02, investigate as follows:

- (1) Lift the handset, trip the trigger, listen for dial tone and restore the handset. Watch the relay contacts during the refund operation. If the armature reaches full stroke but immediately drops back, the coil shorting contacts are not making properly. Burnish them with a CB-5 contact burnisher.
- (2) If the refund operation appears normal, contact the testboard or local operator and request a manually-controlled refund and collect operation, with close attention to the coin pilot lamp at the switchboard position. If a very bright pilot lamp is reported, the resistor shorting contacts are not opening properly. Check for adequate contact travel and adjust the break contact if necessary. This type of trouble should be quite rare.
- (3) If no pilot lamp glow is reported (or an even briefer glow than usual with this type of relay), the resistor may be open. Dismiss the operator or testboardman and restore the handset. Leaving the coin trigger unoperated, lift the handset, tilt the relay selector

card by pressing down on one ear, and then operate the relay armature. If dial tone is not heard (coin-first offices) or cannot be broken by dialing (tone-first offices), the resistor is open. Replace the coin relay.

#### Coin Hopper Trap and Vane Release Test

5.05 The relay armature, coin trap and hopper vane should not depend on rapid release to provide inertia for complete restoration, but should restore fully to their nonoperated positions even when the armature and trap are prevented from restoring at their normal rate and are manually released at very slow rate. To test this function remove cover from the relay and proceed as follows:

- (1) Tilt the relay selector card by pressing down on one ear (left ear for collect; right ear for refund), and then operate the relay armature by applying force at the circular dimpled point just above the coil. Push the armature back until it makes firm contact with the center leg of the core.
- (2) Insert coin collector relay tool (Material Code 578921) into the mouth of the coin hopper and use it to force the coin trap to the limit of its downward travel and to hold it there.
- (3) Release the armature very slowly until it reaches the point at which it is held by the still-operated trap.
- (4) Taking at least five seconds, withdraw the relay tool very slowly from the hopper.
- (5) Check to see that the hopper vane, coin trap and relay armature have all fully restored to their normal positions, with the trap locked in place.

NOTE: The coin trigger and the contacts it controls will remain operated.

- (6) Repeat twice for the previous direction of vane operation, and three times for the opposite direction.

5.06 If the test of the preceding paragraph is not met successfully, the relay may be binding due to unequal tightening of the hex-head screws which mount the relay assembly to the hopper. Loosen these screws and retighten them as specified in Paragraph 5.14; then re-test as above.

5.07 If after retightening the mounting screws the assembly still fails the test of Paragraph 5.05, remove the relay from the hopper as explained in Paragraph 5.12 and check the vane and trap as specified in Paragraphs 5.08 and 5.09.

5.08 Check to make sure that the vane does not bind on the inner surfaces of the hopper. To verify this, proceed as follows:

- (1) Hold the vane slightly to the right of vertical, and then release it. It should drop all the way down to the right (refund) position.
- (2) Hold the vane slightly to the left of vertical, and then release it. It should drop all the way down to the left (collect) position.
- (3) If the vane binds in either direction, arrange to have the coin telephone set replaced and returned to the shop for replacement of the relay and hopper assembly.

5.09 Check to make sure that the coin trap operates, restores and locks properly. To verify this, proceed as follows:

- (1) With a fingertip, press the tab of the trap lever down slowly. The trap should fall freely and come to a positive stop against the front wall of the hopper.
- (2) Slowly release the trap lever tab. The trap should restore to normal and lock in its normal position.
- (3) If the coin trap, trap lever, trap lever spring or trap pin are defective, arrange to have the coin telephone set replaced and returned to the shop for rehabilitation of the hopper assembly.

5.10 If the vane and trap meet the tests of Paragraphs 5.08 and 5.09, reassemble the

SECTION 476-202-700  
ISSUE 1

coin relay to the hopper as explained in Paragraph 5.14 and repeat the tests of Paragraph 5.05. If the assembly again fails these tests, replace the relay and repeat the tests. If the assembly still fails the tests with the replacement relay installed, arrange to have the coin telephone set replaced and returned to the shop for rehabilitation of the hopper assembly.

Bias Margin Test

5.11 If refund or collect trouble has been reported, especially in cases of collection when refund was due or vice versa, the selector card may not be receiving proper bias prior to operation of the armature. Using the same test arrangement as in Paragraph 5.02, investigate as follows:

- (1) To test collect operation, place WECO 146A gauge on the right side of the selector card as shown in Figure 5. Push the relay leads aside so that the gauge can move freely.
- (2) Trip the coin trigger, listen for dial tone, and dial the testboard, local operator, or (where provided) the paystation test circuit. Ask or dial the code for application of +110 volt collect potential. The right end of the selector card magnet should operate the hopper vane to the collect position. To check this, look down the hopper throat. If the booth is too dark to see, shine a flashlight at the coin return opening at the lower left

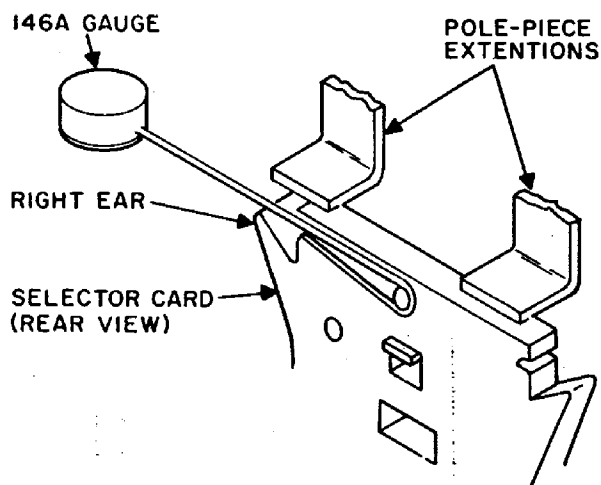


Figure 5. Use of 146A Gauge for Bias Margin Test.

of the hopper, or through the narrow cleanout slot on the lower right. As the armature reaches full stroke, the trigger should restore. Repeat this test twice with collect potential.

- (3) With the gauge mounted on the left side of the selector card, proceed as in (2), above, but ask or dial the code for application of -110 volt refund potential. Test three times.
- (4) If the vane does not operate fully in the proper direction on each test, remove the coin relay as explained in Paragraph 5.12, clean it as set forth in Paragraph 5.13. Then repeat procedures (2) and (3). If the vane still does not operate properly, replace the relay.

Removal

5.12 To remove the coin relay from the hopper, proceed as follows:

- (1) Remove the two upper coin relay mounting screws (or Sems fasteners) from the top mounting bracket.
- (2) Remove the two P10E752 lower coin relay mounting screws (or slotted hex head machine screws) from the cast projections of the hopper which support the relay near the bottom.
- (3) Slide the relay forward in the grooves cast into the inner surfaces of the supporting projections. When the cam is clear of the vane stem and the selector card is clear of the trap lever tab, lift the relay upward.

Cleaning

5.13 Each time a relay is removed for servicing or adjustment clean the pole piece extensions and selector card magnet particles which may have lodged on them. Fold a piece of self-bonding electrical tape (used on drop wire) over the end of an orange stick, with the adhesive side out. Tilt the relay selector card by pressing down on one ear, and then operate the relay armature. With the armature held closed, press the tape-covered orange stick against the top of one side of the selector

card and the adjacent pole piece extension. Discard the tape, apply a clean piece to the orange stick, and repeat the process for the other pole piece extension and adjacent surface of the selector card.

#### Installation

5.14 To install the coin relay on the hopper, proceed as follows:

- (1) If the relay is being reinstalled after removal, first clean the selector card and pole piece extensions as explained in Paragraph 5.13.
- (2) With a finger inserted in the coin return opening at the left of the hopper, hold the hopper vane vertical.
- (3) Trip the relay trigger and rest the relay mounting brackets in the grooves on the inner surfaces of the projecting arms cast into the front of the hopper base.
- (4) Slide the relay back, guiding the trigger into the hopper slot, until the
- (5) Aligning the vane as necessary, slide the relay farther back so that the stem of the vane engages the hole in the relay cam.
- (6) Check to be sure that the bosses at the top of the hopper enter the holes in the trigger-support bracket. If distortion of the bracket prevents this, return the relay to the shop for repair and install another one.
- (7) Align the holes in the relay mounting bracket with the holes in the arms projecting from the hopper, and insert two lower mounting screws (or slotted hex head machine screws).
- (8) Insert two upper mounting screws (or Sems fasteners) through the holes in the trigger-support bracket and into the threaded holes at the top of the hopper.

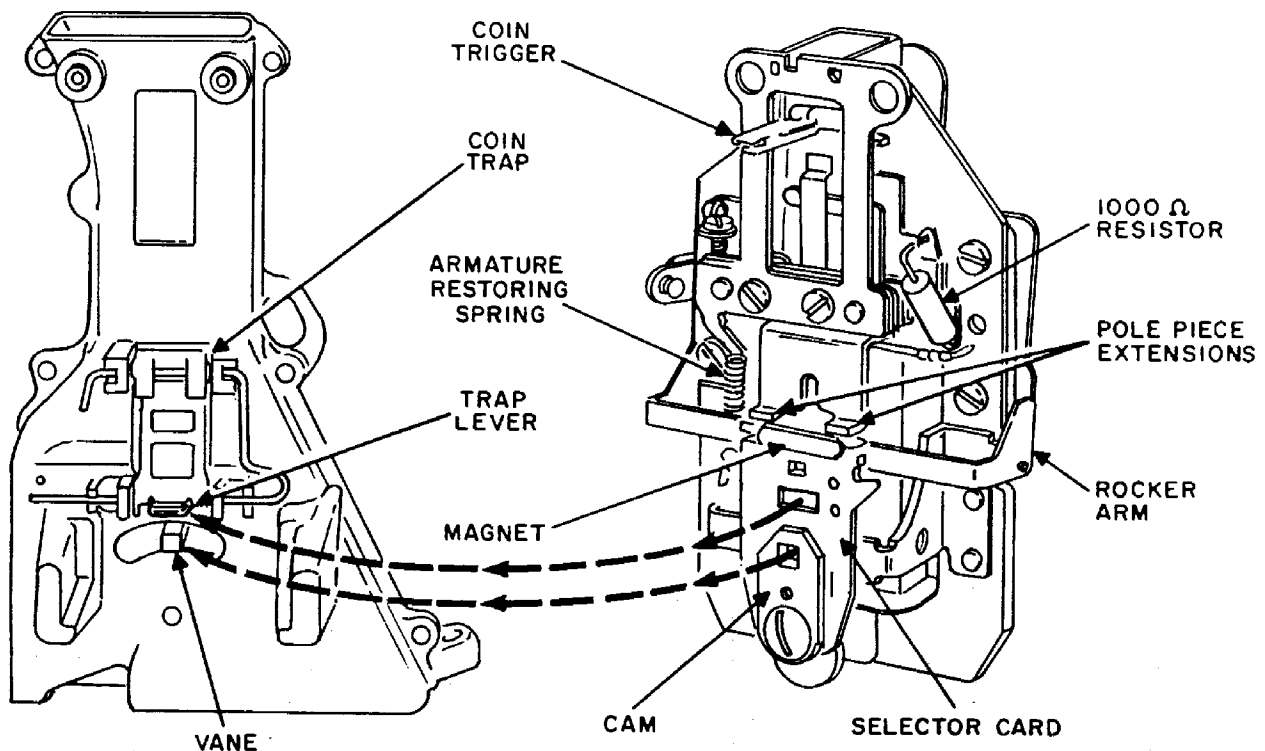


Figure 6. NECo Hopper and Rear View of NECo Relay.

- (9) Tighten each pair of mounting screws evenly. While tightening the upper screws, check to be sure that the trigger pivot pins have some end play, and are not binding in their bearing holes. If the trigger binds, loosen the upper mounting screws and check again for binding. If the trigger moves freely with the upper mounting screws loose, retighten the screws evenly. If the trigger then binds again, replace the relay.
- (10) Check to be sure that the relay armature, coin trap and hopper vane operate and release without binding. If binding is noted, loosen the lower mounting screws and retighten them evenly. If binding is still evident, replace the relay.
- (11) If no further tests are required, snap the styrene cover in place on the trigger support bracket.

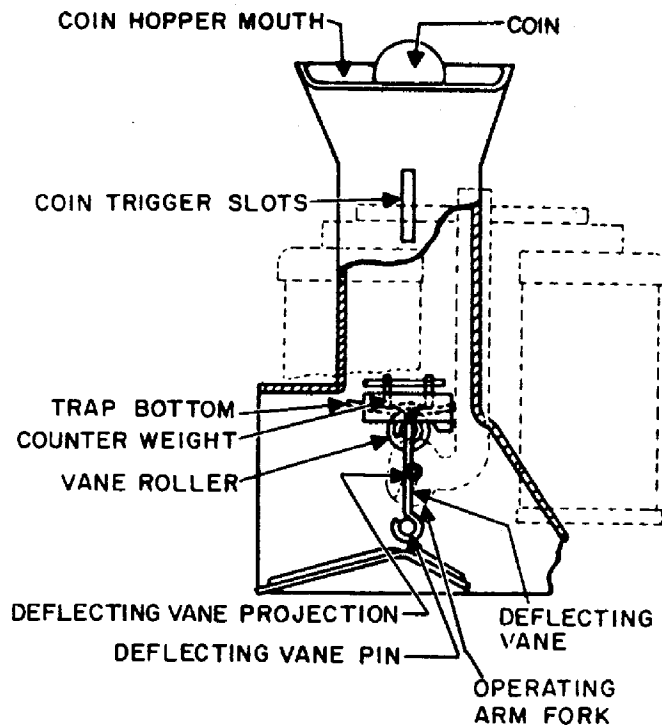


Figure 7. Coin Hopper (2-Coil Assembly).

## 6. 2-COIL RELAY COIN ASSEMBLY

### Coin Hopper

6.01 The coin hopper and trap and vane assembly are illustrated in Figures 7 and 8. Check the trap bottom and deflecting vane operation as follows:

- (1) Insert a piece of wood (3/4 inch wide, 5 inches long, and 1/8 inch thick) into the coin hopper mouth.
- (2) Carefully push down the coin trigger until wood touches the trap bottom.
- (3) Depress the left side of the coin-relay armature with the other hand.
- (4) Push the wood down following trap bottom.
- (5) Release the armature.
- (6) Pull wood strip slowly upward.
- (7) Check that the vane and trap bottom return to original position.

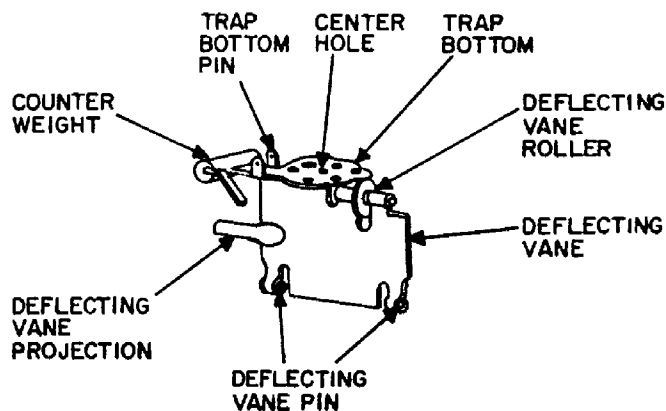


Figure 8. Trap and Vane (2-Coil Assembly).

- (8) Repeat steps (1) through (7) pressing the right side of the coin relay armature.

6.02 If the hopper mechanism appears to be faulty, check the vane for tight bearings as follows:

- (1) Loosen the coin relay heel plate mounting screws.



- (2) Disconnect the leads on the contact springs.
- (3) Remove the coin relay, being careful to clear the coin trigger from the slot in the hopper.
- (4) Hold the vane projection slightly left of vertical.
- (5) The vane should drop fully to the collect position when released.
- (6) Hold the vane slightly to the right of vertical.
- (7) The vane should drop fully to refund position when released.
- (8) If the vane binds in any way, replace the hopper assembly.

6.03 Check vane for binding on hopper as follows:

- (1) Grasp the vane projection pin and pull.
- (2) While pulling the pin, move the vane to the left and right.
- (3) Make sure the vane does not scrape the front of hopper.
- (4) Grasp the vane projection pin and push.
- (5) While pushing the pin, move the vane to the left and to the right.
- (6) Make sure the vane does not scrape the rear of the hopper.
- (7) If the vane scrapes, replace the hopper assembly.

6.04 Check the trap and vane for ease of movement as follows:

- (1) Move the vane to the left.
- (2) Using the other hand, lift the trap bottom counterweight.
- (3) Move the vane to an upright position slowly while at the same time main-

taining slight pressure on the counterweight.

- (4) Check that the vane lifts the trap smoothly and evenly.
- (5) Repeat to the right.
- (6) If the vane or trap binds replace the hopper.

6.05 To check for trap and vane clearances move the counterweight up and down; there should be a small clearance.

Coin Relay

6.06 Field maintenance of the coin relay (see Figures 9 and 10) is performed as follows:

- (1) Remove the coin relay as described in 6.02 (1) through (3).
- (2) Lubricate the inner surfaces of the fork by rubbing with a pencil point.
- (3) Check the coin trigger for ease of operation.


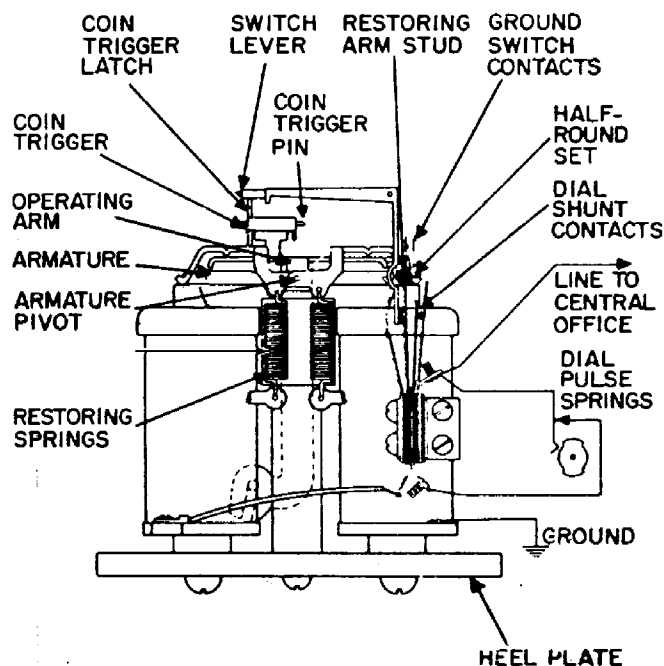


Figure 9. 2-Coil Coin Relay.

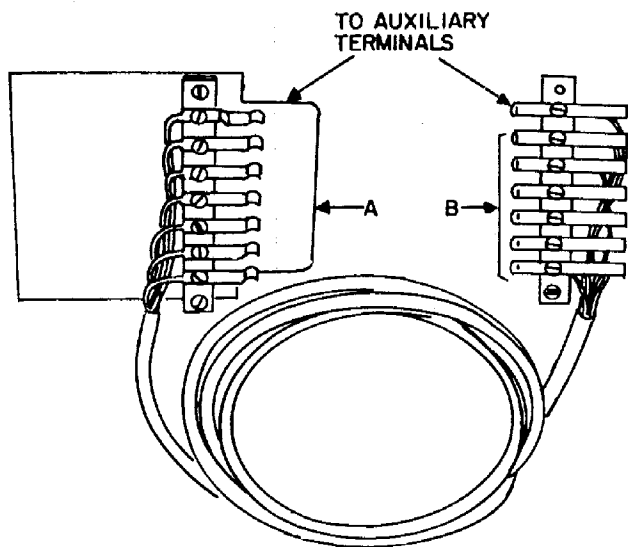

- A. SLIP THIS EDGE OF BRACKET UNDER JACK TERMINAL STRIP ON UPPER HOUSING.  
B. CLIP THESE TERMINALS TO JACK SPRINGS ON LOWER HOUSING.

Figure 10. Coin Telephone Test Cord P-60605.

6.07 Install the coin relay after tests as follows:

- (1) Ease the coin trigger through the slots in the hopper.
- (2) Move the vane to the upright position and ease the projection into the fork.
- (3) Looking down the mouth of the hopper, move the relay to the right or to the left until the edge of the vane can be seen through the center hole of the trap bottom.
- (4) Install the heel plate mounting screws, but do not tighten down completely.
- (5) Center coin trigger in the hopper slots so that it is not touching the sides of the hopper.
- (6) Tighten down the heel plate mounting screws while being careful not to disturb the coin trigger alignment in the hopper slots.

6.08 Check the coin shield (located at the refund side of the hopper at the entrance to the refund chute) for ease of operation. Replace it if faulty.

6.09 Check all switch points for cleanliness, especially horizontal transfer switch points.

## 7. COIN COLLECTION

7.01 Check coin collecting operation as follows:

- (1) Jumper terminals between upper and lower housing using:
  - (a) A P-60605 test cord (Figure 10) for LPA- and LPB- series coin telephone sets.
  - (b) A P-60754-A test cord (Figure 11) for LPC telephone sets.
- (2) Lift the handset. Deposit a test coin in the hopper. Hang up and check for coin refund.
- (3) Lift the handset. Deposit a test coin in the hopper. Dial a predetermined local number. When the called party answers, check transmission and then have called party hang up. Hang up and check that the coin is collected.

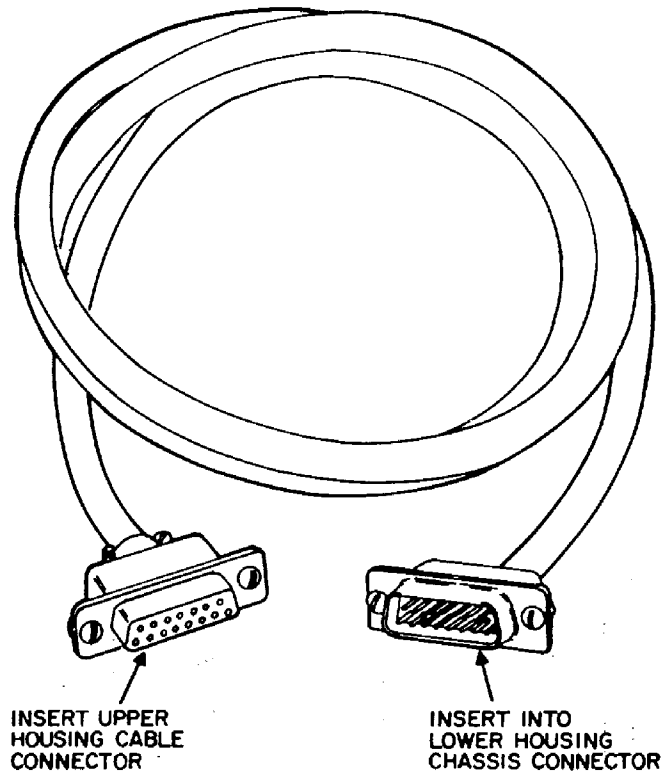


Figure 11. Coin Telephone Test Cord P-60754-A.

- (4) Lift the handset. Deposit a test coin in the hopper. Dial operator. Check for coin refund when the operator answers. Check that operator can identify the call as originating from a coin telephone. (If equipment is not arranged to refund automatically, have the operator apply refund current. Check for coin refund.)
- (5) Deposit a nickel, dime and quarter test coins in coin gauges and have the operator identify each coin deposited. Have the operator apply refund current. Check that the application of refund current causes the loop shorting contacts to close, the microswitch latch to release (see Figure 1), and the coin relay armature to operate to the refund side.
- (6) Redeposit the nickel. Have the operator apply collect current. Check that application of collect current causes the loop shorting contacts to close, the microswitch latch to release (see Figure 1), and the coin relay armature to return to the collect side.
- (7) Have the operator disconnect. Hang up coin telephone handset.
- (8) Restore coin telephone to operating condition.