



NOTES:

1. IF THE RINGER VOLUME OF GI-TYPE RINGER IS INSUFFICIENT IN A PARTICULAR LOCATION, DISCONNECT, INSULATE, AND STORE THE (R) AND (BK) LEADS OF THE RINGER AND CONNECT A 687A SUBSCRIBER SET AS SHOWN.
2. (S) AND (S-R) RINGER LEADS ARE PROVIDED ONLY ON GIA RINGER AND ARE INSULATED AND STORED.

† NETWORK TERMINALS

DP	DIAL PULSE CONTACTS
DS	DIAL SHORTING CONTACTS
HT	HOPPER TRIGGER CONTACTS
SH	SWITCH HOOK CONTACTS
ON	OFF NORMAL CONTACTS