



MANUFACTURING NOTES:

- 1-"X" CONTACTS TO MAKE FIRST AND BREAK LIST.
- 2-IF BELLS OF BIASED RINGER TAP WHEN DIALING FROM ANOTHER TELEPHONE ON THE LINE REVERSE RINGER CONNECTIONS AT TERMINALS 15 & 16 OF TRANSMISSION UNIT. (NOTE 3)
- 3-WHEN SATT DIALS OR AMI SERVICE ARE USED, DO NOT REVERSE LINE OR RINGER LEADS; POLARITY OF LINE MUST BE MAINTAINED AS SHOWN IN TABLE "A". SPOTTER SPRINGS TO OPERATE WHEN PULSING SPRINGS ARE CLOSED.
- 4-IF NO DIAL IS USED, STRAP TERMINAL 11 TO TERMINAL 1 OF TRANSMISSION UNIT.
- 5-WHEN MESSAGE WAITING LAMP IS USED, CONNECT ACROSS TERMINALS B AND TO OF TRANSMISSION UNIT.
- 6-LINE CORD AND TERMINAL BLOCK PROVIDED WITH DESK INSTRUMENT ONLY.
- 7-USED WITH LIGHTED DIAL VERSION ONLY.
- 8-FOR "ANI" SERVICE-TIP PARTY IDENTIFICATION WHEN NO RINGER IS USED:
A-FOR 2650 OHM INDUCTIVE MARK, USE D-284686-A WIRE AS FOLLOWS:
BLACK LEAD TO TERMINAL 21
GREEN LEAD TO TERMINAL 9
RED LEAD-TAPE & STORE
B-FOR 3000 OHM RESISTIVE MARK (DIAL-OFF NORMAL) REFER TO DRAWING H-88542.

Type 192A Telephone Set, NC-920 Series, Equipped with Rotary Dial, Schematic and Wiring Diagrams.