



- NOTES:
1. X CONTACTS TO MAKE FIRST AND BREAK LAST.
 2. IF BELLS OF BIASED RINGER TAP WHEN DIALING FROM AN INSTRUMENT WITH LINE COIL CONNECTIONS AT TERMINALS 13 AND 16 (NOTE 3).
 3. WHEN MESSAGE WAITING LAMP IS USED, CONNECT MESSAGE WAITING TERMINALS 8 AND 10 OF TRANSMISSION UNIT.
 4. LINE COIL AND TERMINAL BLOCK PROVIDED WITH DESK INSTRUMENT ONLY.
 5. Y CONTACTS OF COMMON SWITCH BREAK FIRST.

Type 192A Telephone Set (NC-920 Series) with Type 12C Touch Calling Unit, Schematic and Wiring Diagrams.