

REMOVAL & INSTALLATION INSTRUCTIONS
FOR
STROMBERG-CARLSON NUMBER CARD HOLDERS
USED WITH METAL S-C FINGERWHEELS

Note: The number card holders used with S-C metal fingerwheels use a **3 tabbed transparent plastic card holder**. Use caution when removing and installing the holder.

Figure 1 shows the card holder in place on a S-C metal fingerwheel:

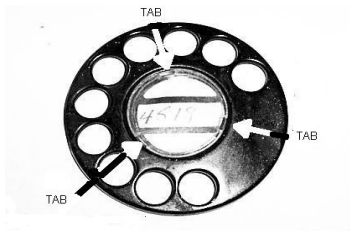


FIGURE 1

S-C Metal Fingerwheel with card cover in place.

Figure 2 shows how to remove the card cover. The cover is held by a 3-prong spring washer, and will require a miniature screwdriver or similar item to loosen tabs on the card holder. Figure 1 also shows the tab locations.



FIGURE 2

There are three indentations on the holder's edge where the tabs are, about 120 degrees apart. {indicated by arrows} Pry with a miniature screwdriver at each of the tabs in a gradual motion, moving each tab up slightly until the card holder is up far enough to remove by grasping and lifting it with your fingers

DO NOT TRY PRYING THE WHOLE CARD HOLDER BY RAISING ONE TAB THEN PRYING UNDER THE CARD HOLDER. THIS CAN DAMAGE THE HOLDER.

NOTE: The spring washer you'll see helps retain the card holder when it's installed.

REMOVAL & INSTALLATION INSTRUCTIONS
FOR
STROMBERG-CARLSON NUMBER CARD HOLDERS
USED WITH METAL S-C FINGERWHEELS

TO REPLACE NUMBER CARD HOLDER:

1. Seat card holder over center of metal fingerwheel with tabs aligned to the slots in the fingerwheel.
2. Gently depress card holder at top, then at the other tabs. If necessary, use small screwdriver to help seat tabs.
3. When finished, the top of the card holder should be even (flush) with the fingerwheel top.