

Stromberg -Carlson Number Card Removal Instructions

The following instructions will show how to remove the number card ring and number card from Stromberg-Carlson "C" and "D" Type dials equipped with polycarbonate fingerwheels.

The first picture shows the assembled fingerwheel. {The numeral ring is omitted for clarity}



FIGURE 1: Assembled SC Fingerwheel with number card ring
And card/window



FIGURE 2: TO REMOVE NUMBER CARD RING:

1. Place tip of screwdriver blade under notch in number card ring.
{as shown at left}
2. Gently pry and twist screwdriver in slot.
3. Card ring will pop up from center of fingerwheel.
4. Lift card ring off, exposing number card and clear window.

TO RE-INSTALL NUMBER CARD & RING:

1. Place number card on center of fingerwheel.
2. Place clear plastic card window over number card.
3. Place card ring over fingerwheel center with notch in ring facing right.
4. Press card ring into place using firm pressure on alternate sides until ring settles into place on fingerwheel.

Below is a picture of the number card ring, showing the notch:



SC Polycarbonate Fingerwheel Number Card
Retainer Ring (Chrome Finish)



Bell System type number cards will fit the SC number card ring as well as AE type Number card rings.

NOTE: Images of fingerwheel are "grayed" to permit view of fingerwheel and card retainer. The actual fingerwheel is clear in color.