



STROMBERG-CARLSON CORPORATION
S-C 500D / S-C 554B TELEPHONE
WIRING DIAGRAM

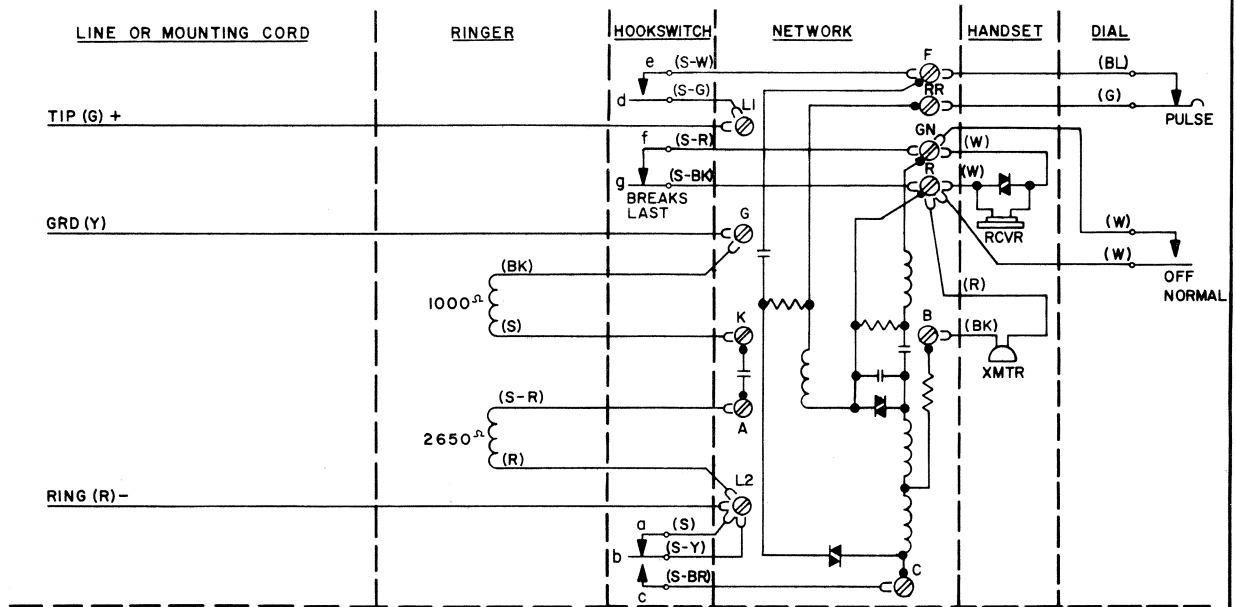

SERIES 12 OR S-C C4A1 RINGER

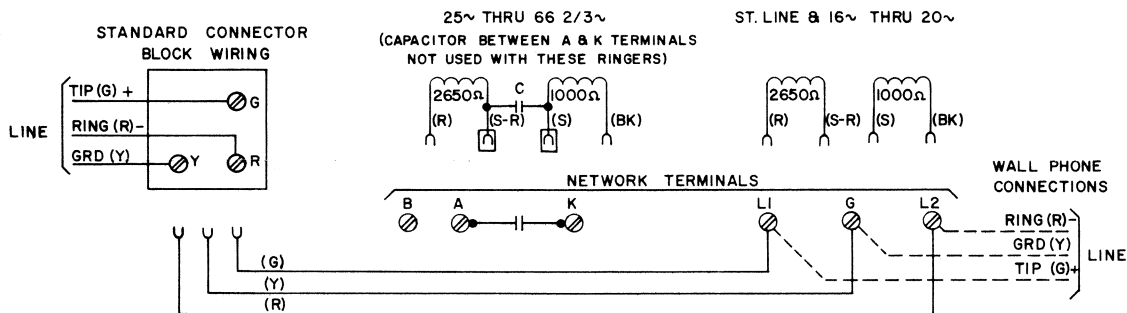

LINE AND RINGER CONNECTIONS							
WIRE OR LEAD	COLOR	INDIVIDUAL OR BRIDGED	RINGER PARTY	TIP PARTY NO IDENT TO GRD	TIP PARTY IDENT TO GRD		
					1000 Ω	2650 Ω	
ST LINE, 16 THRU 20~ RINGER LEADS	R	L2	L2	L2	K	B	
	BK	L1	G	G	G	B	
	S	K	K	K	B	K	
	S-R	A	A	A	B	G	
25 THRU 66 2/3~ RINGER LEADS	R	L2	L2	L2	A	G	
	BK	L1	G	G	G	A	
	S	STORE	STORE	STORE	B	STORE	
	S-R	STORE	STORE	STORE	STORE	B	
HOOKSWITCH LEAD		S	L2	L2	L2	A	A
DESK MTG CORD AT CONNECTING BLOCK	R	R	R	G	G	G	
	G	G	G	R	R	R	
	Y	G	Y	Y	Y	Y	
WALL LINE WIRE AT NETWORK	RING -	R	L2	L1	L1	L1	
	TIP +	G	L1	L2	L2	L2	
	GRD	Y	G	G	G	G	

NOTES:

1. FOR MANUAL SERVICE, REPLACE DIAL WITH APPARATUS BLANK AND ADAPTOR AND TRANSFER (S-W) SWITCH LEAD FROM TERMINAL F TO TERMINAL RR ON NETWORK.
2. FOR SUPERIMPOSED RINGING WITH 426A OR 425A TUBES OR 703025-298 DIODE ASSEMBLY, SEE WIRING DIAGRAM 200843-100.
3. FOR FOUR PARTY IDENTIFICATION SERVICE (WITH FREQUENCY RINGER ONLY) CONNECT IDENTIFICATION ASSEMBLY BETWEEN NETWORK TERMINAL B AND RINGER. IDENTIFICATION ASSEMBLY AND INSTRUCTIONS MAY BE FOUND IN PACKAGE ASSEMBLY 206287-841.
4. TO PERMANENTLY SILENCE RINGERS:
 - A. FOR ALL SERVICES EXCEPT 2650 Ω TIP PARTY IDENTIFICATION, DISCONNECT (R) RINGER LEAD, INSULATE AND STORE.
 - B. FOR 2650 Ω TIP PARTY IDENTIFICATION ONLY, DISCONNECT (S) RINGER LEAD, INSULATE AND STORE.
5. FOR ADDITIONAL INSTRUCTIONS REFER TO TECHNICAL MANUAL.