





MAGNETO SWITCHBOARD ABJ 101

Operator's instruction

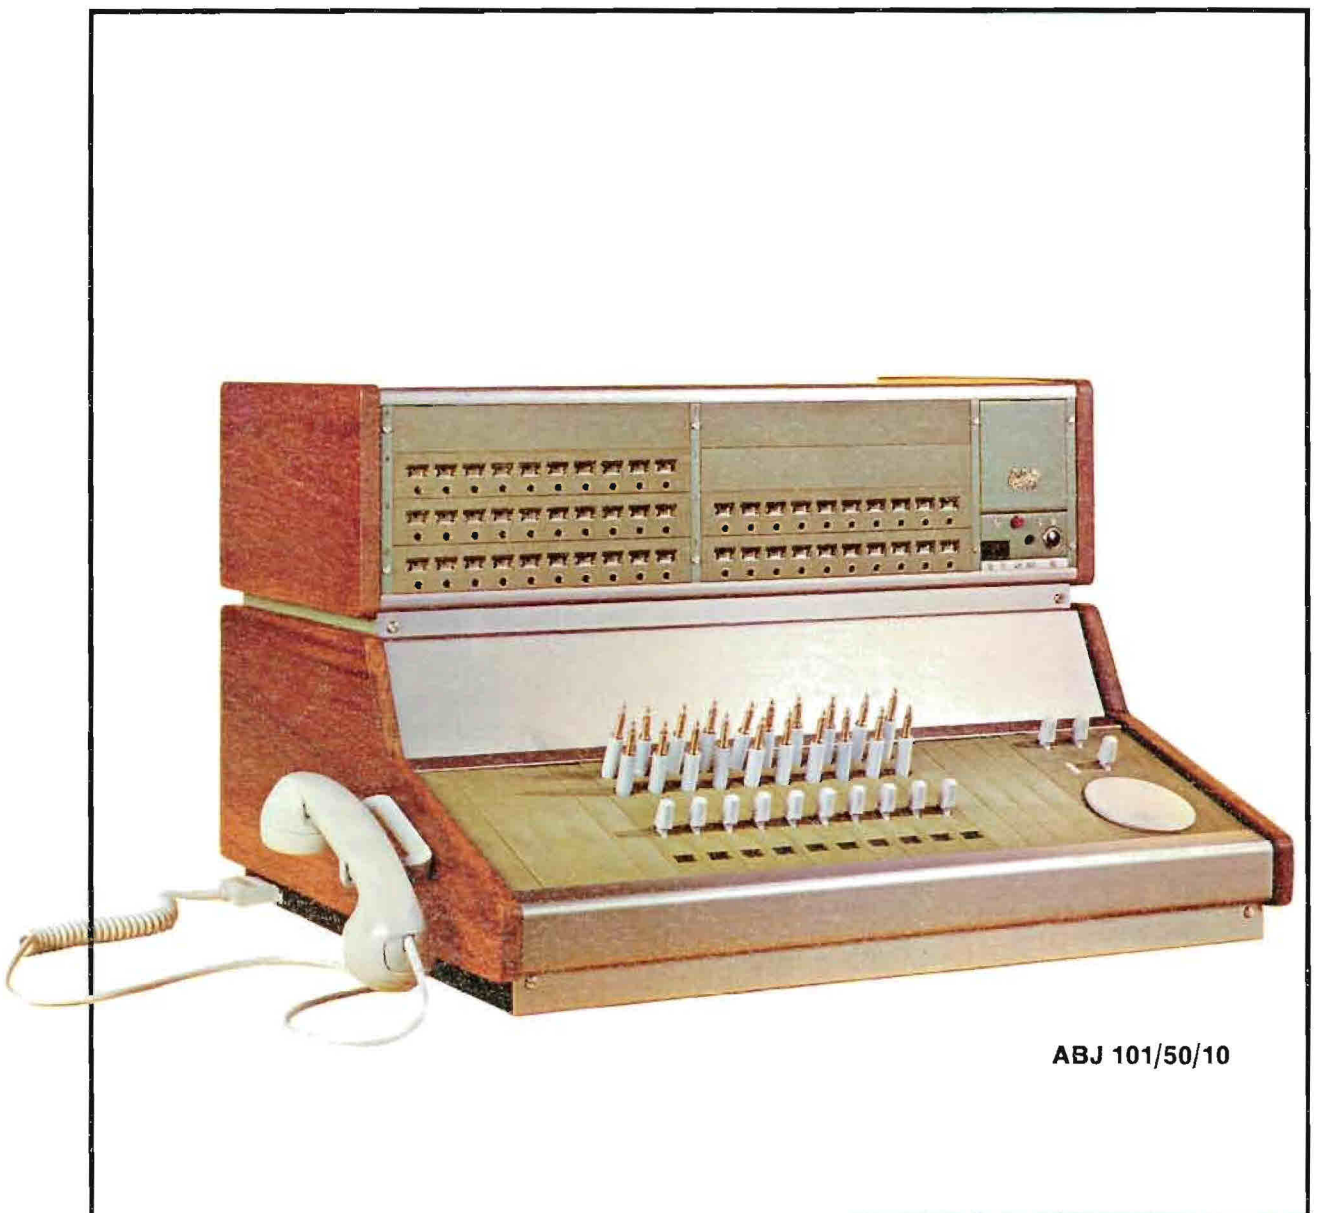

Line units

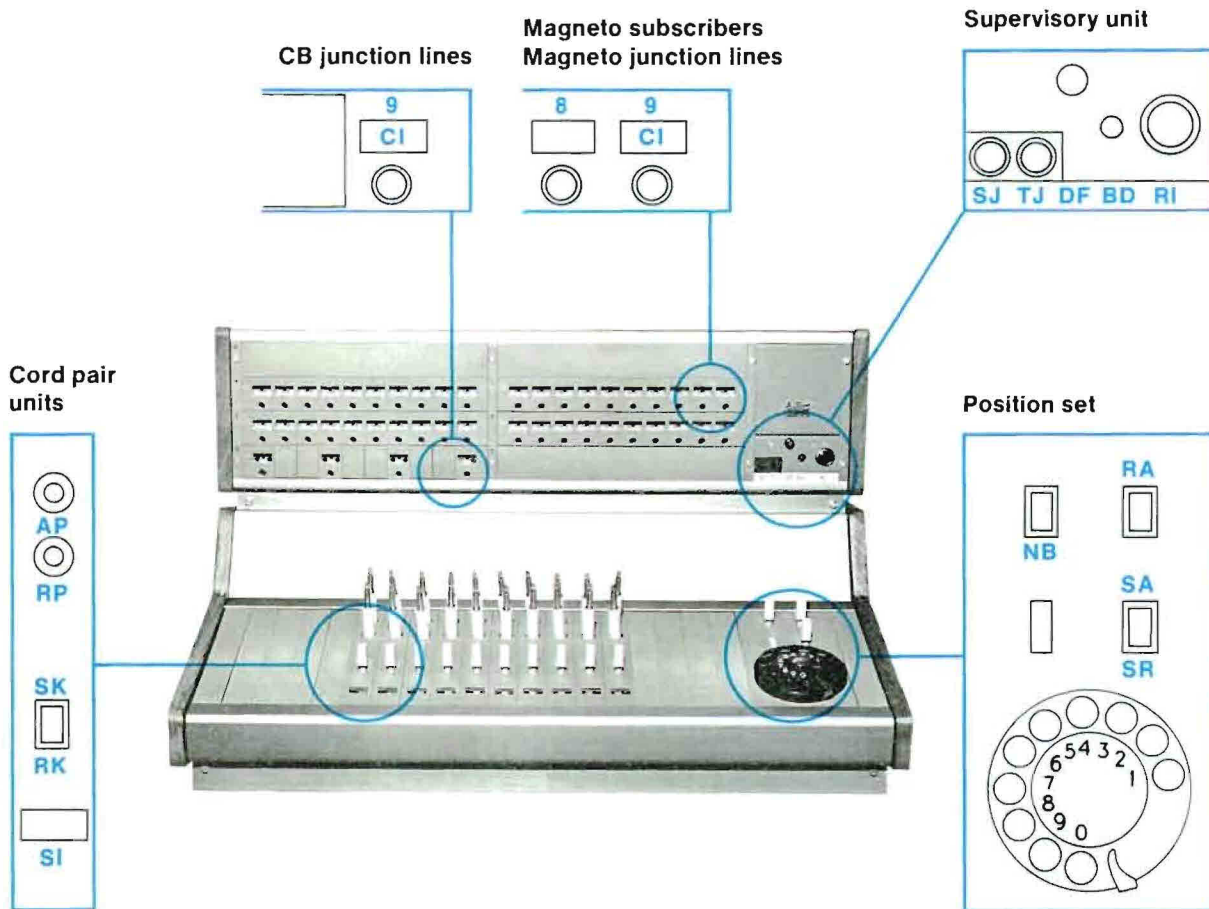

Line unit

CI Call indicator

Cord pair unit

AP Answering cord with which calls are answered
 RP Ringing cord with which ringing signals are sent
 SK-RK Key with 3 positions—speaking position SK (towards the line jack field) and ringing position (away from the line jack field)
 SI Supervisory indicator

Position set

NB Night buzzer key for connection of a steady audible signal in parallel with call and supervisory signals
 RA Ringing over the answering cord AP

—ringing backwards

SA Call via the answering cord—ringing cord RP is blocked
 SR Call via the ringing cord—answering cord AP is blocked

Supervisory unit

SJ Supervisory jack—with which a line can be supervised (monitored) while other calls are handled
 TJ Test jack—for checking the state of the cords
 DF Distribution fuse (automatic)
 BD Battery discharged—a battery indicator which lights when the battery is to be exchanged (or charged)
 RI Ringing indicator—indicates with a white field in step with the sent ringing signals

