

MANUAL BOARD EXPLANATORY ONLY

NOTES:-

1. FUSE:- 1.5A PER CIRCUIT.
2. Ø FOR WIRING SEE GBW10640 OR EQ.11V.
3. ALL WIRING TO BE 2.5 SWG UNLESS OTHERWISE SPECIFIED
4. SHELF JACK 'U' POINTS 9 & 11 AND 14 & 16 TO MAKE CONTACT WHEN RELAY SET IS REMOVED.

BATT FUSE BK 22 SWG U12
EARTH FUSE BK 22 SWG U11
BATT. W. - U12-D2-H6-S2-R46-R56-R16-R66
EARTH. R. - U11-I6-D2-H23-H5-S21-S4-S3-C3a

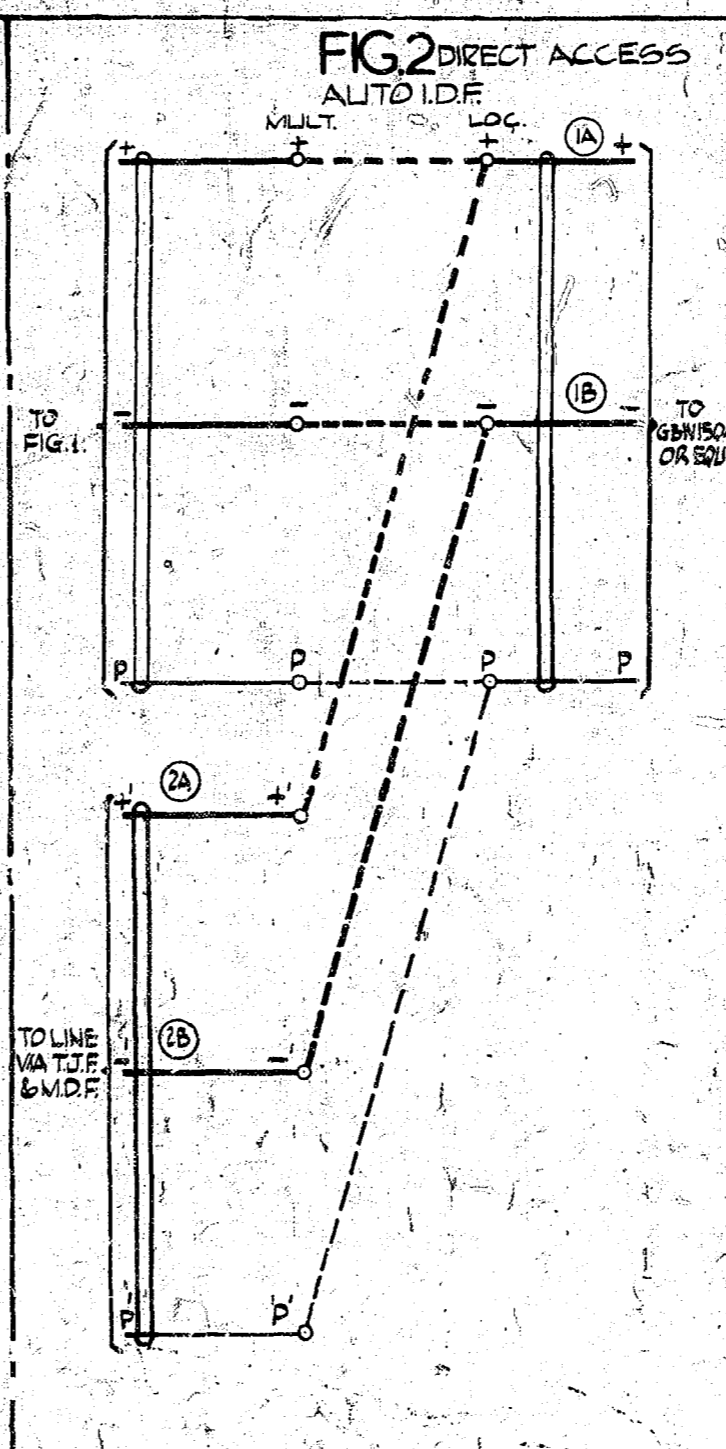


FIG. 2 DIRECT ACCESS AUTO I.D.F.

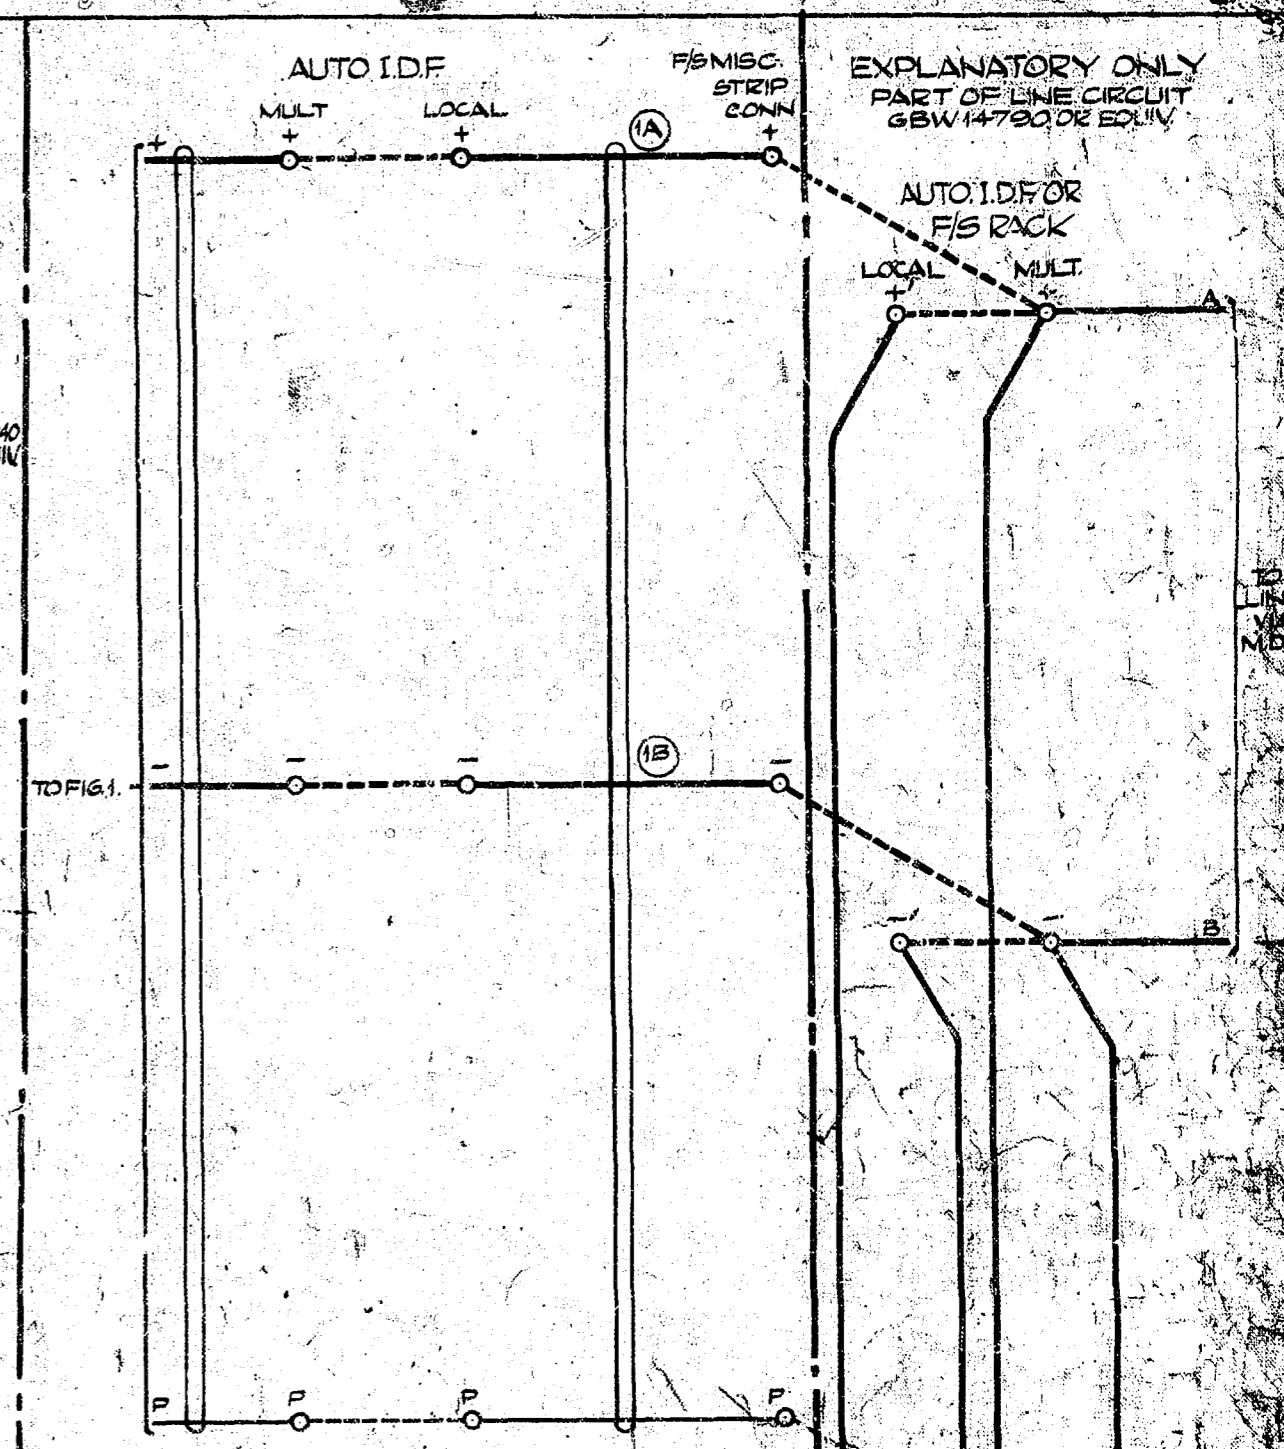


FIG. 3 JOINT ACCESS AUTO I.D.F.

EMERGENCY SERVICE DIRECTOR JOINT ACCESS CIRCUIT

0.05 CONDENSER C3 REDESIGNATED C4.	(8720)	B	15.10.68	
RING TONE SUPPLIED VIA 0.05 UF CAPACITOR FROM RINGING SUPPLY.	(89186)	A	24.9.68	
AMENDMENT PARTICULARS				
ISSUE	DATE	APPD	REF	SIZE
NZPO	CE 93/976	DRAWN K.B.	CHECKED R.K.	CIRCUIT

GBW 14993 MOD A