




## 6 simple steps to restore relay ....

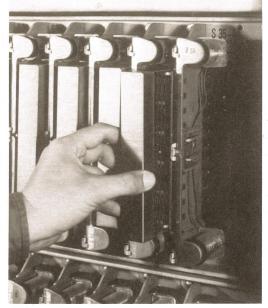

1 Remove cover of defective relay.

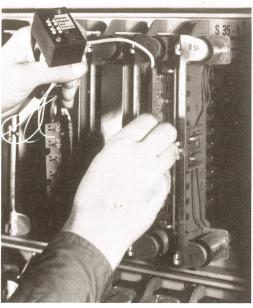


2 Insert contact boards between contacts.

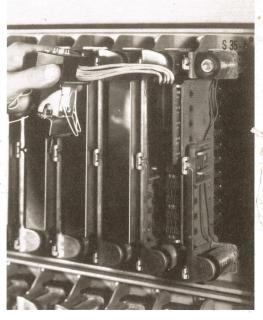


3 Detach armature flapper.



Detach leads and remove existing coil.

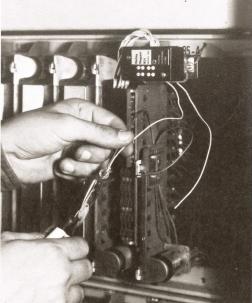

5 Install replacement coil in same location.

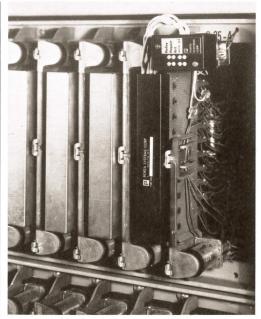

**6** Substitute specially designed slotted cover for original.

The Relay Repair Kit is available in four models, for upper or lower half of the following relays:

Upper or lower half of 30 contact relay — Model 883 (15 contacts)

Upper or lower half of 40 contact relay — Model 884 (20 contacts)

Upper or lower half of 50 contact relay — Model 885 (25 contacts)

Upper or lower half of 60 contact relay — Model 886 (30 contacts)