BELL SYSTEM PRACTICES
Station Installation and Maintenance

SECTION C65.114 Issue 2, 1-15-42 AT&T Co Standard

## TELEPHONE SETS

## FOR SUBSCRIBERS WITH IMPAIRED HEARING 334 TYPE—CONNECTIONS

## 1. GENERAL

1.01 This section covers the connections for the 334 type telephone set (combined set with mechanical amplifier for subscribers with impaired hearing) which may be used at tip party stations on

## Two-Party Selective Dial Message Rate Lines

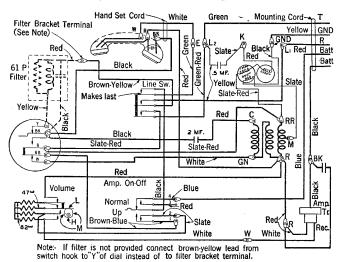


Fig. 1-334 Type Telephone Set-Connections

- 1.02 The Blue and Black conductors of the mounting cord are the local battery supply leads for the amplifier. This battery may be poled either way.
- 1.03 If for any reason it is desired to permanently silence the ringer at a tip party station employing the 334 type set, disconnect the Red ringer lead from the K terminal and connect it to the RR terminal of the induction coil.

Caution: The Slate and Black ringer leads shall always be connected as shown in Fig. 1.

1.04 Although the 332 type telephone set is normally used at ring party stations for those with impaired hearing, the 334 type set may be used by making connections as follows:

Green mounting cord conductor to RR

Green-Red conductor from plunger contacts to RR

Yellow conductor from condenser to L1

Slate and Slate-Red conductors from ringer to L2

- 1.05 If for any reason it is desired to permanently silence the ringer of a ring party station employing the 334 type set, connect both Red and Black ringer leads to the K terminal.
- 1.06 The sets come wired so that the amplifier is connected when the right-hand plunger is in the normal position with the hand set removed and disconnected when it is raised. If it is desired to have the amplifier disconnected when the plunger is normal and connected when it is raised, connections should be changed as indicated in Table 1.

Table 1
Terminals on Strip Adjacent
to Spring Pileup

Amplifier On	to Spring Pileup			
	1	2	3	4
Plunger Normal	Brown-Blue	Slate		Blue
Plunger Raised	Blue		Slate	Brown-Blue

Note: Bold face type indicates connections that must be changed in the set as furnished.