BELL SYSTEM PRACTICES Plant Series

RECEIVERS AND RECEIVER HOLDERS

1.00 INTRODUCTION

1.01 This section covers the use of receivers, receiver units, auxiliary receivers, and holders. The bone conduction receiver, used when the customer with impaired hearing requires transmission of sound through the bone, is covered in the section entitled KS-14720, List 2 Headset (Bone Conduction Receiver). **1.02** Due to extensive changes marginal arrows have been omitted.

2.00 GENERAL

2.01 Table A furnishes information on receivers used in station equipment.

TABLE A RECEIVERS

	Use	Components			
Receiver		Receiver			Replaces Receiver
		Unit	Holder	Headband	
706A	With deskstands, coin collec- tors, and wall sets	HA1			144A
716A	Part of 716D and 716E re- ceivers	HA1	11A		528
716B		HA2	11A		528
716C	With type 17, 55A, and 63A test sets; also for use at central office and PBX switchboards or stations	HA4	11A		525
716D*				11A	528
716E†				11A	528
716F	1 ¹¹	HA3	11A	11A	
717A	In multiple with regular hand receiver at subscriber sta- tions. See 3.02	HA4	11B		146A
718B	In connection with subscriber set	HA1	11C	-	559A
723A	Primarily intended for oper- ators	HC3	12A		528

* Consists of a 716A receiver with an 11A headband.

† Consists of a 716B receiver with an 11A headband.

SECTION 501-220-100

2.02 Table B furnishes information on receiver units used in station equipment.

3.00 INSTALLATION OF AUXILIARY RECEIVERS AND HOLDERS

3.01 Table C shows the types of receiver holders and their use.

3.02 The 717A receiver covered in Table A may be used as an auxiliary receiver to supplement the regular receiver on telephones installed at exceptionally noisy locations.

3.03 Auxiliary receivers and receiver holders should not be installed without a service order or other proper authorization.

TABLE B

Receiver Unit	Use	Remarks	Impedance at 1000 cycles
•			ohms
HA1			187
HA2			300
HA3	Part of handsets and receivers		635
HA4			2238
HA6		Moisture resistant	187
HC1		Mfr Disc.	4 n n
HC2		Mfr Disc.	
HC3	Part of No. 52A, B, and D head telephone sets	Replaces HC1*	300
HC4	Part of No. 52C head telephone set	Replaces HC2*	650
HC5	In F-type handsets where trans- mission improvement is required	Has terminal plate similar to HA-type unit. Provided with adapter for mounting in F-type handsets	300
Ú 1	In F4-, F5-, and G-type handsets in ordinary station applications	Equipped with a No. 44A varistor to reduce clicks and protect the	150
U2	In F4-, F5-, and G-type handsets with private wire arrangements	magnet against demagnetiza- tion. Has screw-type terminals	600

RECEIVER UNITS

* Provided cap No. P-461464 is also substituted.

: 11


TABLE C

Receiver Holder	Description	Remarks	
8A.	Black-finished metal holder	Used with D-type handset mount- ings, with 717A receiver	
10A	Black plastic case, without cap, arranged to attach transmitter arm and 15-type headband	Used with HC3 or HC4 receiver unit on 52-type head telephone set, provided cap P-461464 is used also	
11	Black plastic case and cap arranged for HA-type receiver unit		
11A	Arranged to attach 11A headband	Part of 716A and B receivers	
11B	Arranged with manually operated switch	Part of 717A receiver	
11C	Arranged with hanger to hang up receiver holder	Part of 718A receiver	
12A	Molded plastic case designed for HC3 receiver unit and arranged for use with 15-type headband	Used as a component of 723A receiver	

RECEIVER HOLDERS

3.04 Auxiliary receivers should be connected on the same terminals as those used for regular receiver connections. Where more than three cord tips would be connected to a single screw terminal, two of the cords which would normally be connected to such a terminal should, if possible, be transferred to another terminal and be connected by a strap or M1W cord.

3.05 The 8A receiver holder should be installed on D-type handset mounting as shown in Fig. 1.

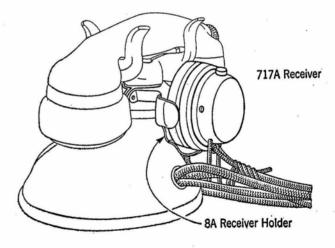



TCI Library: www.telephonecollectors.info