


CODED TOOLS

520A TO 527 A

DESCRIPTION

→520A "MFR DISC."←


521A

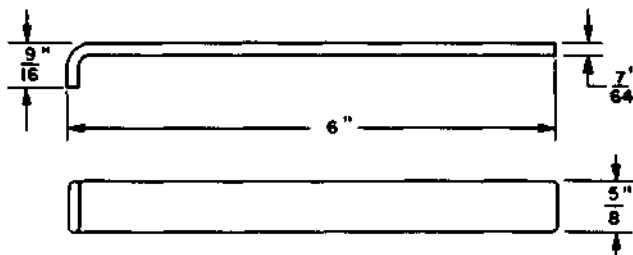

Offset screwdriver.

For use on friction roll drives.


522A

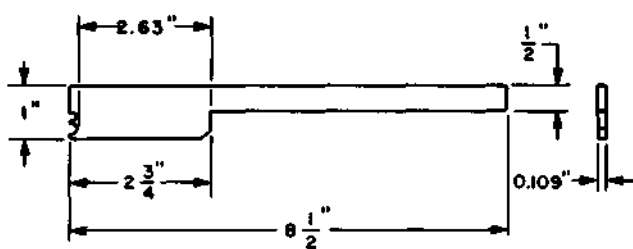

Partition releaser.

For use in removing partitions from information desk book racks.


524A

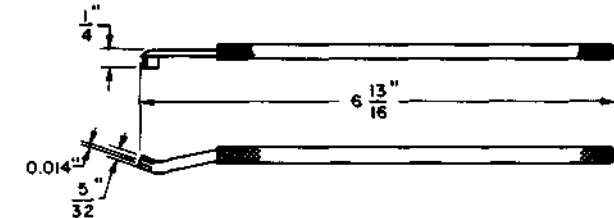

Spring adjuster.

For use on 245, 254, 263 and 264 type relays.


524B

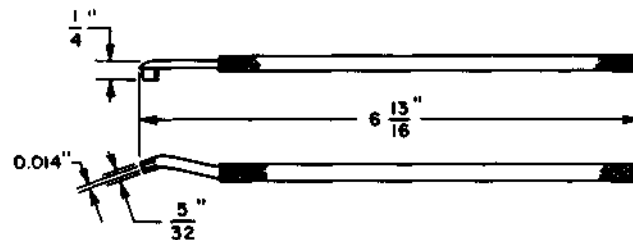


Spring adjuster.

For use on 245, 254, 263 and 264 type relays.

526A

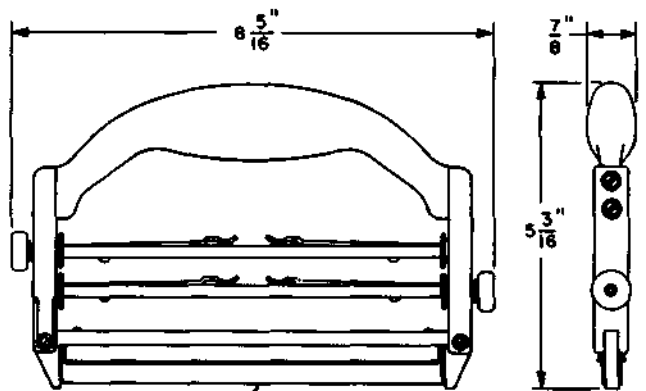

P-470547 CUSHION

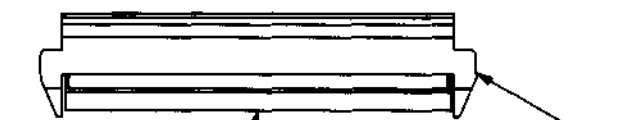


P-472456 CUSHION

Treating tool.

For holding an oiled cloth used in cleaning and treating terminals of 40 and 100 point panel banks.

527A

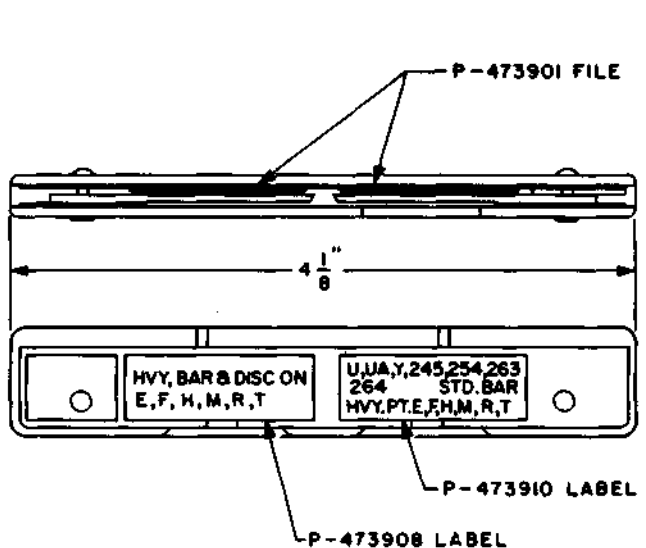

Build-up remover.

527A (cont)

The procedure for removing the P-473901 File from the Mask of the tool is outlined in Section 069-306-801 covering cleaning procedures for relay contacts and parts.

For use on relay contacts.