SPEAKERPHONE SYSTEM—3-TYPE 558-, 1558-, AND 2558-TYPE TELEPHONE SETS CONNECTIONS AND MAINTENANCE


1. GENERAL

- 1.01 These sets are supplied factory-wired for use with 3-type speakerphone. Refer to Division 502 for complete telephone set wiring schematics.
- 1.02 This section is reissued to:
 - Include information on 1558- and 2558-type telephone sets
 - Show 1558D set MD

1.03 ♦Information on the 1558-type sets was formerly found in Section 512-621-413 and 2558-type in Section 512-622-413 which are hereby canceled.

2. MAINTENANCE

2.01 For maintenance information refer to the appropriate Reference section for the 558-, 1558-, and 2558-type sets located in Division 502. Refer to Division 512 for maintenance of speakerphone components used with these sets.

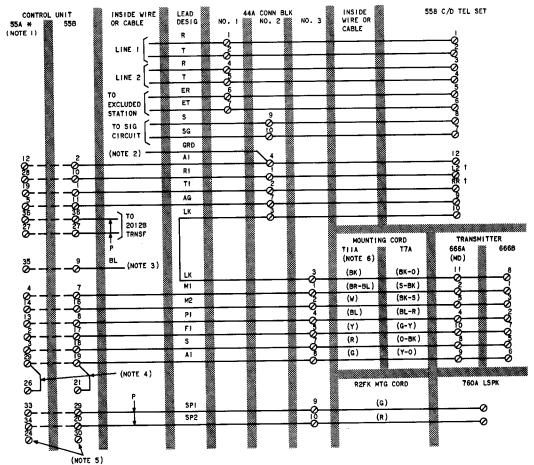

NOTES:

- NOTES:

 1. MODIFIED FOR "TOUCH-TONE" USE.

 2. CONNECT TO LOCAL GROUND OR TO AI FOR KTS USE.

 3. TO BUSY LAMP CONTROLLED BY SPEAKERPHONE.


 4. ADD STRAP FOR BUSY LAMP CONTROLLED BY SPEAKERPHONE ONLY.

 5. FOR REDUCED LOUDSPEAKER VOLUME, CONNECT SPI LEAD TO TERMINAL 24 (55A) OR 30 (55B).

 6. INSULATE AND STORE UNUSED LEADS.

- 1 NETWORK TERMINAL

Fig. 1—558C/D Telephone Set Connections to 3-Type Speakerphone System

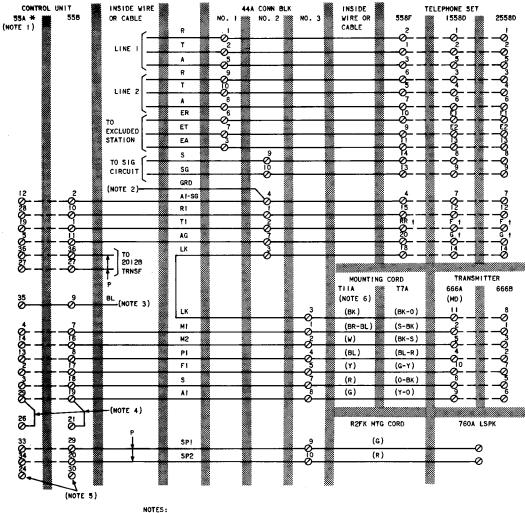

- NOTES:

 1. MODIFIED FOR "TOUCH-TONE" USE.

 2. CONNECT TO LOCAL GROUND OR TO AI FOR KTS USE.

 3. TO BUSY LAMP CONTROLLED BY SPEAKERPHONE.

 4. ADD STRAP FOR BUSY LAMP CONTROLLED BY SPEAKERPHONE ONLY.

 5. FOR REDUCED LOUDSPEAKER VOLUME, CONNECT SPI LEAD TO TERMINAL 24 (55A) OR 30 (55B).

 6. INSULATE AND STORE UNUSED LEADS.

- T NETWORK TERMINAL

Fig. 2—558F, 1558D (MD), and 2558D Telephone Set, Connections to 3-Type Speakerphone System