

# CALL DIRECTOR® TELEPHONE SETS

## SELECTION

### 1. GENERAL

1.01 This section is intended for use as an aid in the selection of a CALL DIRECTOR type telephone set from the codes available, according to the customer's service requirements.

1.02 This section is reissued to revise Tables A, B, C, and D.

1.03 Structure of the coding series is as follows:

(a) The first three digits (rotary sets) or first four digits (TOUCH-TONE® sets) of the code identify the intended functions of each type of set.

(b) The first numerical suffix denotes the complete sequence of keys or options on the front panel.

1.04 For information on the special service options available for CALL DIRECTOR type sets, refer to section in Division 502 entitled 630-, 1630-, and 2630-Series Telephone Sets, Common Installation and Maintenance Information.

### 2. CODE GUIDE

2.01 For available codes and key arrangements, refer to Tables A through D. Sets listed as follows:

- Table A—General Purpose 18-Button Sets
- Table B—General Purpose 30-Buttons Sets
- Table C—Special Purpose 18-Button Sets
- Table D—Special Purpose 30-Button Sets

Both rotary and TOUCH-TONE dial sets are listed.

2.02 The 18-button set comes equipped with an apparatus blank in the last position. The 30-button set comes equipped with an apparatus blank in the last two positions. Additional keys, if required for these positions, must be ordered separately.

2.03 For complete ordering guide and connection information refer to the appropriate Reference or Service section listed in Table F.

◆ TABLE A ◆

18-BUTTON SETS – GENERAL PURPOSE

KEY ARG T	GENERAL USE 1A, 1A1, 1A2, OR 6A KTS
P P B	630DAM1 2630DAM1
P P B	
P P B	
P P B	
P P B	
P P B	
H P B	

◆ TABLE B ◆

30-BUTTON SETS – GENERAL PURPOSE

KEY ARG T	GENERAL USE 1A, 1A1, 1A2, OR 6A KTS
P P P B B	631DAM1 2631DAM1
P P P B B	
P P P B B	
P P P B B	
P P P B B	
P P P B B	
H P P B B	

### NOTICE

Not for use or disclosure outside the  
Bell System except under written agreement

◆ TABLE C ◆

18-BUTTON SETS – SPECIAL PURPOSE

KEY ARGUMENT	CONC 1A1, 1A2 OR 6A KTS	HDS/HNDST 1A, 1A1, 1A2 OR 6A KTS	CONC – HDS/HNDST 1A, 1A2 OR 6A KTS	2/4-WIRE OPERATION 1A1, 1A2 OR 6A KTS
P P B P P B P P B P P B P P B H P B	634DAM1 2634DAM1	636CAM1 2636CAM1	638CAM1 2638CAM1	682AAM1 2682AAM1

◆ TABLE D ◆

30-BUTTON SETS – SPECIAL PURPOSE

KEY ARGUMENT	CONC 1A1, 1A2 OR 6A KTS	HDS/HNDST 1A, 1A1, 1A2 OR 6A KTS	CONC – HDS/HNDST 1A1, 1A2 OR 6A KTS	2/4-WIRE OPERATION 1A1, 1A2 OR 6A KTS
P P P B B P P P B B P P P B B P P P B B P P P B B H P P B B	635DAM1 2635DAM1	637DAM1 2637DAM1	634DAM1 2639DAM1	683AAM1 2683AAM1

TABLE E  
KEY IDENTIFICATION

598A, 656A, 635G5C	599A, 657A, 635A5C	599B, 657B	635AD5C	617A, 658A	59A, 76A	667B, 679A	105A, 111B
P	P	C*	P	SS	LL	OFF	B
P	P	P	P	SS	LL	ON	B
P	P	P	P	SS	LL	T	B
P	P	P	P	SS	LL	V	B
P	P	P	C	SS	LL		B
P	H	H	H	SS	LL		B

Symbols

- B — Apparatus blank.
- C — Push to operate, push to release button for transfer or cut-off services, can be illuminated.
- C\* — Turnbutton for transfer or cutoff services, depressible as release key but is without circuit function, can be illuminated.
- H — Hold key, can be illuminated, button is red plastic.
- LL — Lamp socket, equipped with 51A lamps, located beneath transparent plastic faceplate.
- P — Pickup button, convertible to nonlocking (signaling) operation, can be illuminated.
- SS — Signaling button, nonlocking, nonilluminated.
- OFF — Button of 667B or 679A transmitter. Nonlocking, nonilluminated.
- ON — Button of 667B or 679A transmitter, Nonlocking, illuminated.
- T — Position of transmitter unit in 667B or 679A transmitter.
- V — Volume control potentiometer, nonilluminated, rotatable, 667B or 679A transmitter.

**Note:** Sets equipped with headset jacks have flash and release key buttons located above the dial.  
For example:

	F	R	P	P	B
			P	P	B
			P	P	B
DIAL			P	P	B
			P	P	B
			H	P	B

◆ TABLE F ◆

## ASSOCIATED REFERENCE AND SERVICE SECTIONS

ROTARY SETS		
CODE	REFERENCE	SERVICE
630DAM1 631DAM1	502-601-100	502-610-407 502-610-407
634DAM1 635DAM1 636CAM1 637DAM1 638CAM1 639DAM1 682AAM1 638AAM1	502-601-101	502-610-417 502-610-417 502-610-418 502-610-418 502-610-411 502-610-411 502-610-412 502-610-412
12-BUTTON TOUCH-TONE DIAL		
2630DAM1 2631DAM1	502-603-100	502-612-401 502-612-401
2634DAM1 2635DAM1 2636CAM1 2637DAM1 2638CAM1 2639DAM1 2682AAM1 2683AAM1	502-603-101	502-612-409 502-612-409 502-612-410 502-612-410 502-612-405 502-612-405 502-612-425 502-612-425