


HAND TELEPHONE SETS — 211N, P  
HANG-UP TYPE — COMMON BATTERY — CONNECTIONS  
WITH NETWORK TYPE SUBSCRIBER SETS

1.00 INTRODUCTION

This section covers the circuit diagram and connections for 211N, P hang-up type hand telephone sets when used with network type subscriber sets for manual or dial common battery service.

2.00 GENERAL

The 211N, P type sets are used with 1A, 1A1, and 3A speakerphone systems. They may be used for all classes of service except in dial central offices where tip-party stations of 2-party service require tip-party identification.

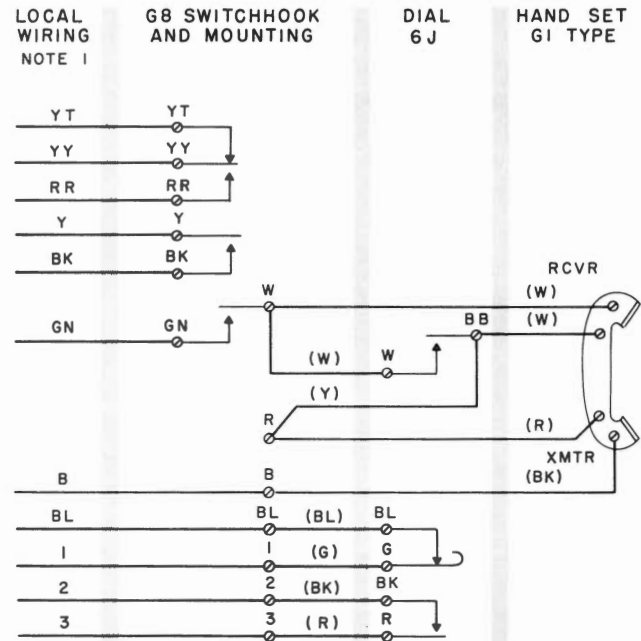

**Note 1:** For connection to associated apparatus, refer to Table A and the appropriate C Section.

**Note 2:** The 211-type set is arranged for, but not equipped with, a 61M filter for radio-frequency suppression. When this filter is required, remove lead from G of the dial and terminal 1 of the switchhook and connect filter as shown in Table B.

**Note 3:** For speakerphone connections, refer to C Section covering speakerphone connections.

TABLE A  
ASSOCIATED APPARATUS

Class of Service	Subscriber Set
Individual Lines 2-Party Flat Rate 2-Party Message Rate (Ring Party Only) 4-Party Semiselective Multiparty Divided Code Regular PBX Stations 750A and 755A Keyless Stations	685A
4-Party Full Selective 8-Party Semiselective	686A

**Note:** No message rate or tip-party identification can be provided for tip-party station.

TABLE B  
61M FILTER (CONNECTIONS)

Filter Leads	Filter Lead Termination
BK	BL of Dial
Y	G of Dial
R	1 of Switchhook

Fig. 1 — 211N, P Hand Telephone Sets