


TELEPHONE SETS—500A, B AND 501A, B

COMMON BATTERY — CONNECTIONS

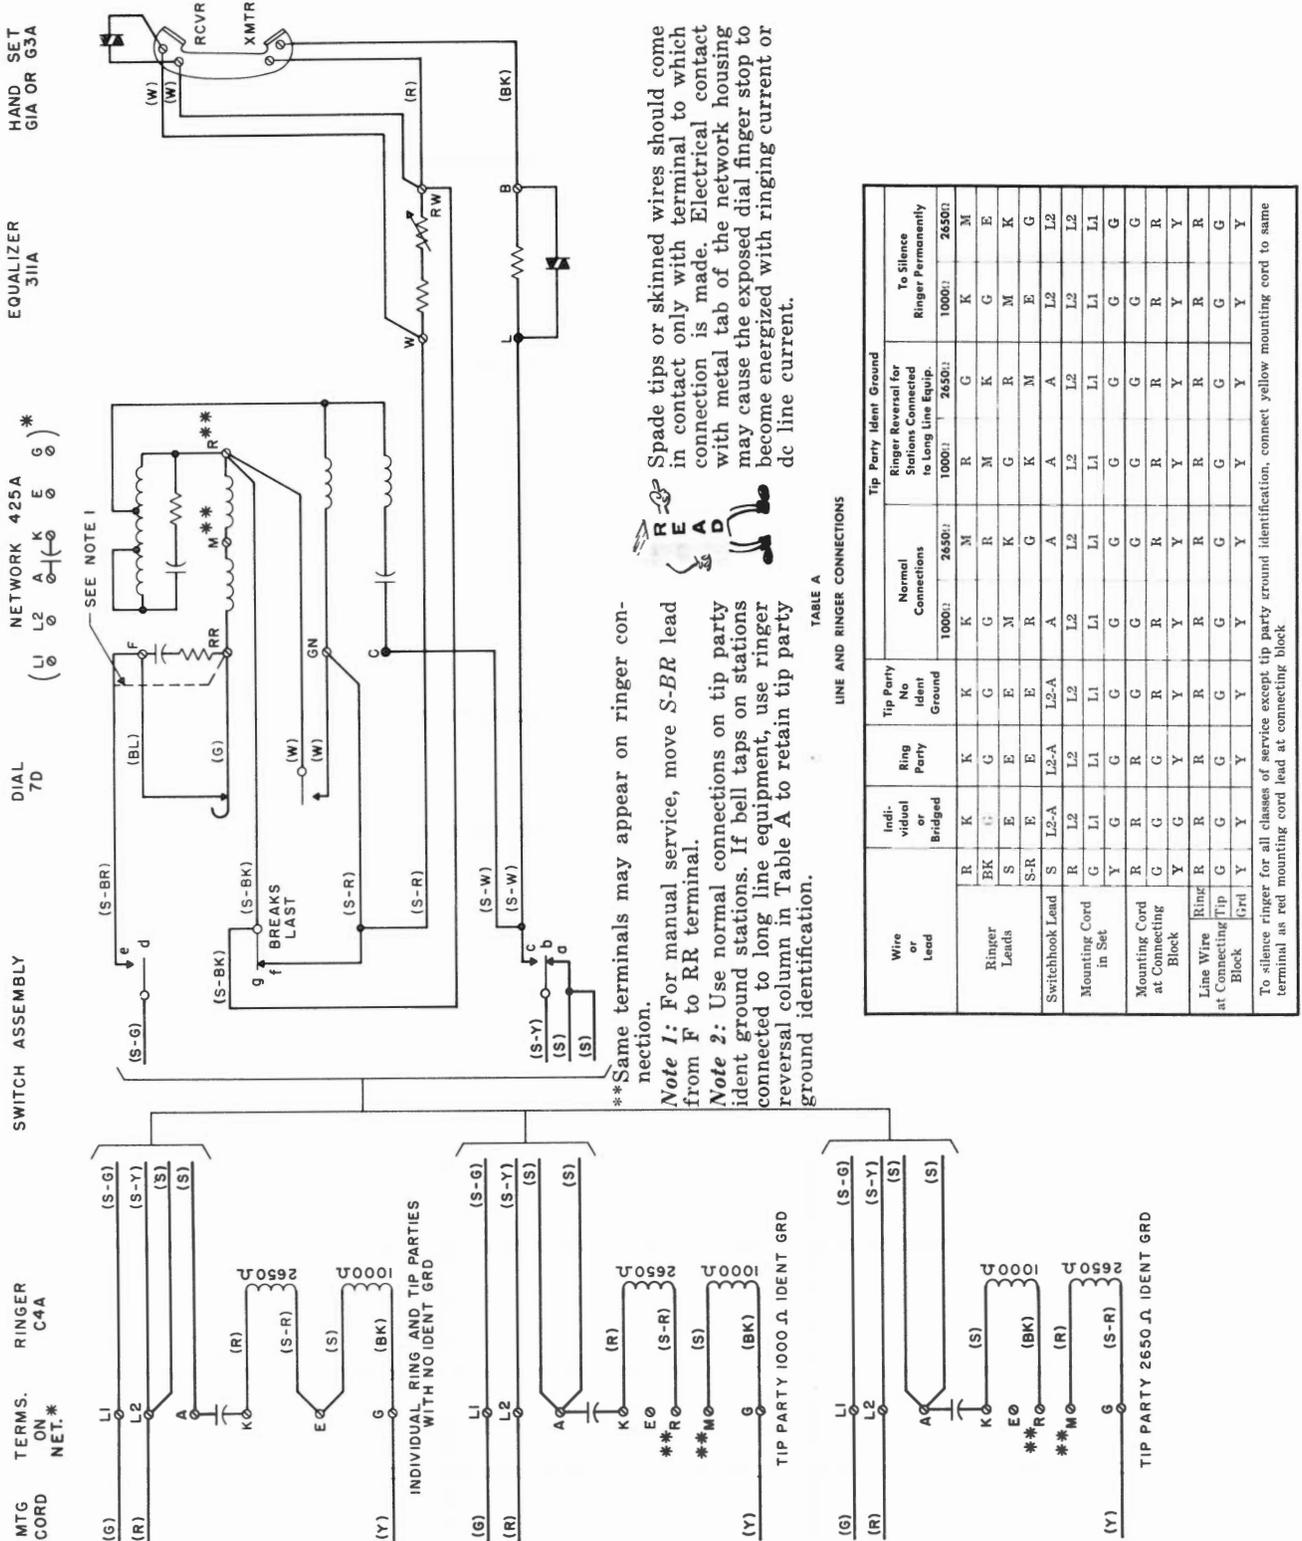

Spade tips or skinned wires should come in contact only with terminal to which connection is made. Electrical contact with metal tab of the network housing may cause the exposed dial finger stop to become energized with ringing current or dc line current.



TABLE A
LINE AND RINGER CONNECTIONS

Wire or Lead	Indi-vidual or Bridged	Ring Party	Tip Party No Ident Ground	Normal Connections		Tip Party Ident Ground		To Silence Ringer Permanently	
				1000Ω	2650Ω	1000Ω	2650Ω	1000Ω	2650Ω
Ringer Leads	R, BK, S, S-R	K, G, E, E	K, G, E, E	K, M, R, G	M, R, K, G	R, M, K, G	R, M, K, G	K, G, E, E	K, M, E, G
Switchhook Lead	S	L2-A	L2-A	A	A	A	A	L2	L2
Mounting Cord in Set	B, G, Y	L2, L1, G	L2, L1, G	L2, L1, G	L2, L1, G	L2, L1, G	L2, L1, G	L2, L1, G	L2, L1, G
Mounting Cord at Connecting Block	R, G, Y	R, G, Y	R, G, Y	R, G, Y	R, G, Y	R, G, Y	R, G, Y	R, G, Y	R, G, Y
Line Wire at Connecting Block	R, G, Y	R, G, Y	R, G, Y	R, G, Y	R, G, Y	R, G, Y	R, G, Y	R, G, Y	R, G, Y

Fig. 1 — 500A, B Telephone Set

