TELEPHONE SETS—304A, C; 5304C CONNECTIONS

NOTICE

This document is either
AT&T - Proprietary, or WESTERN
ELECTRIC - Proprietary

Pursuant to Judge Greene's Order of August 5, 1983, beginning on Jenuary 1, 1984, ATST will cesse to use "Bell" and the Bell symbol, with the acceptions as set forth in that Order. Pursuant thereto, any reference to "BELL" and/or the BELL symbol in this document is hereby deleted and """.

TABLE A
RINGER LEAD CONNECTIONS TO SILENCE RINGER PERMANENTLY

Class of Service		Ringer Leads			
		R	BK	S	S-R
Ring Party	or Bridged / — Flat Rate	K	K	E	Е
Tip Party	Message Rate Zone Registration XBR with AMA	K	GRD	M	к
Tip Taley	SXS with AT SXS with AMA Mod XBR with AMA	M	K	K	GRD

TABLE B
LINE AND RINGER CONNECTIONS

		Tip Party Identification Ground					
Wire or Lead		Normal	Connection	Ringer Reversal When Con- nected to Long Line Equipment			
		Message Rate Zone Registration XBR With AMA		Message Rate Zone Registration XBR With AMA	Flat Rate SXS With AT SXS With AMA XBR With AMA		
Mounting		R	L1	L1_	L1	L1	
Cord		G	L2	L2	L2	L2	
In Set		Y	GRD	GRD	GRD	GRD	
Ringer		R	K	M	RR	GRD	
		BK	GRD	RR	M	K	
Leads	=		M	K	GRD	RR	
		S-R	RR	GRD	K	M	
Ringing Capa- citor Lead		Y	L2	L2	L2	L2 .	
		S	K	K	K	K	
Switchhook L	Switchhook Lead		L2	L2	L2	L2	
Mounting Cor	Mounting Cord		R	R	R	R	
at Connect- ing Block		G	G	G	G	G	
		Y	Y	Y	Y	Y	
Line Wire	Ring	R	R	R	R	R	
at Connect-	Tip	G	G	G	G	G	
ing Block	GRD	Y	Y	Y	Y	Y	

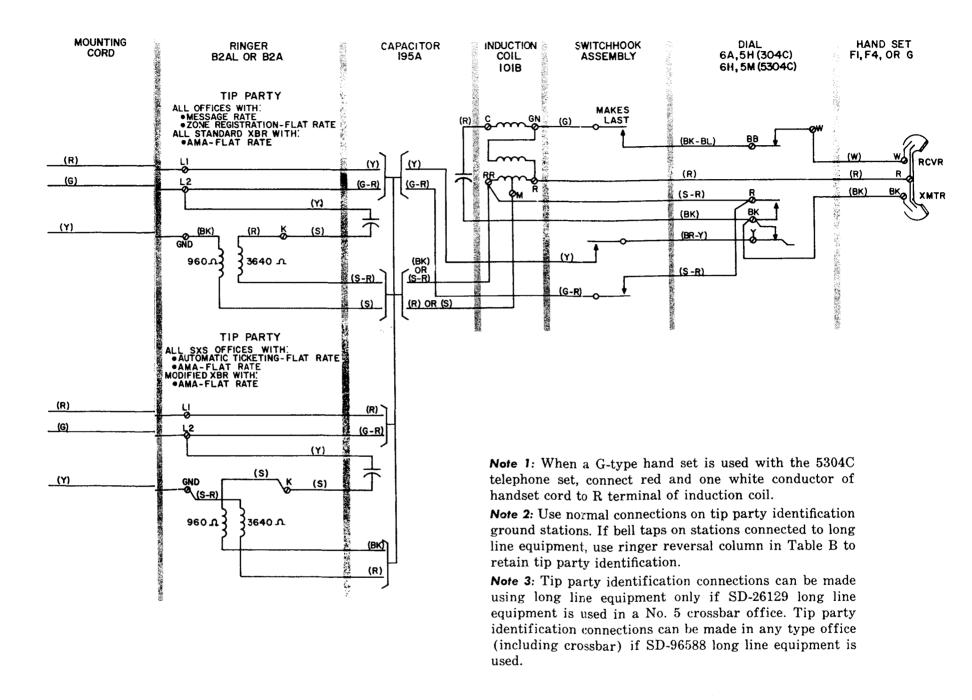


Fig. 1—304C and 5304C Telephone Sets (Tip Party Identification Required)

TABLE C
FILTER (OPTIONAL)

Type Filter*		Filter	F1. T	
304C	5304C	Leads	Filter Terminations	
61P		BK	BK of dial	
or	61S	Y	Y of dial	
61L		R	Filter bracket terminal †	

^{*} Not required for 304A (manual) set.

TABLE D
LINE AND RINGER CONNECTIONS

Wire or Lead		Individual or Bridged		Ring Party All Classes of Service	Tip Party Flat Rate	
Mana Aire Co. 1		R	L1	L1	RR	
Mounting Cord in Set		G	L2	RR	L1	
		Y	GRD	GRD	GRD	
		R	L1	K	GRD	
T): Y 1		BK	K	GRD	K	
Ringer Leads		S	GRD	L2	L2	
		S-R	GRD	L2	L2	
Ringing Capacitor Leads		Y	1.2	L1	L1	
		S	K	K	K	
Switchhook Lead		G-R	RR	RR	RR	
Mounting Cord		R	R	R	R	
at Connecting Block		G	G	G	G	
		Y	В	Y	Y	
Line Wire	Ring	R	R	R	R	
at	Tip	G	G	G	G	
Connecting Block	GRD	Y		Y	Y	

[†] Disconnect BR-Y lead from Y of dial and reconnect to filter bracket terminal.


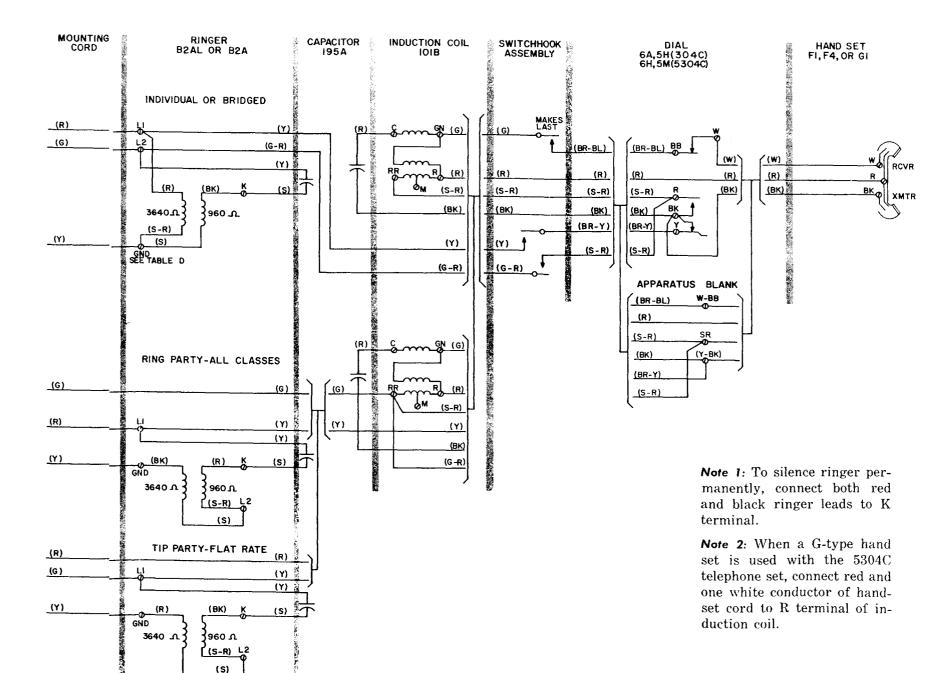


Fig. 2—304 A, C, and 5304C Telephone Sets, Individual and Ring Station, All Services— Tip Party, Flat Rate

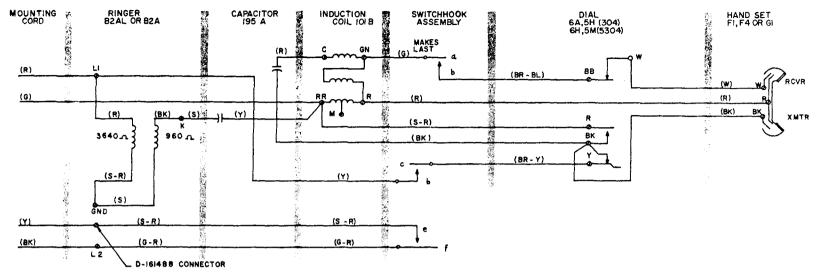

Note 1: To silence the ringer permanently, connect both red and black ringer leads to K terminal.

Note 2: When a G-type hand set is used with the 5304C telephone set, connect red and one white conductor of hand-set cord to R terminal of induction coil.

Note 3: To modify for use with 1A1 key telephone system:

- Replace 3-conductor mounting cord with 4-conductor mounting cord.
- Connect yellow lead of mounting cord and slatered lead of switchhook to a D-161488 connector. Insulate and store.



Switchhook contacts E and F must break last when handset is restored.

TABLE E
LINE, RINGER, AND SWITCHHOOK CONNECTIONS

Wire or Lead			1A1 KTS Station		
	R		L1		
Mounting Cord	ord G		RR		
in Set		Y	See Note 3		
		BK	L2		
	R		L1		
Pingar Lands	BK		K		
Ringer Leads	nger Leads S		GRD		
		S-R	GRD		
District Constitution I and		inging Capacitor Leads		Y	RR
minging Capacitor Lea	us	S	K		
Switchhook Leads		G-R	L2		
		S-R	See Note 3		
	Ring	R	R		
Mounting Cord at Connecting Block	Tip	G	G		
	A1	Y	Y		
	Α	BK			

Fig. 3-304C and 5304C Telephone Sets Modified for Use with 1A1 Key Telephone Systems