

TELEPHONE SETS—354A, C CONNECTIONS

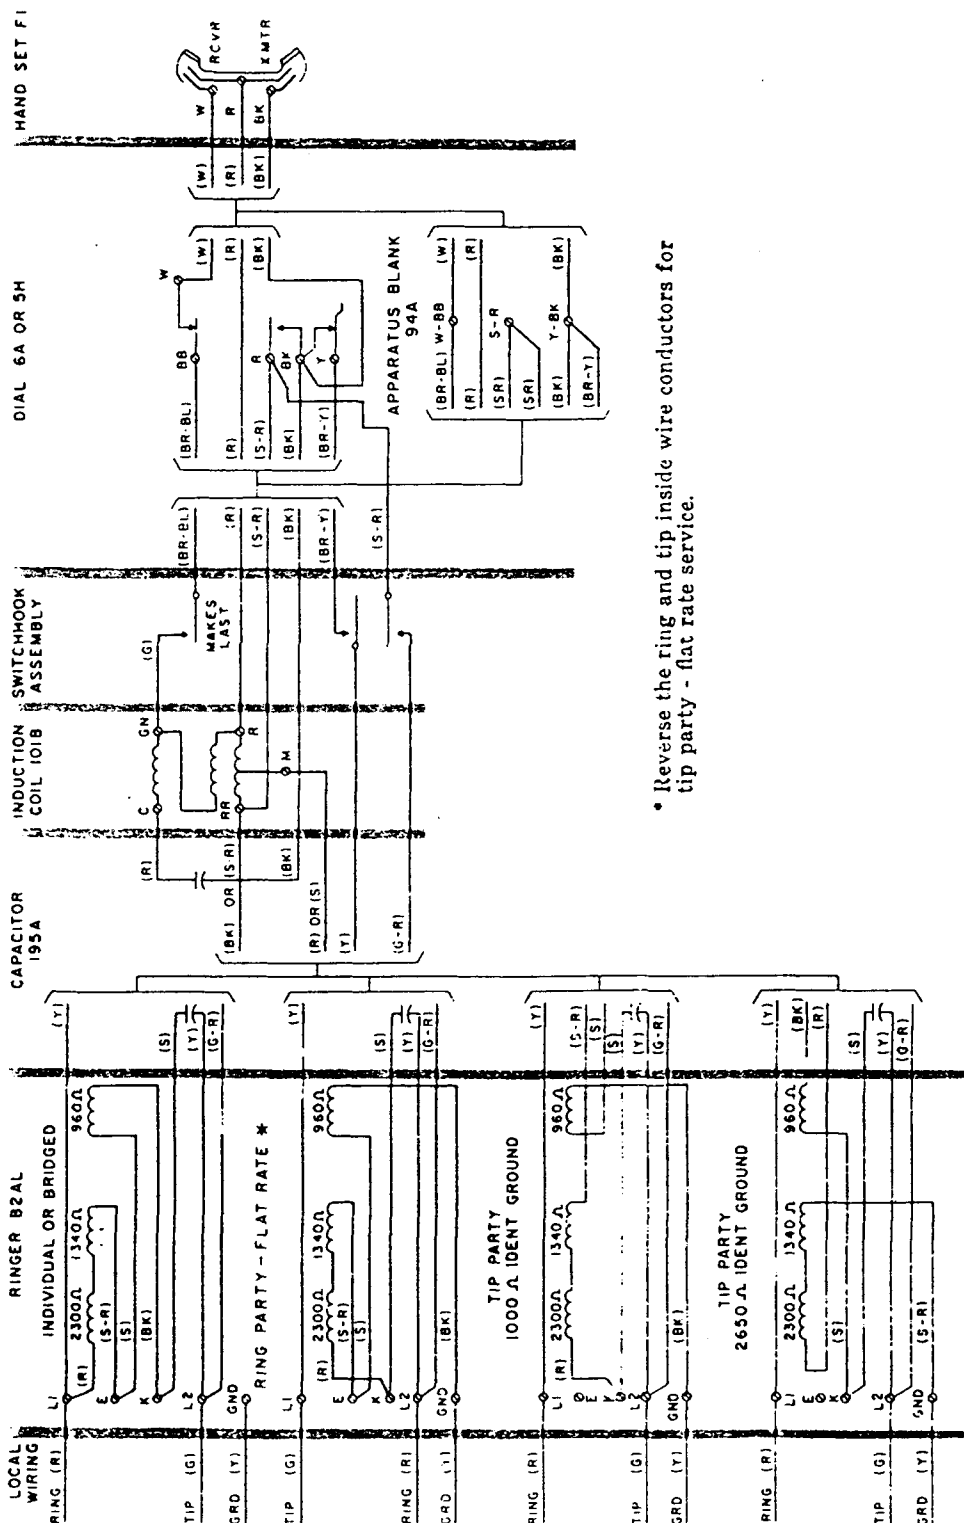


Fig. 1 — 354A and C Telephone Sets, Connections

AT&T CUSTOMER INFORMATION CENTER
Quality Engineering Organization
ARCHIVE STATUS 1 DOCUMENT
Signed: *[Signature]* Date: 4-89

TABLE A
LINE AND RINGER CONNECTIONS

Wire or Lead		Indiv or Bridged*	Ring Party†	Tip Party Identification Ground					
				Normal Connections		To Silence Ringer Permanently		Ringer Reversal When Connected To Long Line Equipment‡	
				1000 Ω	2650 Ω	1000 Ω	2650 Ω	1000 Ω	2650 Ω
Inside Wire In Set	R	L1	L2	L1	L1	L1	L1	L1	L1
	G	L2	L1	L2	L2	L2	L2	L2	L2
	Y	Grd	Grd	Grd	Grd	Grd	Grd	Grd	Grd
Ringer Lead	R	L1	K	K	M	K	M	RR	M
	BK	K	Grd	Grd	RR	Grd	K	Grd	K
	S	E	E	M	K	M	K	M	RR
	S-R	E	E	RR	Grd	K	Grd	K	Grd

* To silence ringer for all classes of service except tip party identified, connect both R and BL ringer leads to K terminal.

† Reverse the ring and tip inside wire conductors for tip party-flat rate service.

‡ Use normal connections on tip party ground stations. If bell taps on stations connected to long line equipment, use ringer reversal column in Table A to retain tip party identification.

TABLE B
FILTER (Optional)

Type Filter	Filter Leads	Filter Lead Termination
61E or 61G	BK	BK of Dial
	Y	Y of Dial
	R	Filter Bracket Terminal; also, disconnect BR-Y lead from Y of dial and reconnect to filter bracket terminal.