


TELEPHONE SETS—536A, B

(AMPLIFIER SETS FOR IMPAIRED SPEECH) — COMMON BATTERY — CONNECTIONS

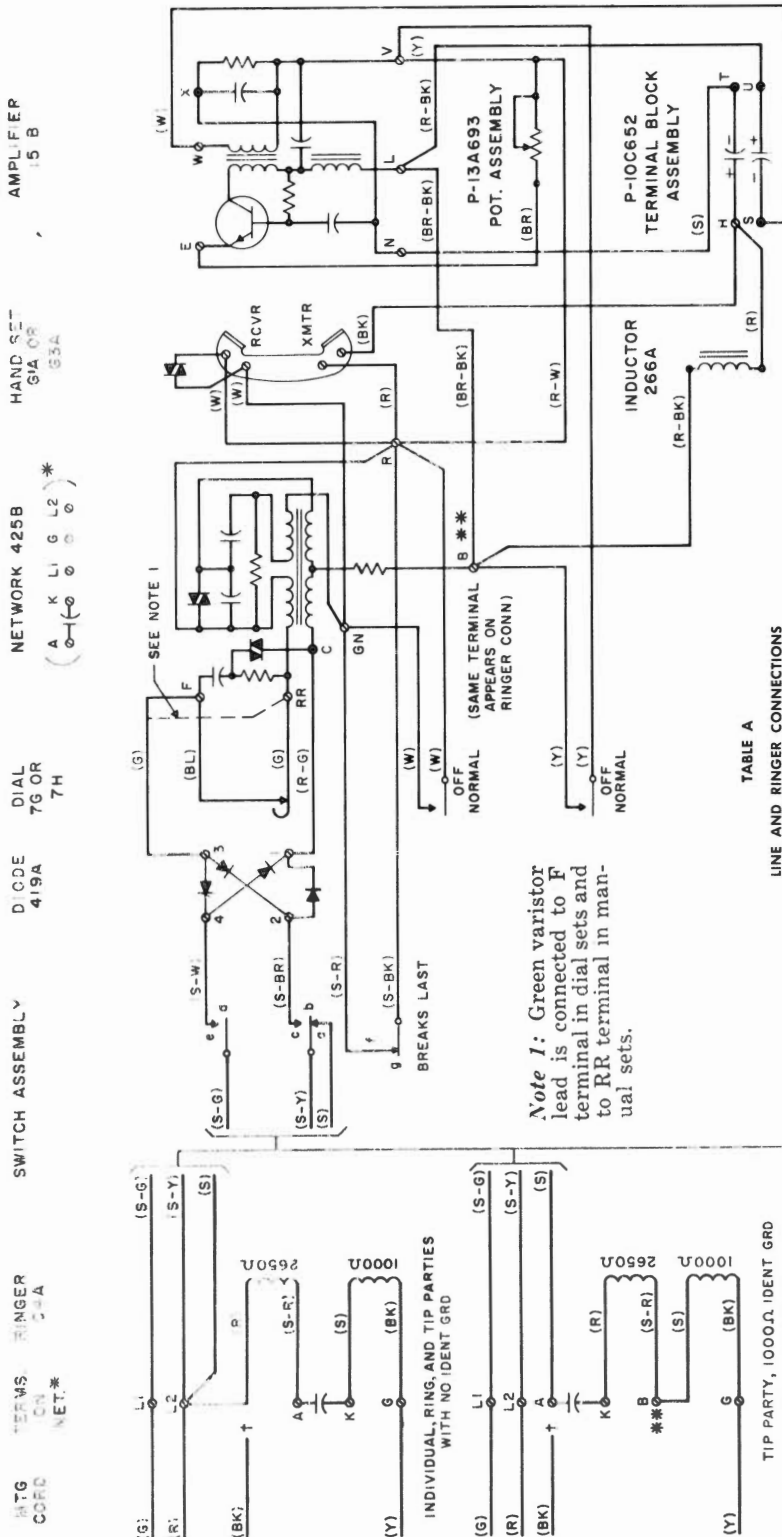

Note 1: Green varistor lead is connected to F terminal in dial sets and to RR terminal in manual sets.

TABLE A
LINE AND RINGER CONNECTIONS

Wire or Lead	1A1 Key Tel Sys	Ring Party	Tip Party No Ident Grd	Normal Connections		Tip Party Ident Ground		To Silence Ringer Permanently
				1000Ω	2650Ω	1000Ω	2650Ω	
Ringer Leads								
1000Ω	BK	L2	L2	G	B	B	K	K
2650Ω	PK	L2	L2	G	B	B	K	K
Switchhook Leads								
1000Ω	S	L2	L2	A	A	A	A	A
2650Ω	S	L2	L2	A	A	A	A	A
Manual Cord in Set								
1000Ω	Y	L1	L1	L1	L1	L1	L1	L1
2650Ω	Y	L1	L1	L1	L1	L1	L1	L1
Mounting Cord at Central Block								
1000Ω	PK	L2	L2	G	B	B	K	K
2650Ω	PK	L2	L2	G	B	B	K	K
Line Wire at TIP								
1000Ω	R	L2	L2	R	R	R	R	R
2650Ω	R	L2	L2	R	R	R	R	R
Line Wire at RING								
1000Ω	Y	L1	L1	L1	L1	L1	L1	L1
2650Ω	Y	L1	L1	L1	L1	L1	L1	L1

To Silence Ringer:
For classes of service except tip party ground identification, connect yellow mounting cord to same terminal as red mounting cord lead at connecting block. For 1A1 key telephone system, connect red and black ringer leads on L2 terminal of 425B network.

†Not recommended for use with 1A1 key telephone system on long loops.
‡Type and store BK mounting cord lead.

When telephone set is used with 1A1 key telephone system, switch contact ed must break last when handset is restored.