



## HOW TO USE YOUR **contempra**<sup>\*</sup> phone

1. Lift the handset.
2. Listen for "dial" tone.
3. Using one finger, depress in sequence each button associated with the telephone number. A combination of soft musical tones will be heard, indicating your call is progressing.
4. Should you make an error or wish to place another call, depress the RECALL button located above the transmitter — this button activates the "dial" tone.
5. The two buttons (\*) and (#) are for data transmission and future applications. Should you depress either of these buttons while "dialing", your call will not be completed. Depress the RECALL button and start over again when you hear the "dial" tone.

### HELPFUL SUGGESTIONS

Be careful not to touch the RECALL button during conversation, as your call may be disconnected.

Do not cover the transmitter with your hand, as this will prevent clear reception of your voice.

The volume of the bell may be adjusted by using the VOLUME CONTROL located on the base of the set.

If your telephone goes out of order, call your telephone repair service.

◀ Leaving the line momentarily

# **contempra**<sup>\*</sup> phone



P891554

<sup>\*</sup>Trademark of Northern Electric Co. Ltd.