 
 


How to use your
VISTAPHONE®
Picture Telephone

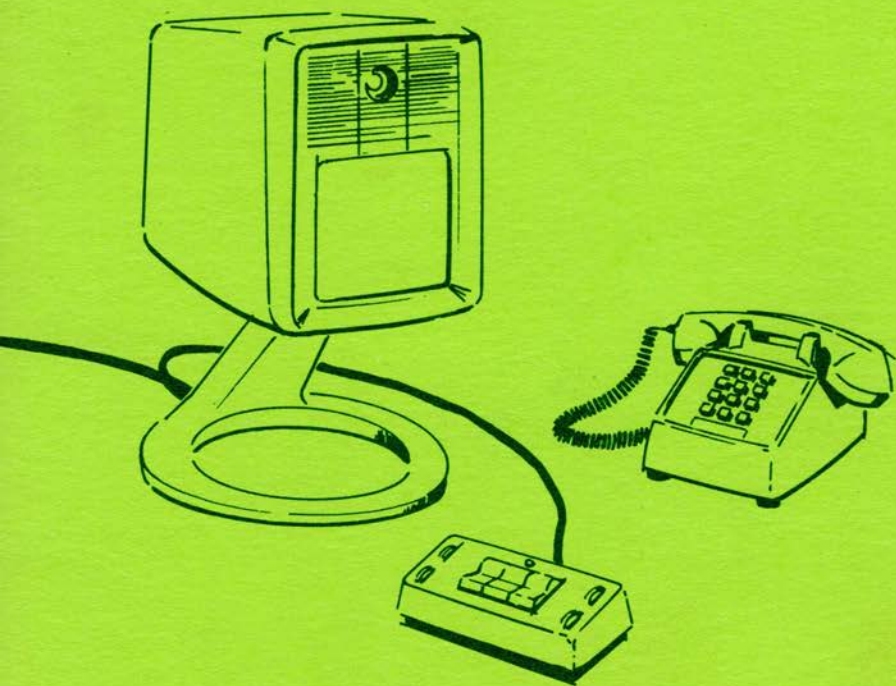

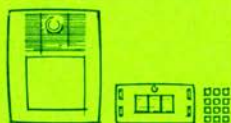

INCOMING CALLS

Incoming calls activate the ringer in the telephone set. If you don't want to be seen by the person that is calling, press the **PRIVACY** switch located on the control unit before answering the call.


To answer an incoming call, momentarily press the **ON OR QUIET/OFF** switch of the control unit to the **ON** position if you want to use the hands-free feature. (Red lamp on control unit will light.) Otherwise, answer by picking up the telephone handset.



OUTGOING CALLS

To make an outgoing call:

1. Momentarily press the **ON OR QUIET/OFF** switch of the control unit to the **ON** position if you want to use the hands-free feature. (Red lamp on the control unit will light.) Otherwise, pick up the telephone handset.
2. When you hear dial tone, key or dial the digits of the called number.

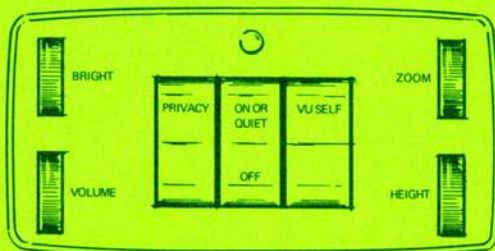

OPERATION DURING A CALL

During a call you can do the following:

1. Transfer from handset operation to hands-free operation by pressing the **ON OR QUIET/OFF** switch to the **ON** position and then placing the handset on-hook. (Red lamp on the control unit will light.)

*Note: The **ON OR QUIET/OFF** switch must be held in the **ON** position until the handset is placed on-hook.*

2. Transfer from hands-free operation to handset operation by taking the handset off-hook. (Red lamp on the control unit will go out.)
3. Rotate the **BRIGHT** thumbwheel to increase or decrease the brightness of the image.



4. Rotate the VOLUME thumbwheel to increase or decrease the volume of the other party's voice.
5. Operate the PRIVACY switch to change the image at the distant end to a black bar.
6. Press and hold the ON OR QUIET/OFF switch to the nonlocking ON OR QUIET position to mute the microphone; the microphone remains muted as long as the switch is held operated.
7. Operate the VU SELF switch to monitor the picture being transmitted.
8. Rotate the ZOOM thumbwheel to increase or decrease the size of the image displayed at the distant end.



Note: When adjusting the size of the image, operate the VU SELF switch and monitor the image, if the image is not centered vertically, rotate the HEIGHT thumbwheel to raise or lower the image; then, restore the VU SELF switch.



9. Flip the visor and mirror up to operate the set in the graphics mode.

Note: When positioning the graphic to be viewed, operate the VU SELF switch and monitor the image; then restore the VU SELF switch.



DISCONNECTING FROM A CALL

To disconnect from a call, momentarily press the ON OR QUIET/OFF switch to the OFF position when using the hands-free feature. (Red lamp on the control unit will go out.) Otherwise, disconnect by replacing the telephone handset.

Note: When the ON OR QUIET/OFF switch is pressed to OFF, each operated switch is restored to its normal (nonoperated) position.

Stromberg-Carlson