
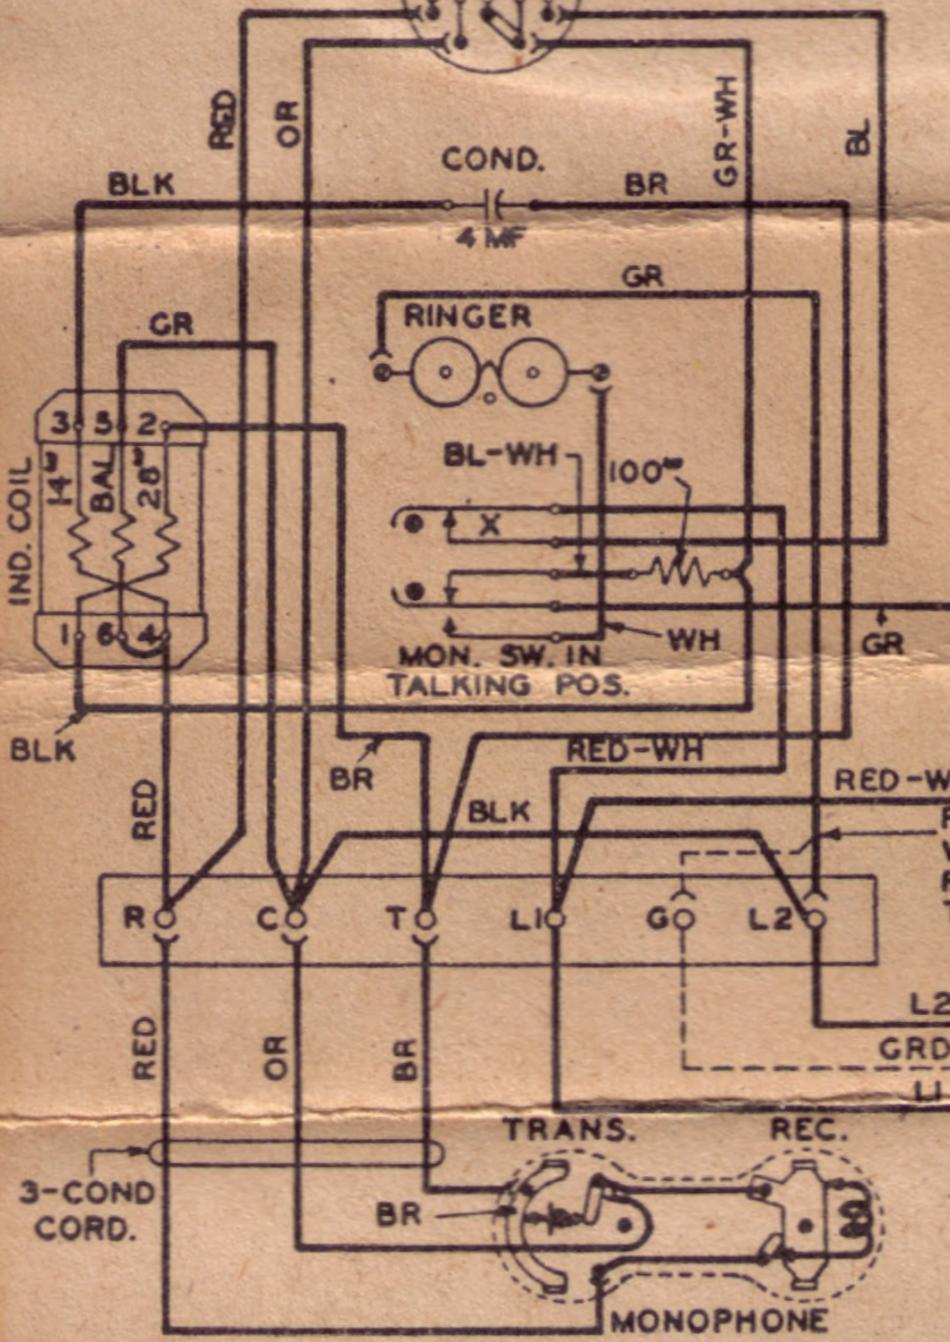


L5016 A0


RINGER FREQ.

L- _____
CODE NO.

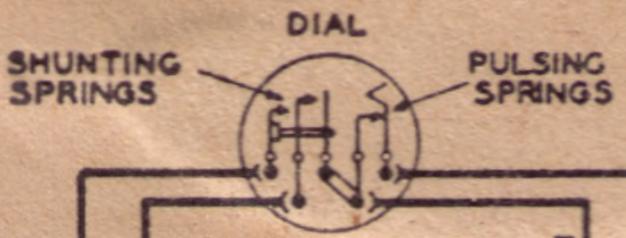

- NOTES**
- 1- IF NO DIAL IS USED PUT BOTH GR-WH & BL DIAL WIRES UNDER DIAL MTG. SCREW ON DIAL BRACKET.
 - 2- IF BELLS TAP WHEN DIALING FROM ANOTHER TELEPHONE ON THE LINE REVERSE CONNECTIONS AT THE RINGER.
 - 3- "X" CONTACTS TO BREAK FIRST & MAKE LAST.
 - 4- FOR CAPACITANCE SEE STAMPING ON CONDENSERS.

FOR METALLIC RING. CONNECT GR. WIRE TO TERM. L2.
FOR GROUND RING. CONNECT TO TERM. G.

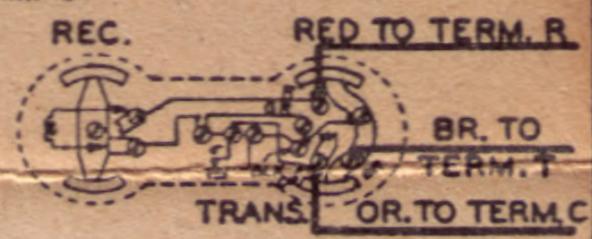

MONOPHONE
OPTIONAL

"HANDSET WITH TRANSMITTER CUTOUT PUSH BUTTON FOR NOISY LOCATIONS."