


NOTES

- A WHEN FILTER IS USED CONNICT YELLOW DIAL LEAD TO FILTER AS SHOWN BY DOTTED LINE INSTEAD OF TO Y'ON UPPER HOUSING TERMINAL PLATE
- 8 FOR MANUAL SERVICE GONG TRANSMITTER LEAD IS CONNECTED TO TERMINAL "Y'INSTEAD OF TERMINAL BK' AND A STRAP IS CONNECTED BETWEEN THE TERMINALSW' AND "BBX' INSTEAD OF BETWEEN "BB AND "BBX"

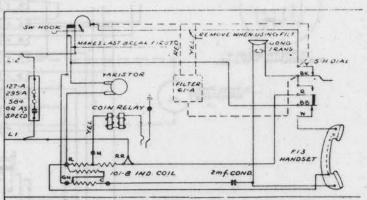

WITH 127-A, 295-A, 584 BELLS