
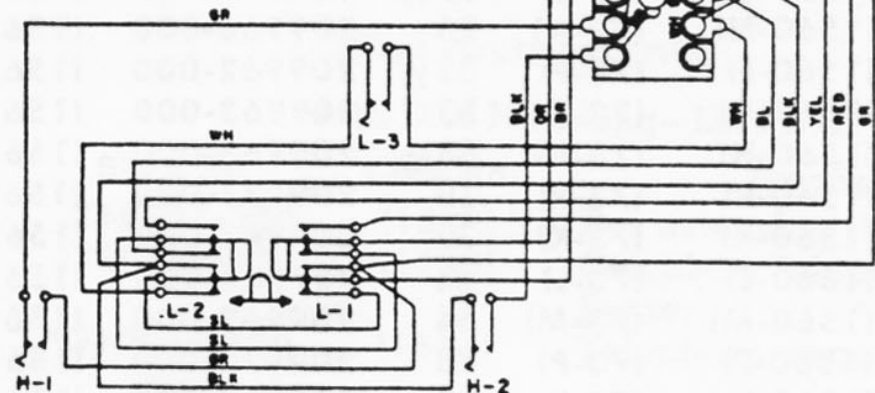
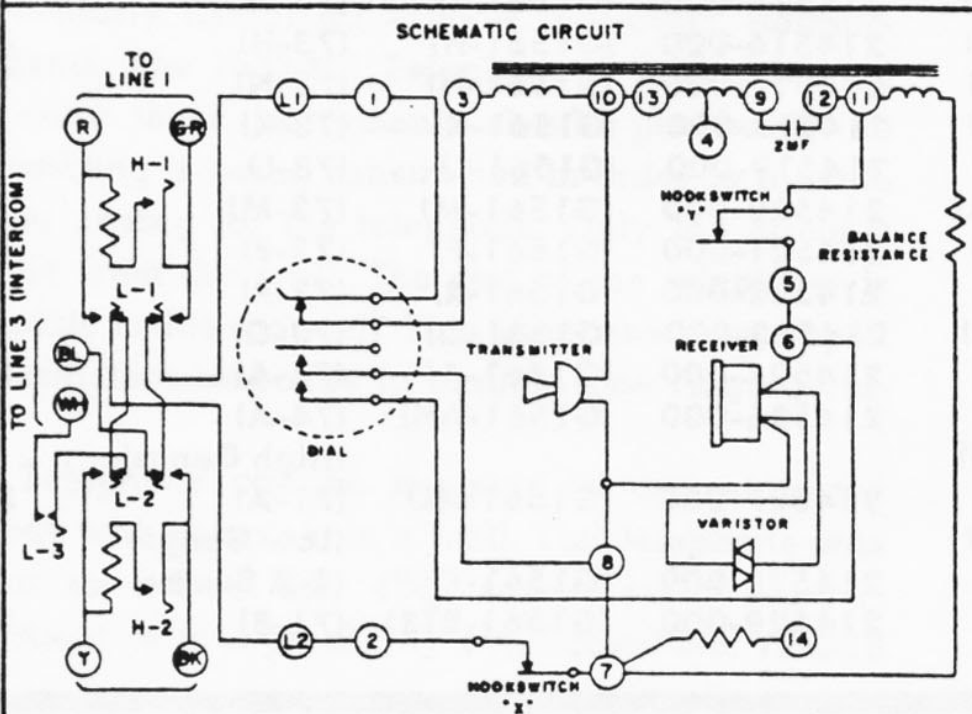


STROMBERG-CARLSON WIRING AND CONNECTIONS FOR 1573 TELEPHONES (COMMON BATTERY - 3 LINE)

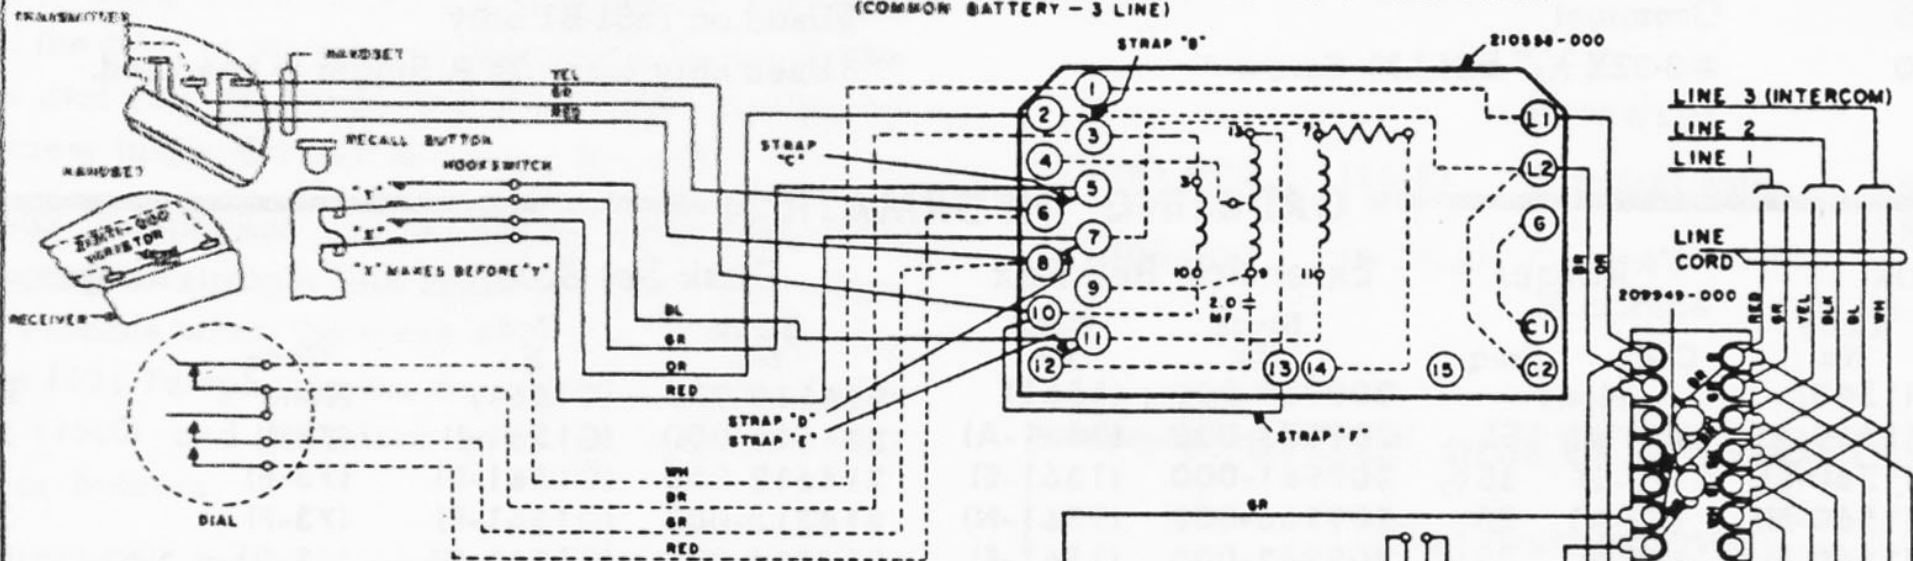

LINE AND HOLD KEY ADJUSTMENTS

THE LINE SELECTING KEYS ARE ARRANGED SO THAT SWITCHING THE SET FROM ONE LINE TO ANOTHER DOES NOT AFFECT THE THIRD LINE. FOR SELECTION OF LINE 3 THE WHITE BUTTON MUST BE DEPRESSED. FOR LINES 1 AND 2 THE INTERACTION OF THE LINE AND HOLD KEYS IS SUCH THAT THE CONTACTS ON THE HOLD KEY MAKE BEFORE THE ASSOCIATED LINE KEY CONTACTS OPEN WHEN THE HOLD KEY IS OPERATED. WHEN THE LINE SELECTING KEY IS OPERATED TO A LINE ON 'HOLD', THE LINE CONTACTS CLOSE BEFORE THE ASSOCIATED HOLD KEY CONTACTS OPEN.

THE HOLD KEYS ARE LOCKED OUT WHEN THE HANDSET IS ON THE CRADLE BUT ARE NOT AFFECTED BY OPERATION OF THE RED 'RECALL BUTTON'.

MANUAL TO DIAL CONVERSION

REMOVE STRAP 'B' AND WIRE DIAL CABLE AS SHOWN BY DOTTED LINES. IF A DIAL WITHOUT CABLE IS USED, ORDER ONE 207667-000 CABLE FROM STROMBERG CARLSON.

REDUCED SIDETONE ON SHORT LOOPS (200 OHMS D.C. RESISTANCE OR LESS)

CONNECT STRAP 'D' BETWEEN 8 AND 9
CONNECT STRAP 'F' BETWEEN 10 AND 14
CONNECT RED OF HOOKSWITCH TO 9
CONNECT BLUE OF HOOKSWITCH TO 4