

NOTES:

1. WIRING IS SHOWN FOR 1575A. FOR 1575B (USING INTERCOM): IN TELEPHONE, REMOVE STRAP "G" AND MOVE BROWN OF HOLD KEY FROM IC1 TO 15. ALSO REPLACE 209942 LATCH ASSEMBLY BY 209947. IN TERMINAL BOX, ADD INTERCOM BUZZER AND STRAPS "J".
2. EXTENSION BELL BOX: WHEN BZ1 IS USED, EXTENSION BELL (IF SPECIFIED) IS TO BE CONNECTED TO 30~ TERMINALS. IF BZ1 IS NOT TO BE USED, THE BELL MAY BE WIRED THRU "Z" CONTACT OF HOOKSWITCH AS FOLLOWS: CONNECT BELL TO "Z" AND 30~ - TERMINALS. MOVE BR-RED OF CORD FROM 1 TO 30~ - 2 TERMINAL.
3. WHEN HOLD BUTTON IS OPERATED AND THEN RELEASED, IT RETURNS THE OPERATED LINE KEY TO UNOPERATED POSITION (BY MECHANICAL INTERLOCK).
4. MANUAL TO DIAL CONVERSION: REMOVE STRAP "B" AND WIRE DIAL CABLE AS SHOWN BY DOTTED LINES. IF DIAL WITHOUT CABLE IS USED, ORDER ONE 207687 CABLE FROM STROMBERG-CARLSON CO.
5. REDUCED SIDETONE ON SHORT LOOPS: (200 OHMS D.C. RESISTANCE OR LESS) CONNECT STRAP "D" BETWEEN 8 AND 9. CONNECT STRAP "F" BETWEEN 10 AND 14. CONNECT BLUE OF HOOKSWITCH TO 4. CONNECT RED OF HOOKSWITCH TO 9.
6. IN TELEPHONE CORD, CONDUCTORS SL-BLK, SL-WH, SL-RED, BLK-WH, BLK-RED AND WH-RED ARE TAPED BACK AS SPARES.

TELEPHONE TERMINAL BOX 96-A OR 96-B

801760
(USED ON 96-B ONLY)

