



1-WHEN NO DIAL IS USED PUT BOTH BLK. & WH. DIAL WIRES UNDER SCR. IN DIAL HOLE COVER.

2-"X" CONTACTS TO BREAK FIRST & MAKE LAST.

3-WHEN RINGER BOX IS EQUIPPED WITH COND. CONNECT RINGER TO L1 & L2 (TERMS. 1 & 4). WHEN RINGER BOX IS NOT EQUIPPED WITH COND. CONNECT RINGER TO TERMS. 2 & 4.

PRINTED IN U.S.A.