

NOTES:

- SWITCH ASSEMBLY CONTACT SEQUENCE ON REMOVING HANDSET IS AS FOLLOWS:
 - bc CLOSES
 - de CLOSES
 - d'e' CLOSES
 - ab OPENS
 - fg OPENS
- SPEAKERPHONE LEADS DESIGNATED R1 (G-V) AND T1 (V-G) ARE DISCONNECTED IN THIS SET. WHEN INSTALLING SPEAKERPHONE, CONNECT (G-V) LEAD TO TERMINAL 13 AND THE (V-G) LEAD TO NETWORK TERMINAL RR.

