




Tying Cords to #122 Receivers—Cords without Tie-Strings

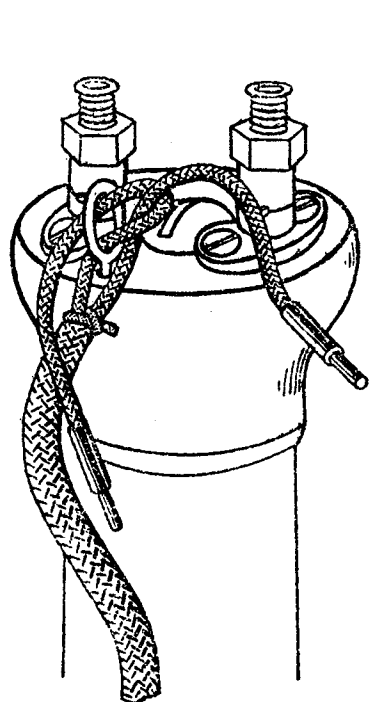

Loop one conductor and pass the loop through the screw eye. Pass the other conductor through the loop.

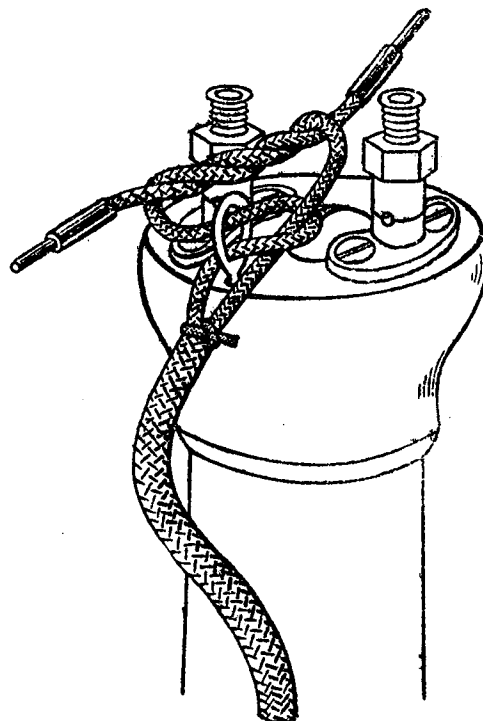

Make a double loop knot

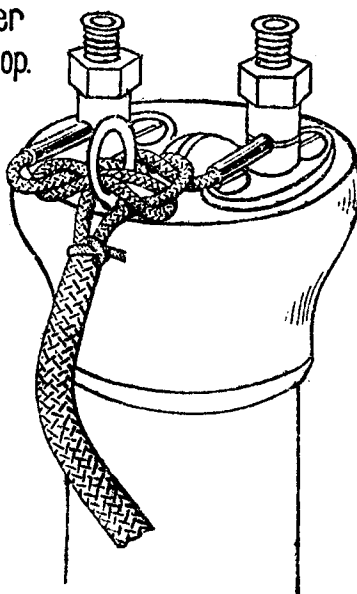

Pull conductors tight and connect tips to binding posts.