

Installation Instruction Card for Lineman's Hand Test Telephone LP Filter Kit

GTE LENKURT

INSTALLATION INSTRUCTIONS FOR LINEMAN'S TELEPHONE SET L.P. FILTER KIT

GTE Lenkurt Part No.	Use With Hand Telephone
090-54377-01	G.T.E.A.E. Type 800 L-9066 G.T.E.A.E. Type 801 L-9078 BECO 1011

Individual parts of kit:



(1) Filter (Board)



(2) TB-1



(3) Bracket



(4) Label

G.T.E.A.E. Type 800

- From kit, discard bracket (3), trim and retain 3" off red leads of TB-1 (2) and discard term. board, trim black leads of filter (1) to 2".

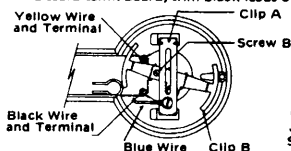


Fig. 1 (Transmitter Removed)

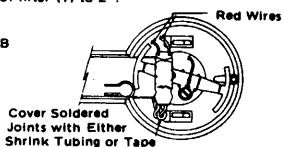


Fig. 2 (Modified)

- Remove Clip A, pulling upward on side opposite screw. (Do not remove blue wire.)
- Remove Clip B, removing Screw B (do not remove green wire).
- Unsolder black wire and yellow wire from solder terminals.
- Solder a 3" red lead to each solder terminal above.
- Solder black leads of filter (1) to yellow and black wires unsoldered above, and red leads to filter board.
- Replace Clip B and screw, and place filter (1) as shown in Fig. 2.
- Replace Clip A and transmitter.
- Place label (4) on exterior or dial of handset.

G.T.E.A.E. Type 801

- From kit, discard bracket (3). Solder the red leads of TB-1 (2) to the board of filter.
- Remove capacitor clamp and disconnect capacitor (terminals 6 and 4).
- Remove screw and bracket B from receiver (Fig. 2).
- Reposition capacitor as shown under receiver leads. Replace bracket B. Reconnect capacitor to terminals 6 and 4.

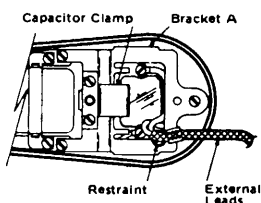


Fig. 1 (Transmitter Section)


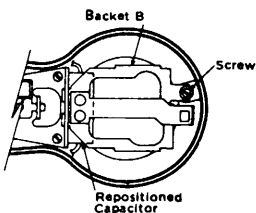


Fig. 2 (Receiver Section)

- Remove bracket A. Remove external lead restraint from bracket A.
- Remove external leads from terminals 8 and 10. Remove and discard jumper between terminals 10 and 1.
- Mount TB-1 to terminal 10 with existing screw. Attach external leads to TB-1 (2) terminals and reattach restraint clip.
- Mount filter under capacitor clamp and replace on bracket A.
- Connect black leads of filter (1) to terminals 1 and 8.
- Replace bracket A.
- Place label (4) on exterior of handset.

BECO 1011

- From kit, discard TB-1 (2).
- Unsolder external leads from terminals A and B.
- Remove screw and install bracket (3) securing with same screw.
- Solder external leads to board of filter (1).
- Position filter (1) in bracket as shown.
- Solder black leads of filter (1) to terminals A and B after looping around base of dial.

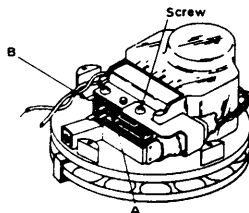

- Place label (4) on dial of handset.