

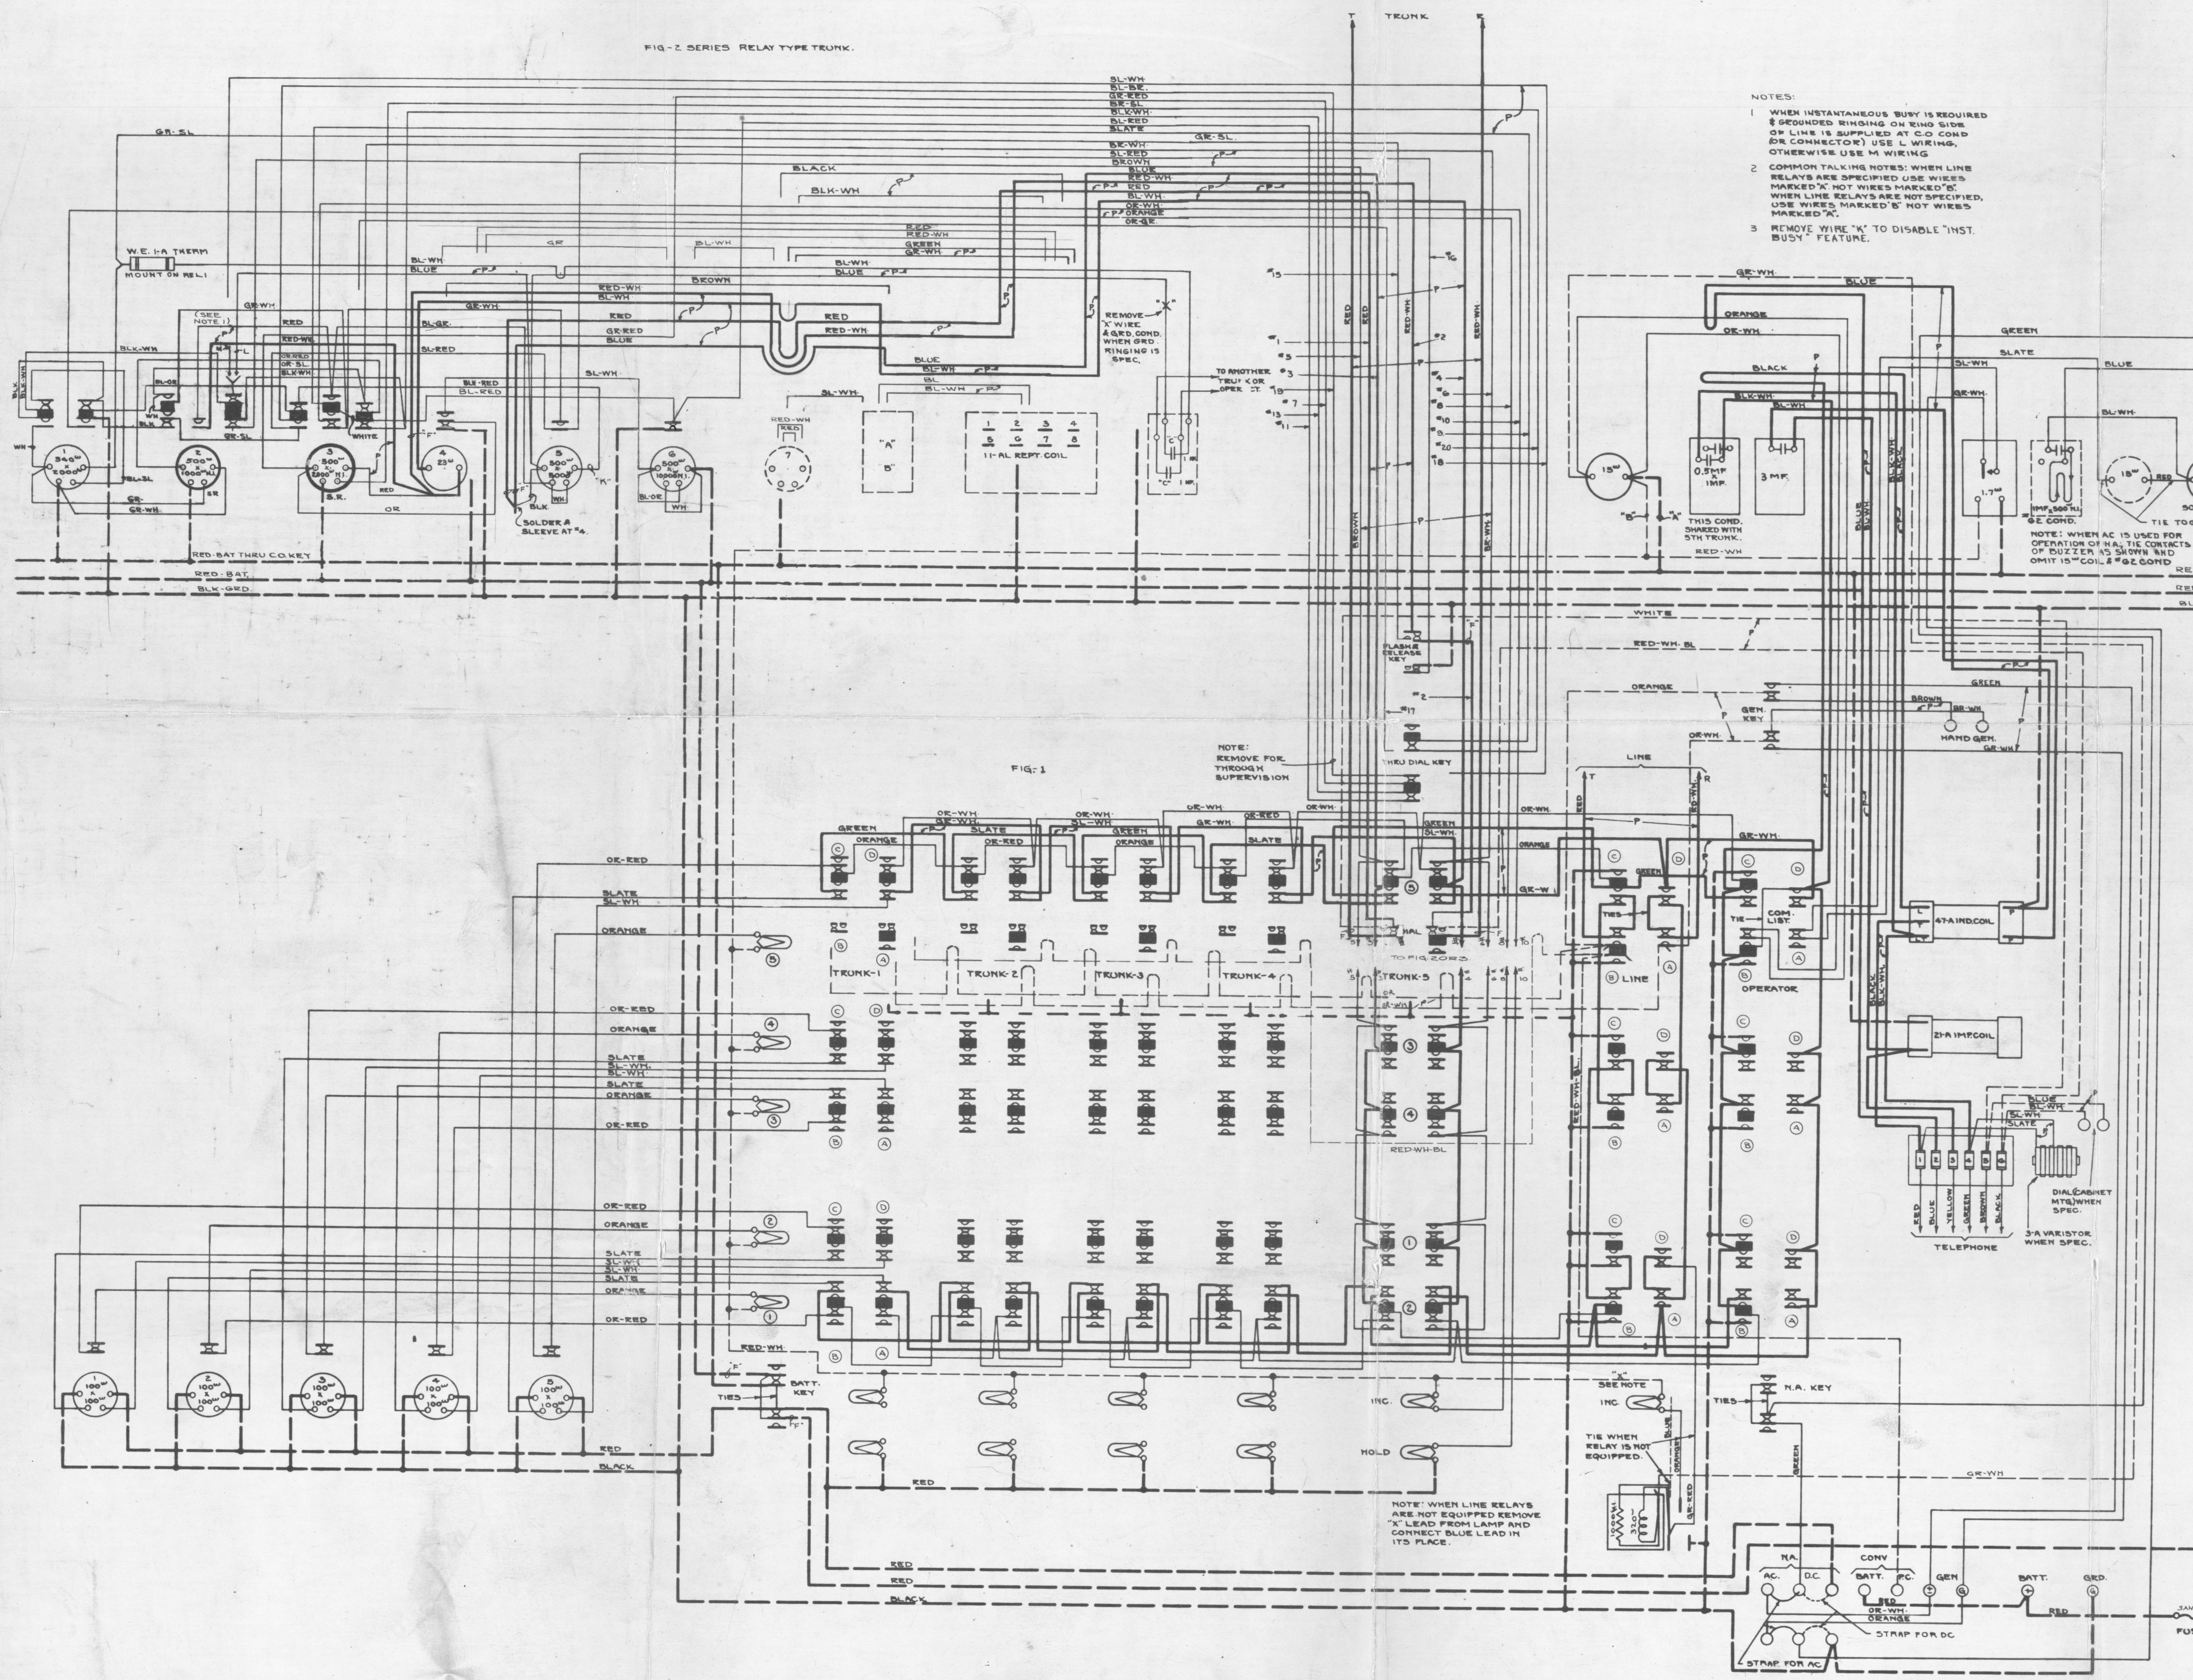
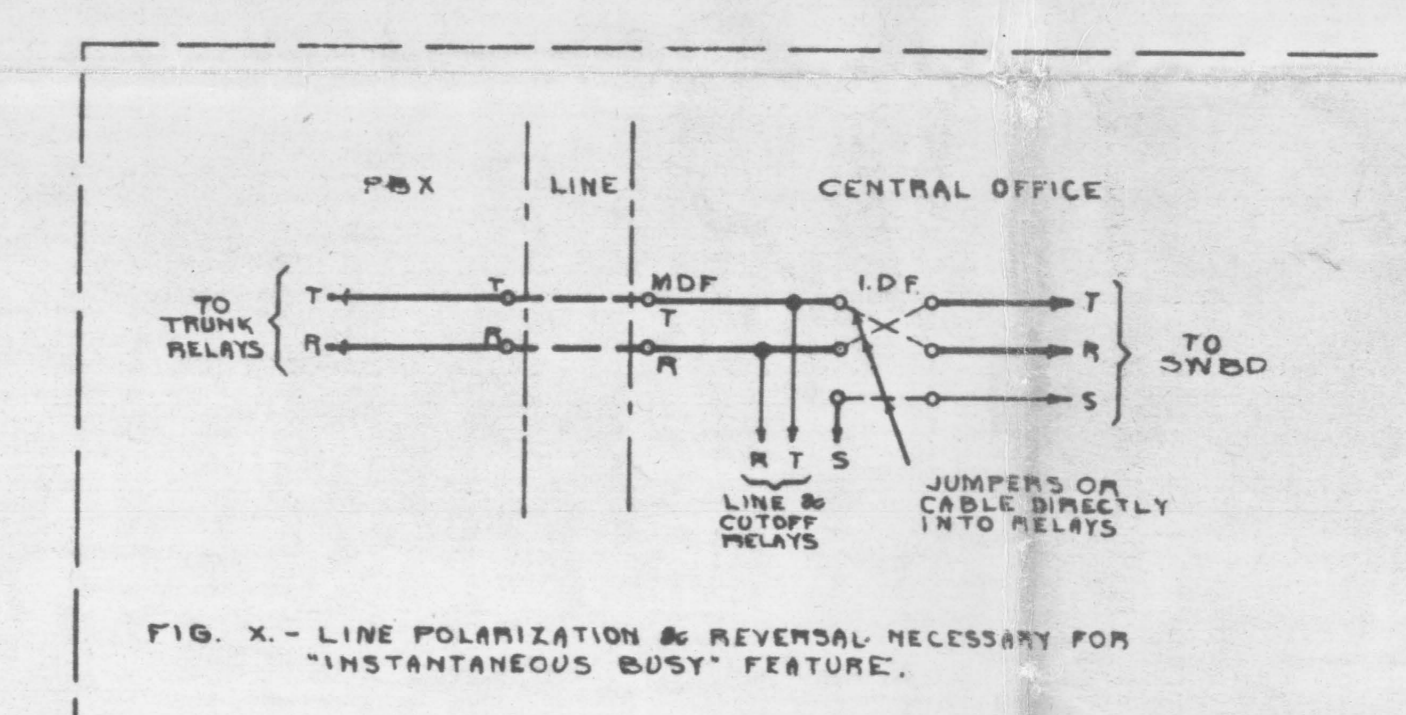


| | | | |
|------------------|-----|---------|-----|
| ISS. NO. 1-17-51 | APD | CHANGES | APD |
| ISS. NO. 1-17-51 | | | |
| ISS. NO. 1-17-51 | | | |

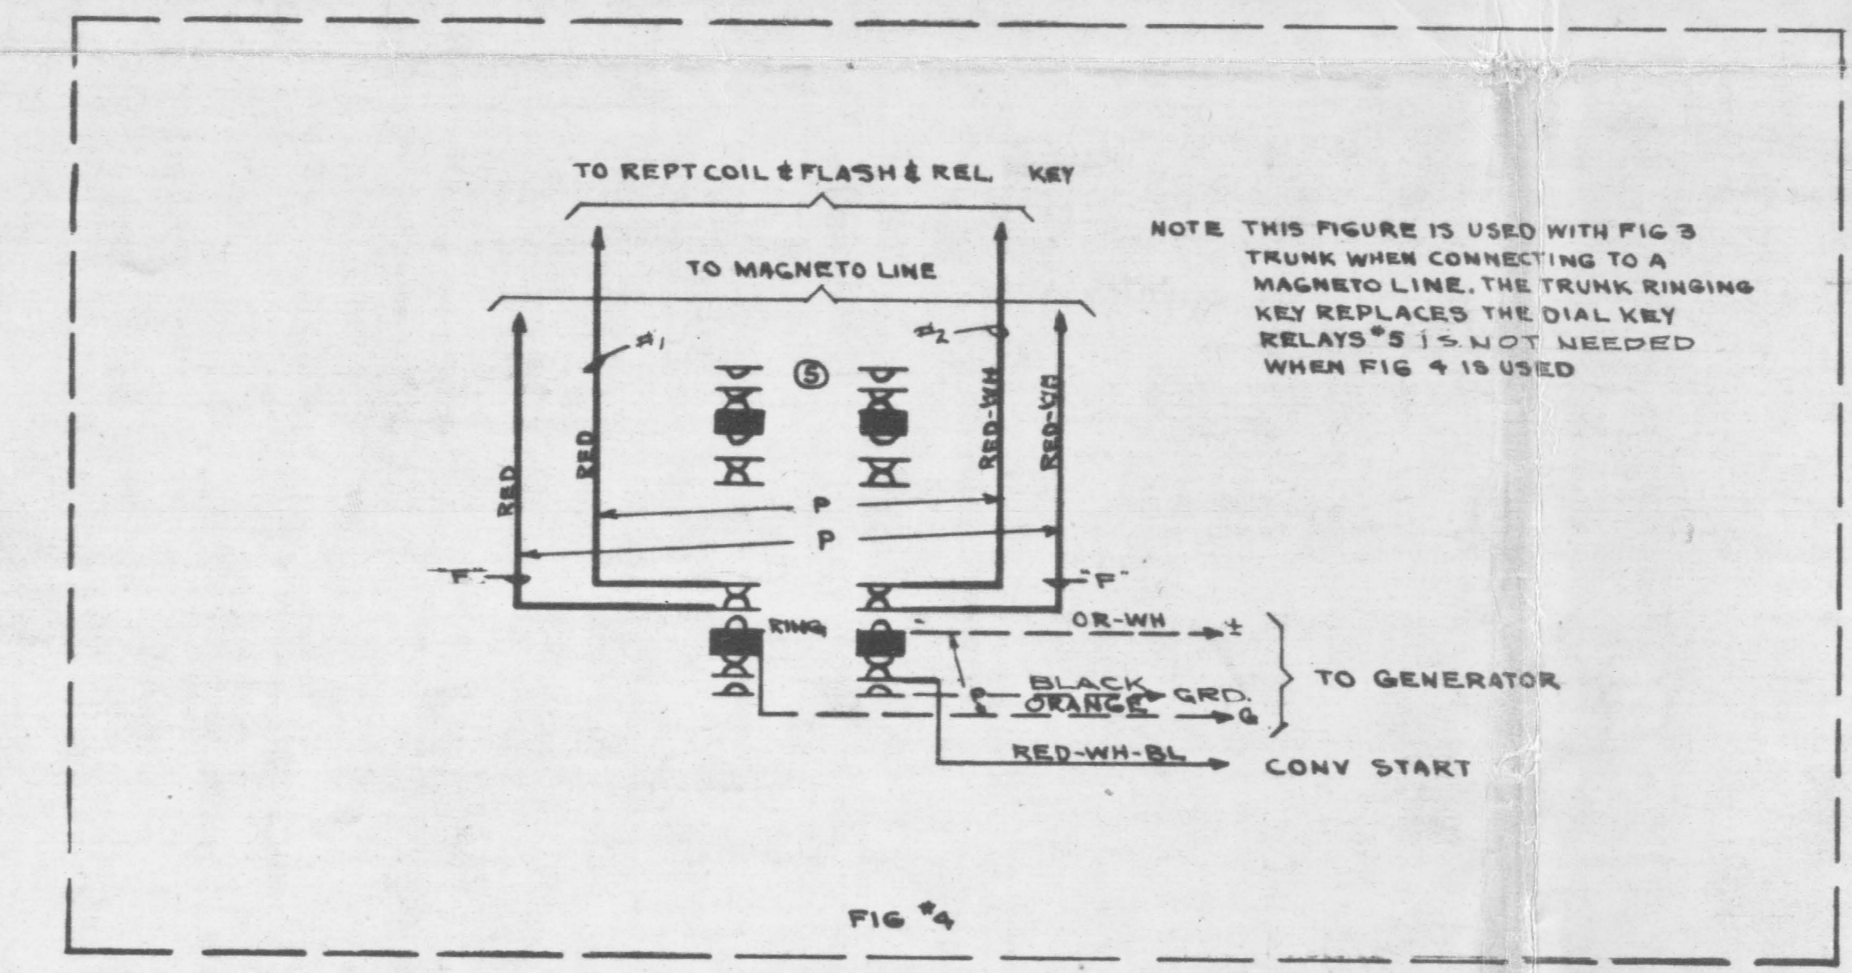

NOTES:
 1. WHEN INSTANTANEOUS BUSY IS REQUIRED, REDDISHED ENDING ON END SIDE OF LINE IS SUPPLIED AT C-O COIN OR CONNECTOR) USE L WIRING. OTHERWISE USE M WIRING.
 2. COMMON TALKING NOTES: WHEN LINE RELAYS ARE SPECIFIED USE WIRES MARKED 'K' NOT WIRES MARKED 'C'. WHEN LINE RELAYS ARE NOT SPECIFIED, USE WIRES MARKED 'S' NOT WIRES MARKED 'K'.
 3. REMOVE WIRE 'K' TO DISABLE 'INST. BUSY' FEATURE.

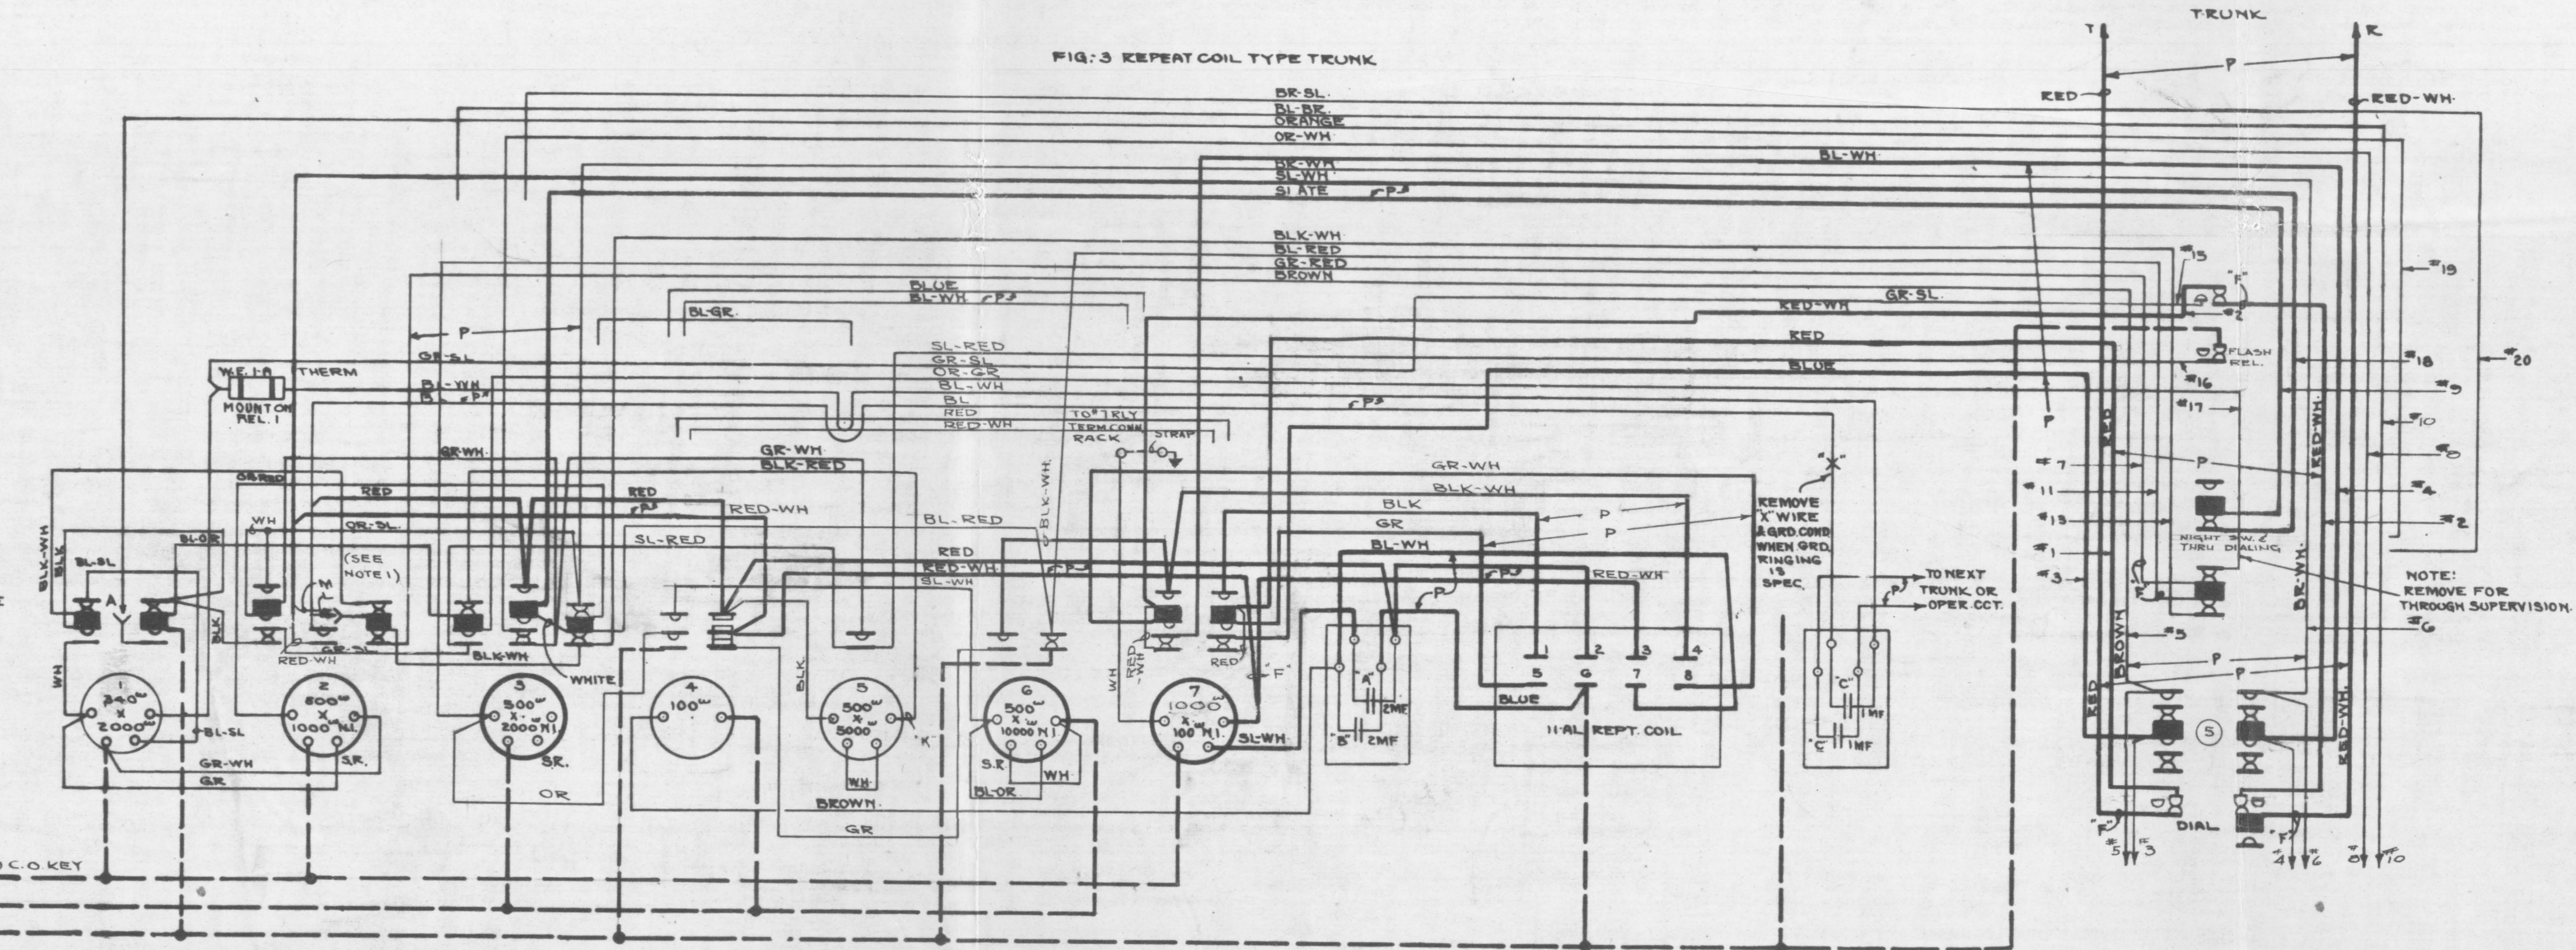

TCL Library: www.telephonecollectors.info

| | | | |
|---------------------------|----------|---------|-------|
| APPROVED | DESIGNED | CHECKED | SCALE |
| DATE | DATE | DATE | SCALE |
| ENGINEER | DESIGNER | CHECKER | SCALE |
| DATE | DATE | DATE | SCALE |
| 121 CORDLESS SWBD CIRCUIT | | | |
| E-11180 | | | |
| ISSUE NO. 1 | | | |