
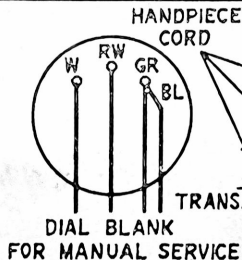
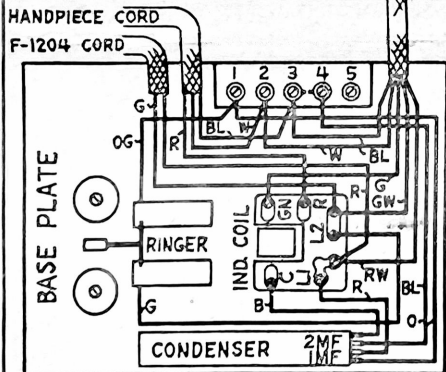



WIRING DIAGRAM-METALLIC RINGING

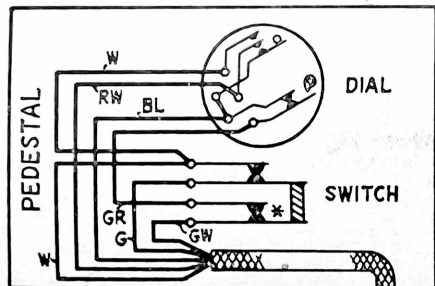

COLOR CODE

B - BLUE
W - WHITE
BL - BLACK
G - GREEN
O - ORANGE
R - RED
GR - GREEN WITH RED TRACER.
GW - GREEN WITH WHITE TRACER
RW - RED WITH WHITE TRACER
OG - ORANGE WITH GREEN TRACER

*=THESE CONTACTS MAKE FIRST AND BREAK LAST.

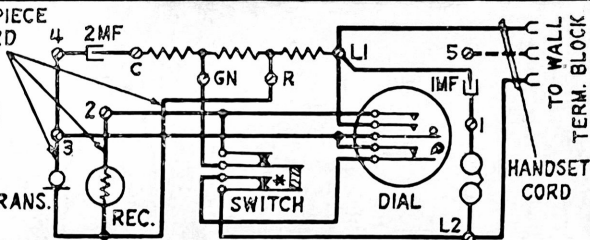

SCHEMATIC CIRCUIT

FOR DIVIDED RINGING

1. REPLACE F-1204 2-CONDUCTOR HANDSET CORD WITH F-1205 3-CONDUCTOR CORD.
2. REMOVE GREEN RINGER LEAD FROM TERMINAL L2 AND CONNECT WITH YELLOW LEAD OF F-1205 CORD TO TERMINAL 5.
3. CONNECT OTHER END OF ABOVE YELLOW LEAD TO CENTER (GROUND) TERMINAL OF WALL TERMINAL BLOCK.
4. IF RINGER DOES NOT RESPOND REVERSE LINE WIRES AT WALL TERMINAL BLOCK.

3H4

TCI Library: www.telephonecollectors.org

THE NORTH ELECTRIC MFG. CO.
GALION, OHIO. U.S.A.