



STROMBERG-CARLSON A DIVISION OF GENERAL DYNAMICS WIRING DIAGRAM-1600W TELEPHONE

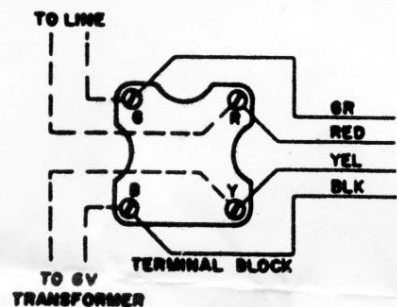

CONNECTIONS WHEN USING 17A TERMINAL BLOCK INSTEAD OF 1660 RINGER

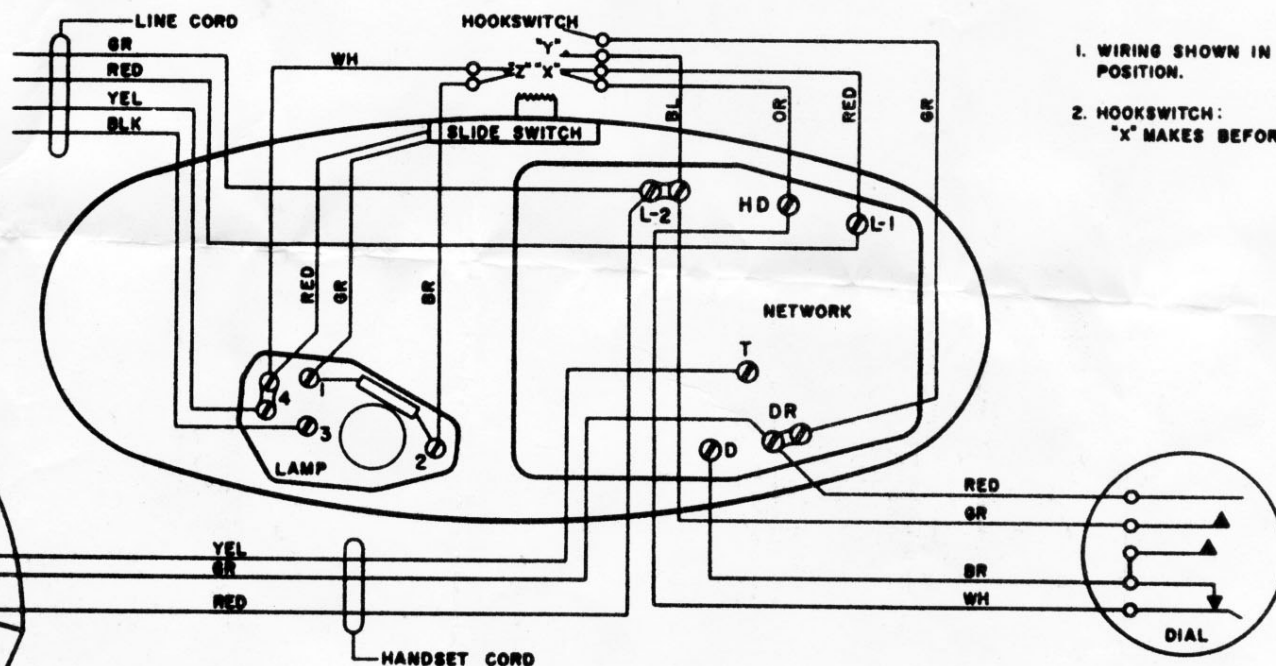

1. WIRING SHOWN IN OFF-HOOK POSITION.
2. HOOKSWITCH:
"X" MAKES BEFORE "Y" BREAKS