


STROMBERG-CARLSON CORPORATION

S-C 2500Y TELEPHONE

WIRING DIAGRAM

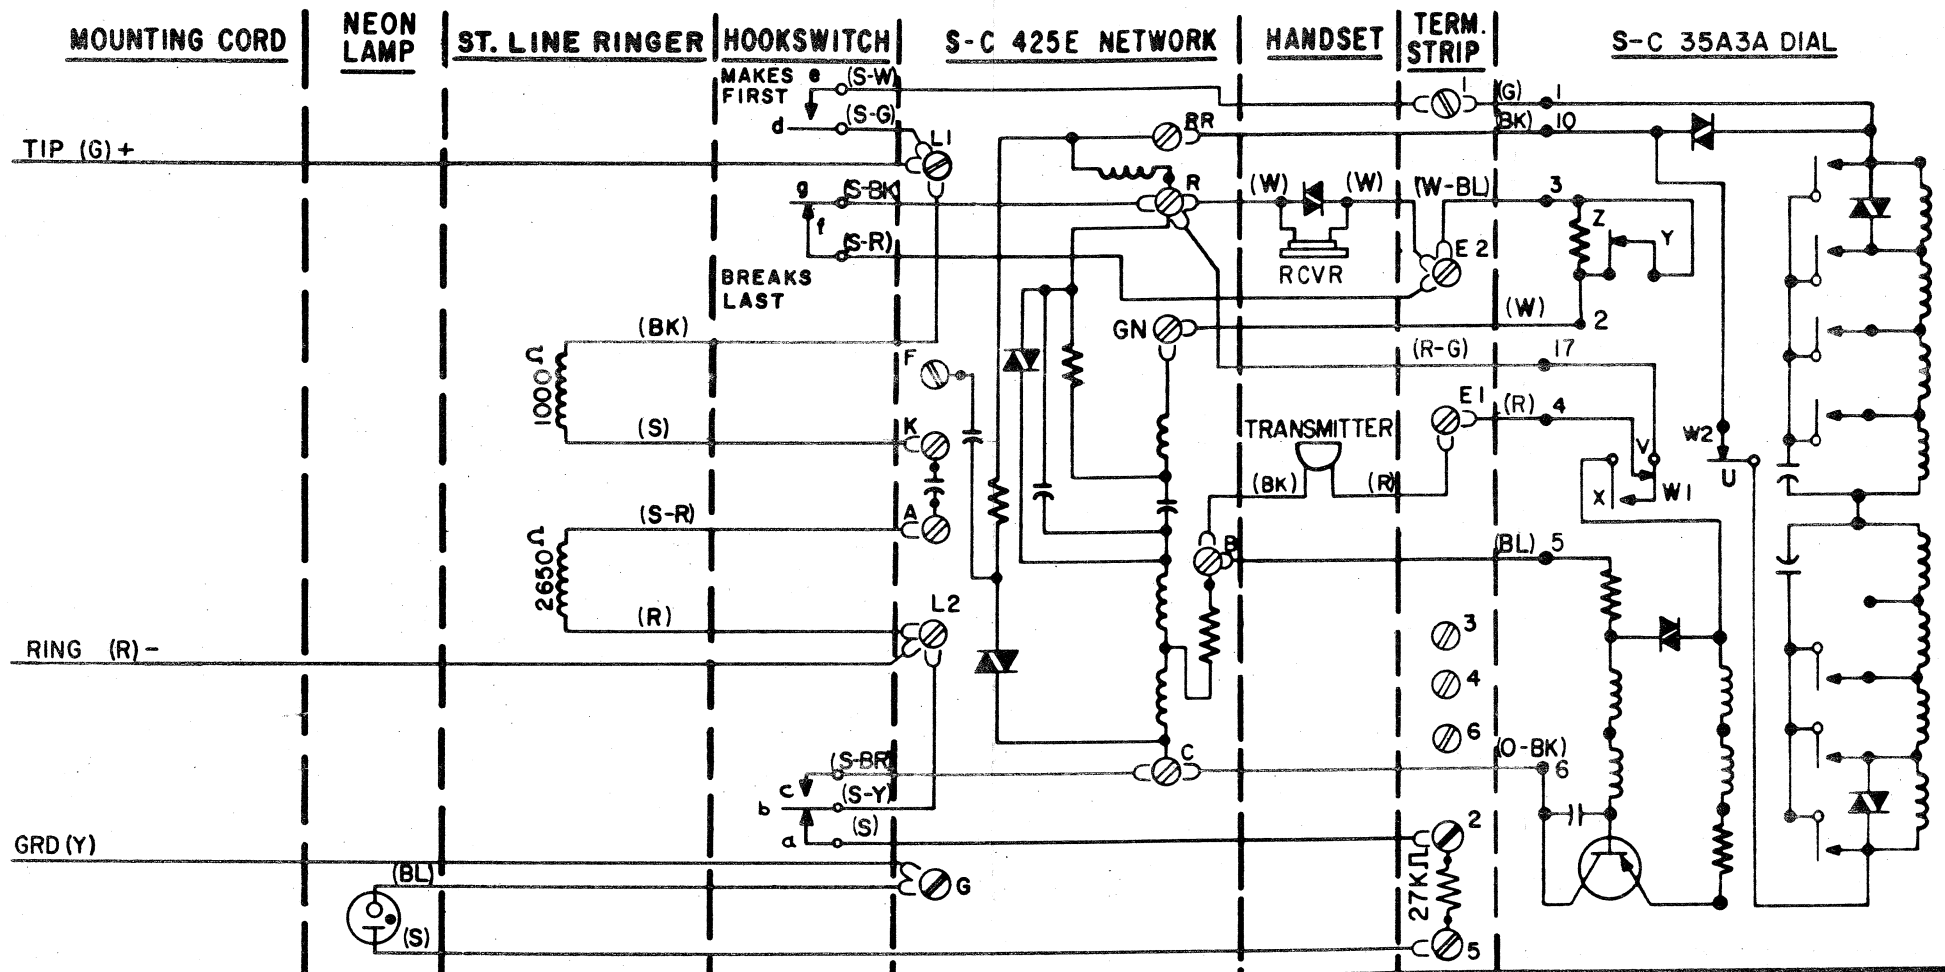

NOTES:

- 1-TO PERMANENTLY SILENCE RINGER FOR ALL SERVICES, TRANSFER BLACK RINGER LEAD TO "A" TERMINAL OF NETWORK.
- 2-MESSAGE WAITING LEAD (MW) CONNECTS TO Y OF CONNECTING BLOCK.
- 3-TO MAINTAIN CORRECT POLARITY ON TONE DIAL, MOVE (S-BR) HOOKSWITCH LEAD TO TERMINAL I & (S-W) HOOKSWITCH LEAD TO NETWORK TERMINAL C.

TABLE OF CONNECTIONS

CLASS OF SERVICE	CONNECTIONS AT CONNECTING BLOCK						CONNECTIONS AT NETWORK					
	LINE			MTG. CD.			MTG. CORD			STRAIGHT LINE RINGER LEADS		
	R	TIP	GND	R	G	Y	R	G	Y	R	BK	S S-R
2 WIRE	R	G	Y	R	G	G	L2	L1	G	L2	L1	K A
3 WIRE (NOTE 3)	R	G (NOTE 2)		G	R	Y	L2	L1	G	L2	L1	K A