



Figure 22. Telephone TA-166/U, arranged for manual operation.

TCI Library - <http://www.telephonecollectors.info/>


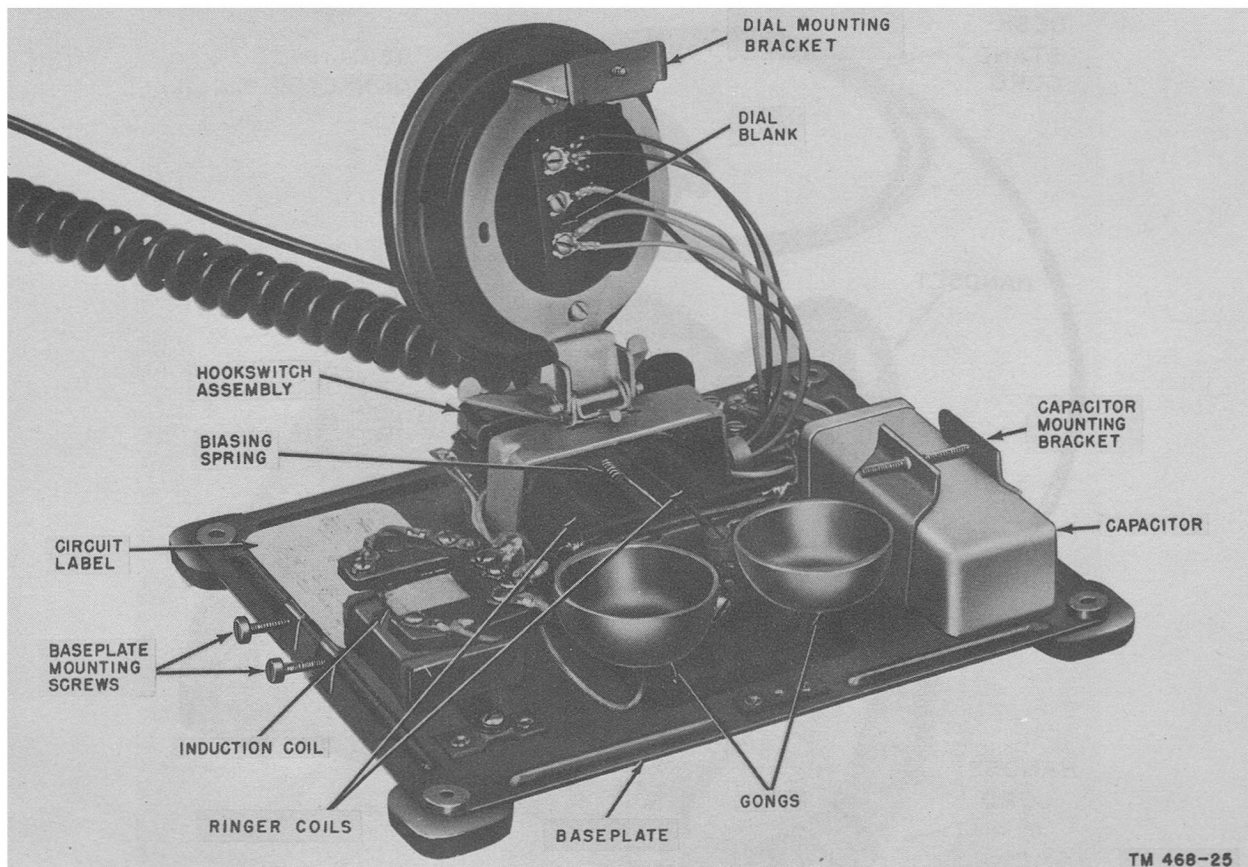



Figure 23. Telephone TA-166/U, with base plate open, showing location of parts.

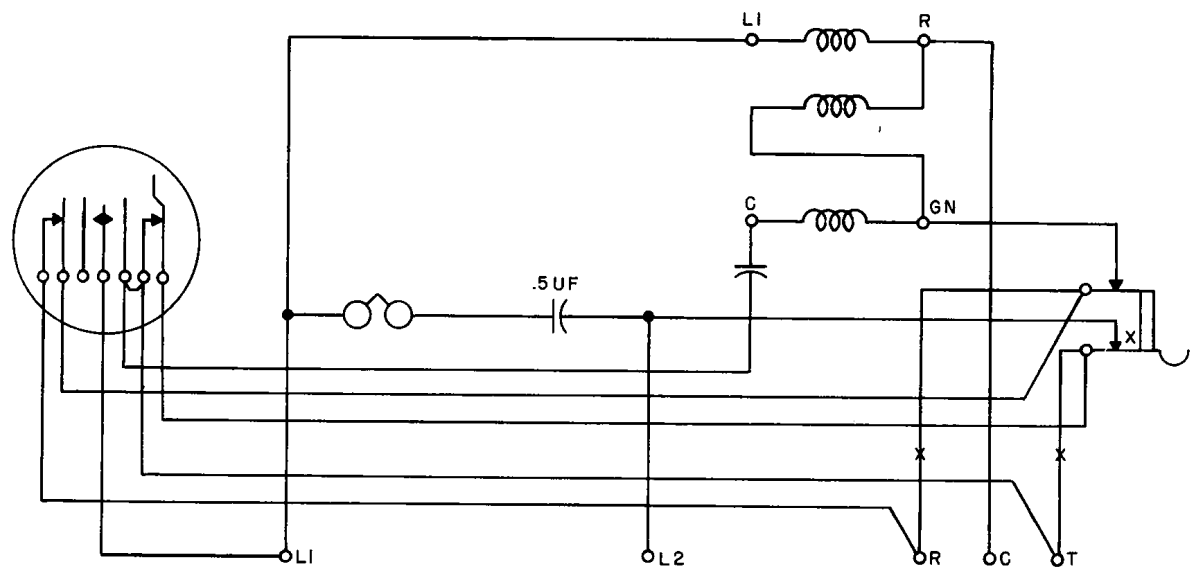

NOTES:

1. JUMPERS MARKED X NOT CONNECTED WHEN DIAL IS USED.
2. HOOKSWITCH SHOWN WITH HANDSET REMOVED FROM CRADLE.
3. X CONTACTS OF HOOKSWITCH MAKE FIRST.

A

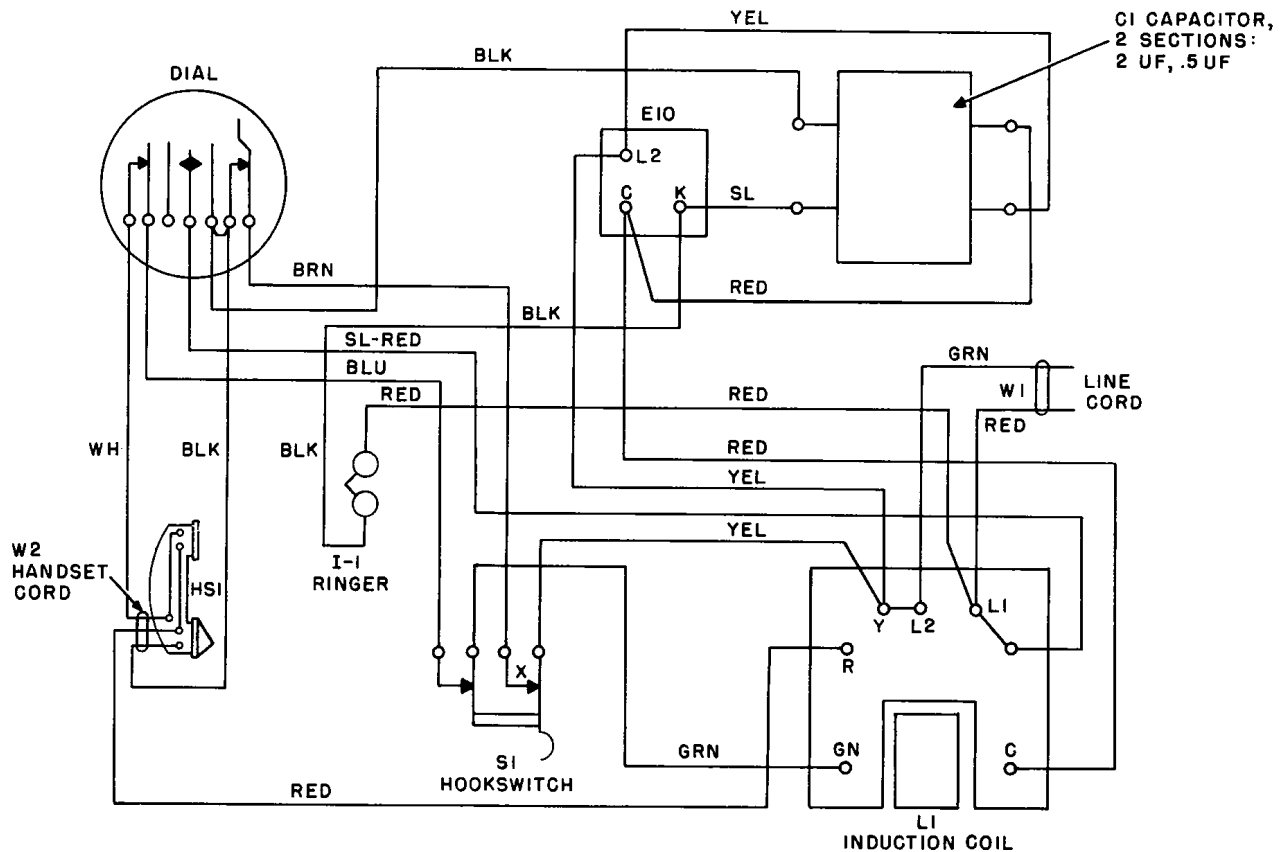

1. X CONTACTS OF HOOKSWITCH MAKE FIRST.
2. WHEN DIAL IS NOT USED, TIE BLK, BLK AND BRN LEADS TOGETHER AND TIE WH AND BLU LEADS TOGETHER.
3. HOOKSWITCH SHOWN WITH HANDSET REMOVED FROM CRADLE.

B

TM 468-73

Figure 99. Telephone TA-166/U (dial operation), schematic (A) and wiring (B) diagrams.