
North Electric 7H6 Desk Set

CONNECT GREEN RINGER LEAD TO TERMINAL

L2 FOR BRIDGED RINGING: TO TERMINAL 5 FOR

INDUCTION COIL

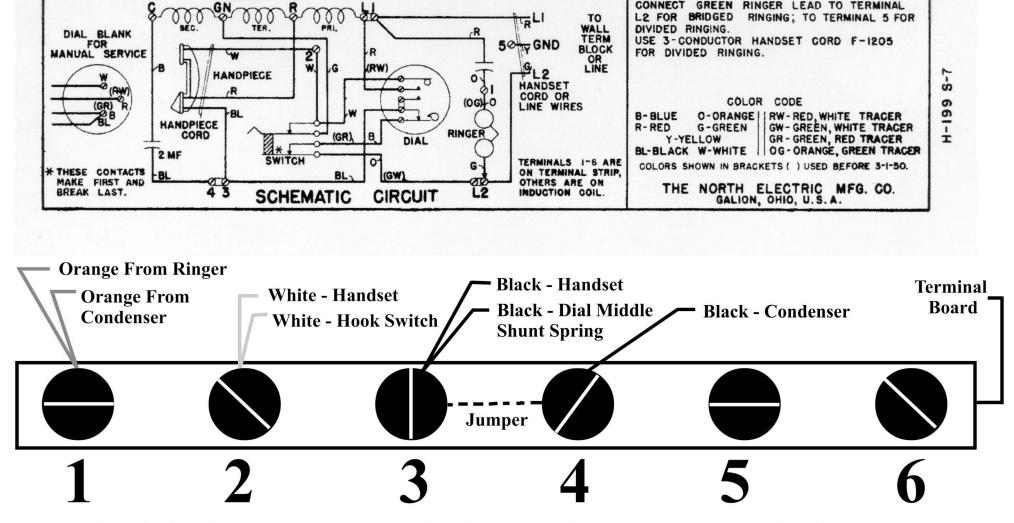

N.B. - A Soldered Jumper Between Terminals 3 & 4 is Normally Installed at the Factory on Bottom Side of Terminal Board