



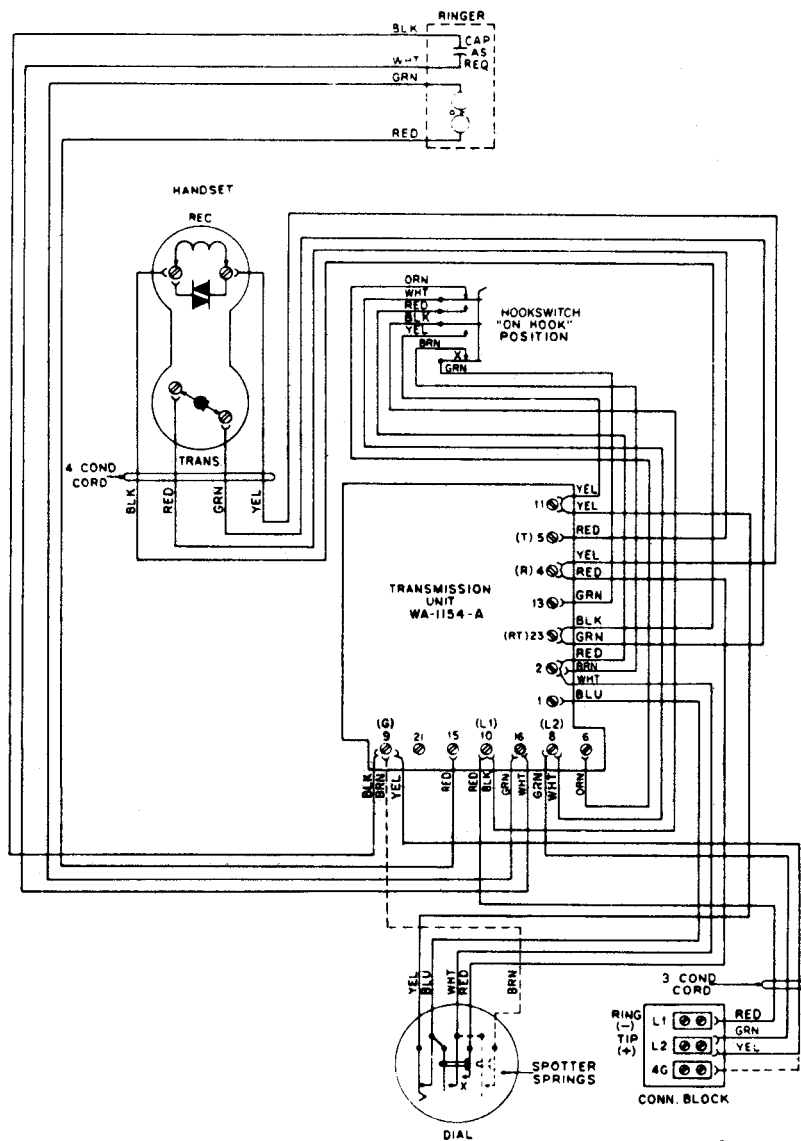

- NOTES
- 1- "X" CONTACTS TO MAKE FIRST AND BREAK LAST
 - 2- IF BELLS OF BASED RINGER TAP WHEN DIALING FROM ANOTHER TELEPHONE ON THE LINE, REVERSE RINGER CONNECTIONS AT TERMINALS 15 AND 16
 - 3- IF NO DIAL IS USED, CONNECT BLUE AND YELLOW DIAL WIRES TO TERMINAL 2, WHITE TO TERMINAL 3 AND RED TO TERMINAL 4 OF DIAL BLANK
 - 4- TO CONVERT TO HOOK LATCH
 - A- MOVE ORANGE HOOKSWITCH WIRE FROM TERMINAL 6 TO TERMINAL 1
 - B- MOVE YELLOW DIAL WIRE FROM TERMINAL 11 TO TERMINAL 6
 - C- MOVE BLACK HOOKSWITCH WIRE FROM TERMINAL 10(L1) TO TERMINAL 6
 - D- REMOVE GREEN HOOKSWITCH WIRE FROM TERMINAL 13 AND TAPE
 - E- STRAP TERMINAL 10(L1) AND TERMINAL 11
 - F- MOVE RED HOOKSWITCH WIRE FROM TERMINAL 2 TO TERMINAL 8(L2)
 - G- MOVE WHITE HOOKSWITCH WIRE FROM TERMINAL 8(L2) TO TERMINAL 2
 - 5- IF MESSAGE WAITING LAMP IS USED, CONNECT LAMP LEAD TO TRANSMISSION NETWORK TERMINALS 8 AND 10
 - 6- WHEN SATT DIALS OR ANI SERVICE ARE USED, DO NOT REVERSE LINE OR RINGER LEADS. POLARITY OF LINE MUST BE MAINTAINED AS SHOWN IN TABLE "I".

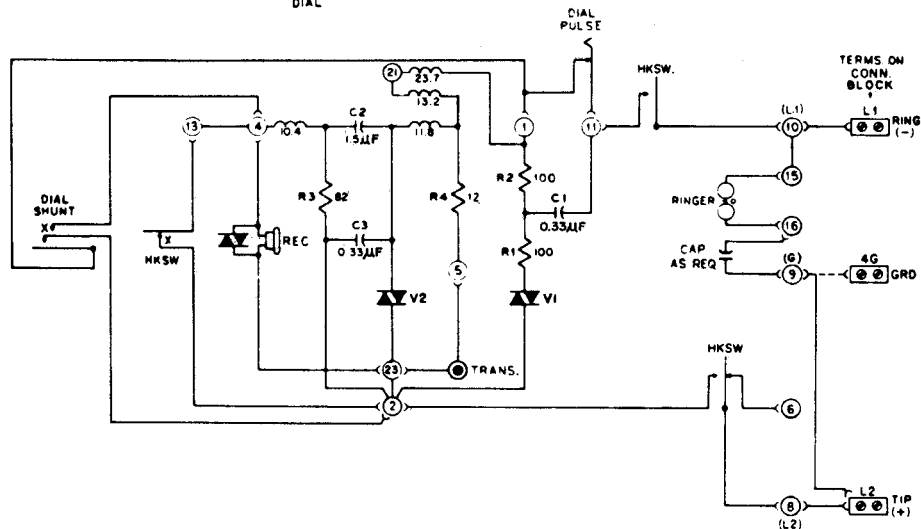

Schematic and Wiring Diagram, Type 80
Self-Compensating Telephone Set
NC-802.