


## Tying Cords to #144 Receivers:

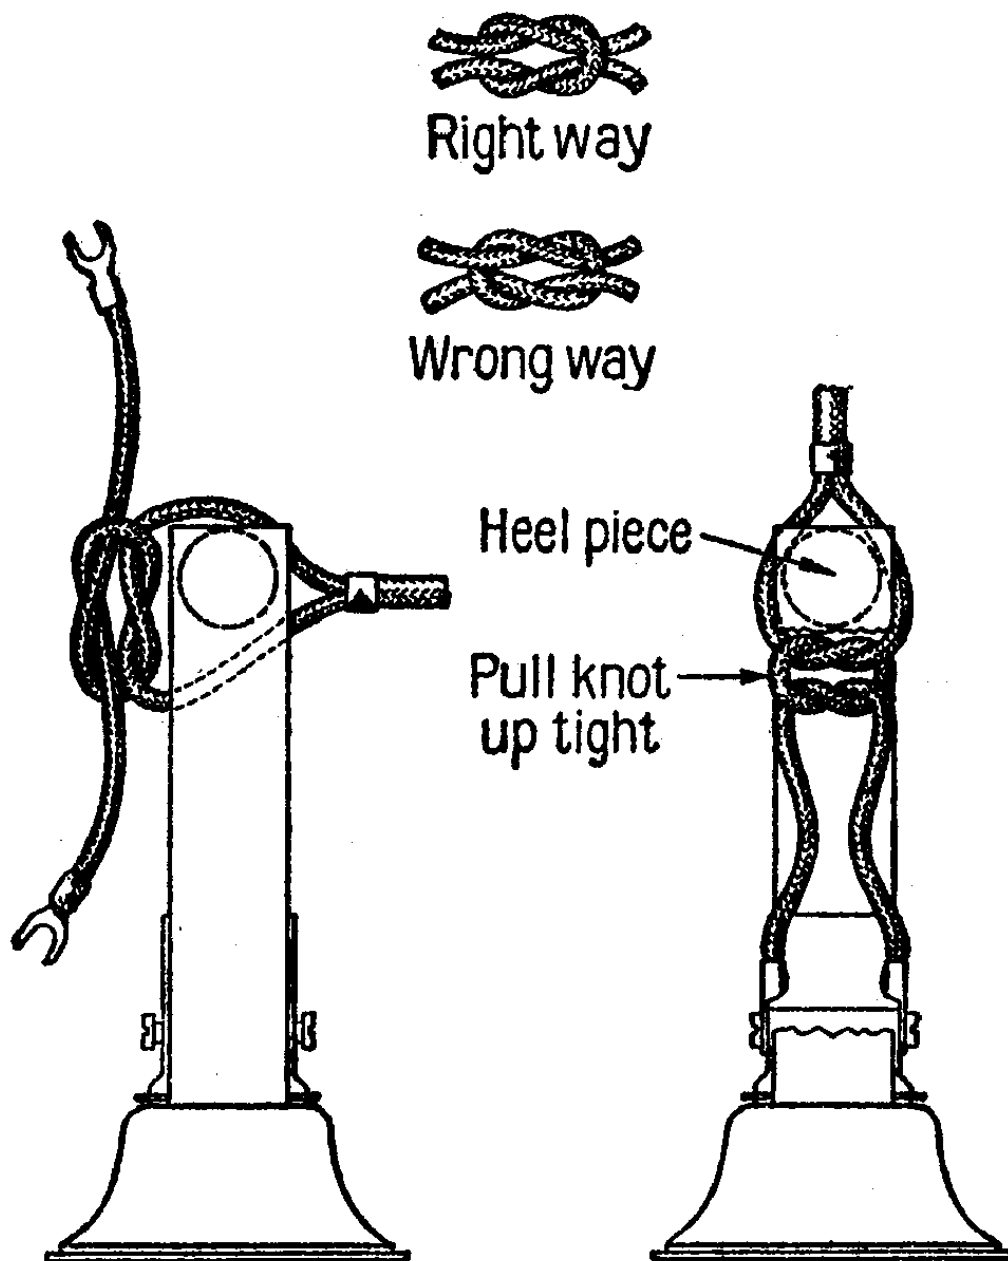

Pass one conductor on one side of heel piece and pass the other conductor on the other side of the heel piece. Tie with square knot, (see right way above), turn knot between limbs of magnet and insert spade tips under terminal screws.