


Some new effective features have been added to your KX-T61610. Please read this leaflet and use the features for your convenience.

Programmable Executive Override

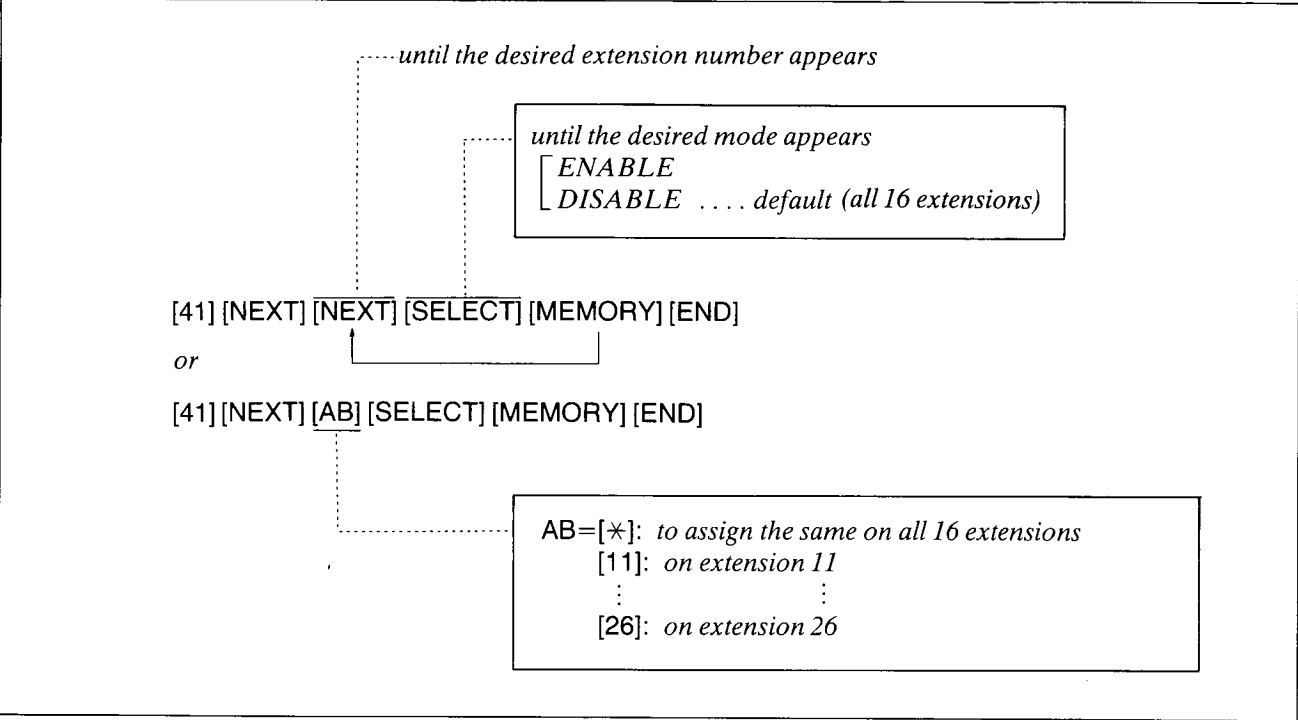

Description

Through programming, you can select which extension may barge in another extension that is in conversation with an outside party.

Programming

1. Dial (41).
"EXECUT OVERRIDE" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11: DISABLE" will be displayed and "DISABLE" will blink.

4. Press the SELECT button, to alternate between ENABLE and DISABLE to select the desired mode.
5. Press the MEMORY button.
The LCD will stop blinking.
6. Repeat steps 3 to 5, to program the assignment of the other extensions.
7. To return to the initial program mode, press the END button.

Conditions

- If you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to return to the previous extension for displaying the Executive Override selection.

Programming Table


| | Default | To make program change | | | | | | | | | | | | | | | |
|------------|----------------|------------------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| Extensions | all extensions | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 |
| Disable | × | | | | | | | | | | | | | | | | |
| Enable | | | | | | | | | | | | | | | | | |

Executive Override

To barge in:



LIFT THE HANDSET
OR PRESS
"SP-PHONE"



PRESS "CO"
WHOSE INDICATOR
IS RED

Description

Allows an extension user to barge in an engaged conversation for the following reasons: To establish Conference mode or to receive calls that another extension has answered.

Operation

■ To Establish the Conference Mode.

1. Lift the handset or press the SP-PHONE.
2. Press the CO button whose indicator is red.
A 3 party conference is now established and you can barge in the conversation. "CONF" will be displayed.
3. Start talking.
4. Place the handset back on-hook or press the SP-PHONE Button.
The other two parties will be directly connected together and can converse with each other.


■ Call Transfer using "Executive Override".

1. Push the CO button.
You have barge in the conversation.
- The Call Transfer will be completed when the extension user who received the call hangs up.

Conditions

- How to use the Camp-on feature when "Executive Override" is enable at your extension. You can use the Camp-on feature without barging in the conversation.
 1. Dial the busy CO line number (81 through 86) whose indicator is red instead of pressing the CO button.
 2. Dial (6).
 3. Hang up or press the SP-PHONE button. You will be automatically called back when the CO line becomes free.
- Only one party can barge in a conversation.
- You can not barge in the extension which is in dialing.

Automatic Designated CO Line Access

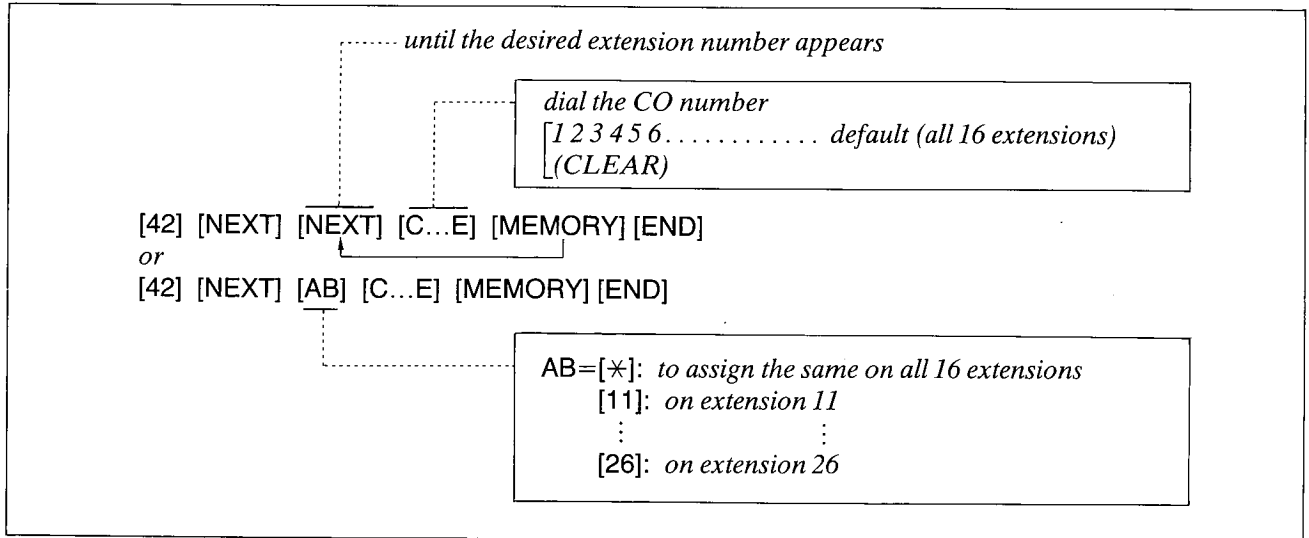

Description

Through programming, you can select which CO Line is accessed automatically when you dial 9 to use the "Automatic Line Access" feature or you use the "Auto CO Hunting" feature.

Programming

1. Dial (42).
"AUTO CO ACCESS" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
"11:CO 123456" will be displayed and "123456" will blink.
4. Dial the CO Numbers to be entered.
To cancel the entered CO Number, press the CLEAR button.
5. Press the MEMORY button.
•The LCD will stop blinking.

6. Repeat steps 3 to 5, to program the assignment on the other extensions.

7. To return to the initial program mode, press the END button.

Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the CO assignment.


Operation

- See page 4-2 or 5-1 "Automatic Line Access" and page 4-30 "Auto CO Hunting" in INSTALLATION MANUAL.
- The programmed CO line will be selected after dialing 9, picking up the handset or pressing the SP-PHONE button automatically.

Programming Table

| Extensions | Default | To make program change | | | | | | | | | | | | | | | |
|------------|----------------|------------------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| | all extensions | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 |
| CO 1 | × | | | | | | | | | | | | | | | | |
| CO 2 | × | | | | | | | | | | | | | | | | |
| CO 3 | × | | | | | | | | | | | | | | | | |
| CO 4 | × | | | | | | | | | | | | | | | | |
| CO 5 | × | | | | | | | | | | | | | | | | |
| CO 6 | × | | | | | | | | | | | | | | | | |

Programmable Call Waiting Tone

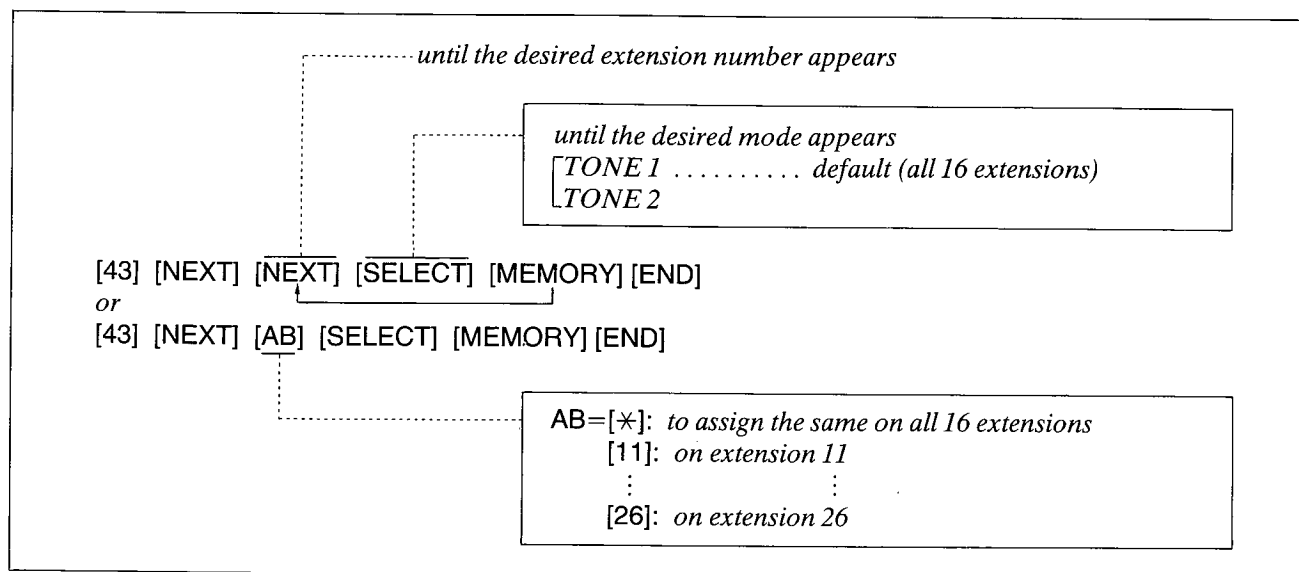


Description

Through programming, you can change the Call Waiting Tone from Tone 1 to Tone 2 shown below to prevent the user from missing the tone.

Tone 1 is heard from the handset receiver of the standard telephone and the built-in speaker of the proprietary telephone.

Tone 2 is heard only from the built-in speaker of the proprietary telephone when you have another call.

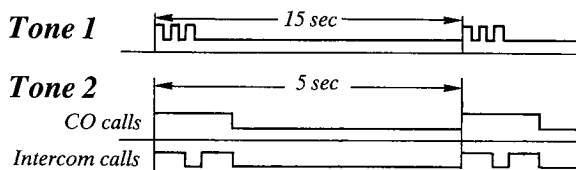

Programming

1. Dial (43).
"CALL WAIT TONE" will be displayed.
2. Press the NEXT button.
"ENTER EXT NO" will be displayed.
3. Press the NEXT button.
4. Press the SELECT button to alternate between "TONE 1" and "TONE 2" to select the desired tone.

5. Press the MEMORY button.
The LCD will stop blinking.

6. Repeat steps 3 to 5, to program the assignment of the other extensions.
7. To return to the initial program mode, press the END button.

Conditions

- As for the KX-T61650 and KX-T30850, Tone 2 is heard from both the handset receiver and the built-in speaker while having a conversation.
- Call Waiting feature should be programmed "ON" beforehand. Refer to page 3-28 in INSTALLATION MANUAL for the programming.
- When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 3.
- The PREV button allows you to go to the previous extension for displaying the Call Waiting mode.

Operation

- See page 4-16 "Call Waiting" in INSTALLATION MANUAL.

Programming Table

| | Default | To make program change | | | | | | | | | | | | | | | |
|------------|----------------|------------------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| Extensions | all extensions | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 |
| Tone 1 | × | | | | | | | | | | | | | | | | |
| Tone 2 | | | | | | | | | | | | | | | | | |