## SERVICE 2663A1 TELEPHONE SETS

## 1. GENERAL

- 1.01 These sets are supplied factory wired with a 242B amplifier to provide for headset operation and are used with 1A1, 1A2, or 6A KTS. A 52- or 53-type headset must be ordered separately. For ordering and installation information refer to the appropriate Reference section in Division 502.
- 1.02 Connection information was formerly found in Section 502-660-423 which will be canceled.

TABLE A
P-90D012 POLARITY GUARD CONECTIONS

	COLOR	REMOVE FROM	CONNECT TO		
LEAD		NET.	NET.	POLARITY GUARD	
Line Switch	W	С		s	
Headset Key	V-S			5	
Dial	BK	RR		Т	
Polarity	W		С		
Guard	G		RR		

**Note:** For use when specified by local instructions for end-to-end signaling installations.

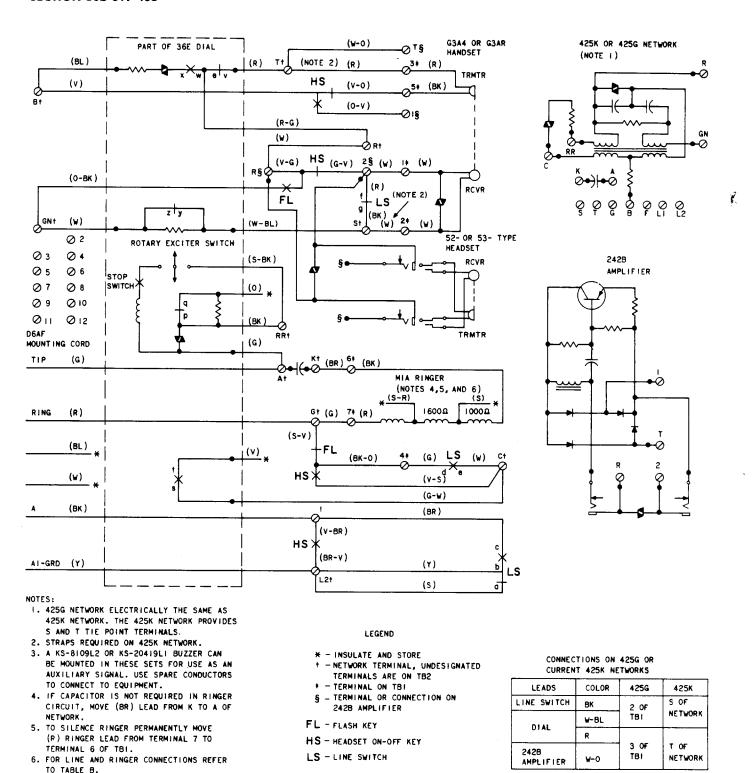


Fig. 1—2663A1 Telephone Set Connections

TBI

2)

3 ≻

STRAP COLOR

(W)

(R)

**NETWORK** 

≺ s

**∠** T

7. LINE SWITCH SEQUENCE:

bc - MAKES de - MAKES

ab - BREAKS

fg - BREAKS

TABLE B

LINE AND RINGER CONNECTIONS — 2663A1 TELEPHONE SET

WIRE OR LEAD		COLOR	INDIV OR BRIDGED	RING PARTY	TIP PARTY			
					NO IDENT	IDENT GROUND		IA1 OR 1A2 KEY TEL
					GROUND	1000 Ω	2650 Ω	SYSTEM
Line Wire	Tip		1	1	1	1	1	1
at	Ring		2	2	2	2	2	2
0	Grd A1		4	4	4	4	4	4 5
Mounting Cord at Connecting		G	1	1	1	1	1	1
		R	2	2	2	2	2	2
		Y	4	4	4	4	4	4
		BK	5	5	5	5	5	5
Block		BL	6	6	6	6	6	6
		W	7	7	7	7	7	7
Mounting Cord in Set		G	A	G	A	A	A	A
		R	G	A	G .	G	G	G
		Y	L2	L2	L2	L2	L2	L2
		BK	TB2-1	TB2-1	TB2-1	TB2-1	TB2-1	TB2-1
		BL	•	*	*	*	*	*
		W	*	*	*	*	•	*
Ringer Leads		R	TB1-7	TB1-7	TB1-7	TB1-6	TB1-6	TB1-7
		BK	TB1-6	TB1-6	TB1-6	TB1-7	TB1-7	TB1-6
		S	*	*	*	В		*
	S-R	*	*	*	*	В	*	
Ringer Straps		BR	K	K	К	K	К	К
		G	G	L2	L2	L2	L2	G
Dial		G	A	G	A	A	A	A
Leads	s	O-BK	C	C	С	С	C	Ç
Headset Ke	y Lead	S-V	G	A	G	G	G	G

<sup>\*</sup> Insulate and store