


FIG 1A RELAY SET

MANUAL BOARD EXPLANATORY ONLY

Centimetres

0
5
10
15
20
25
30

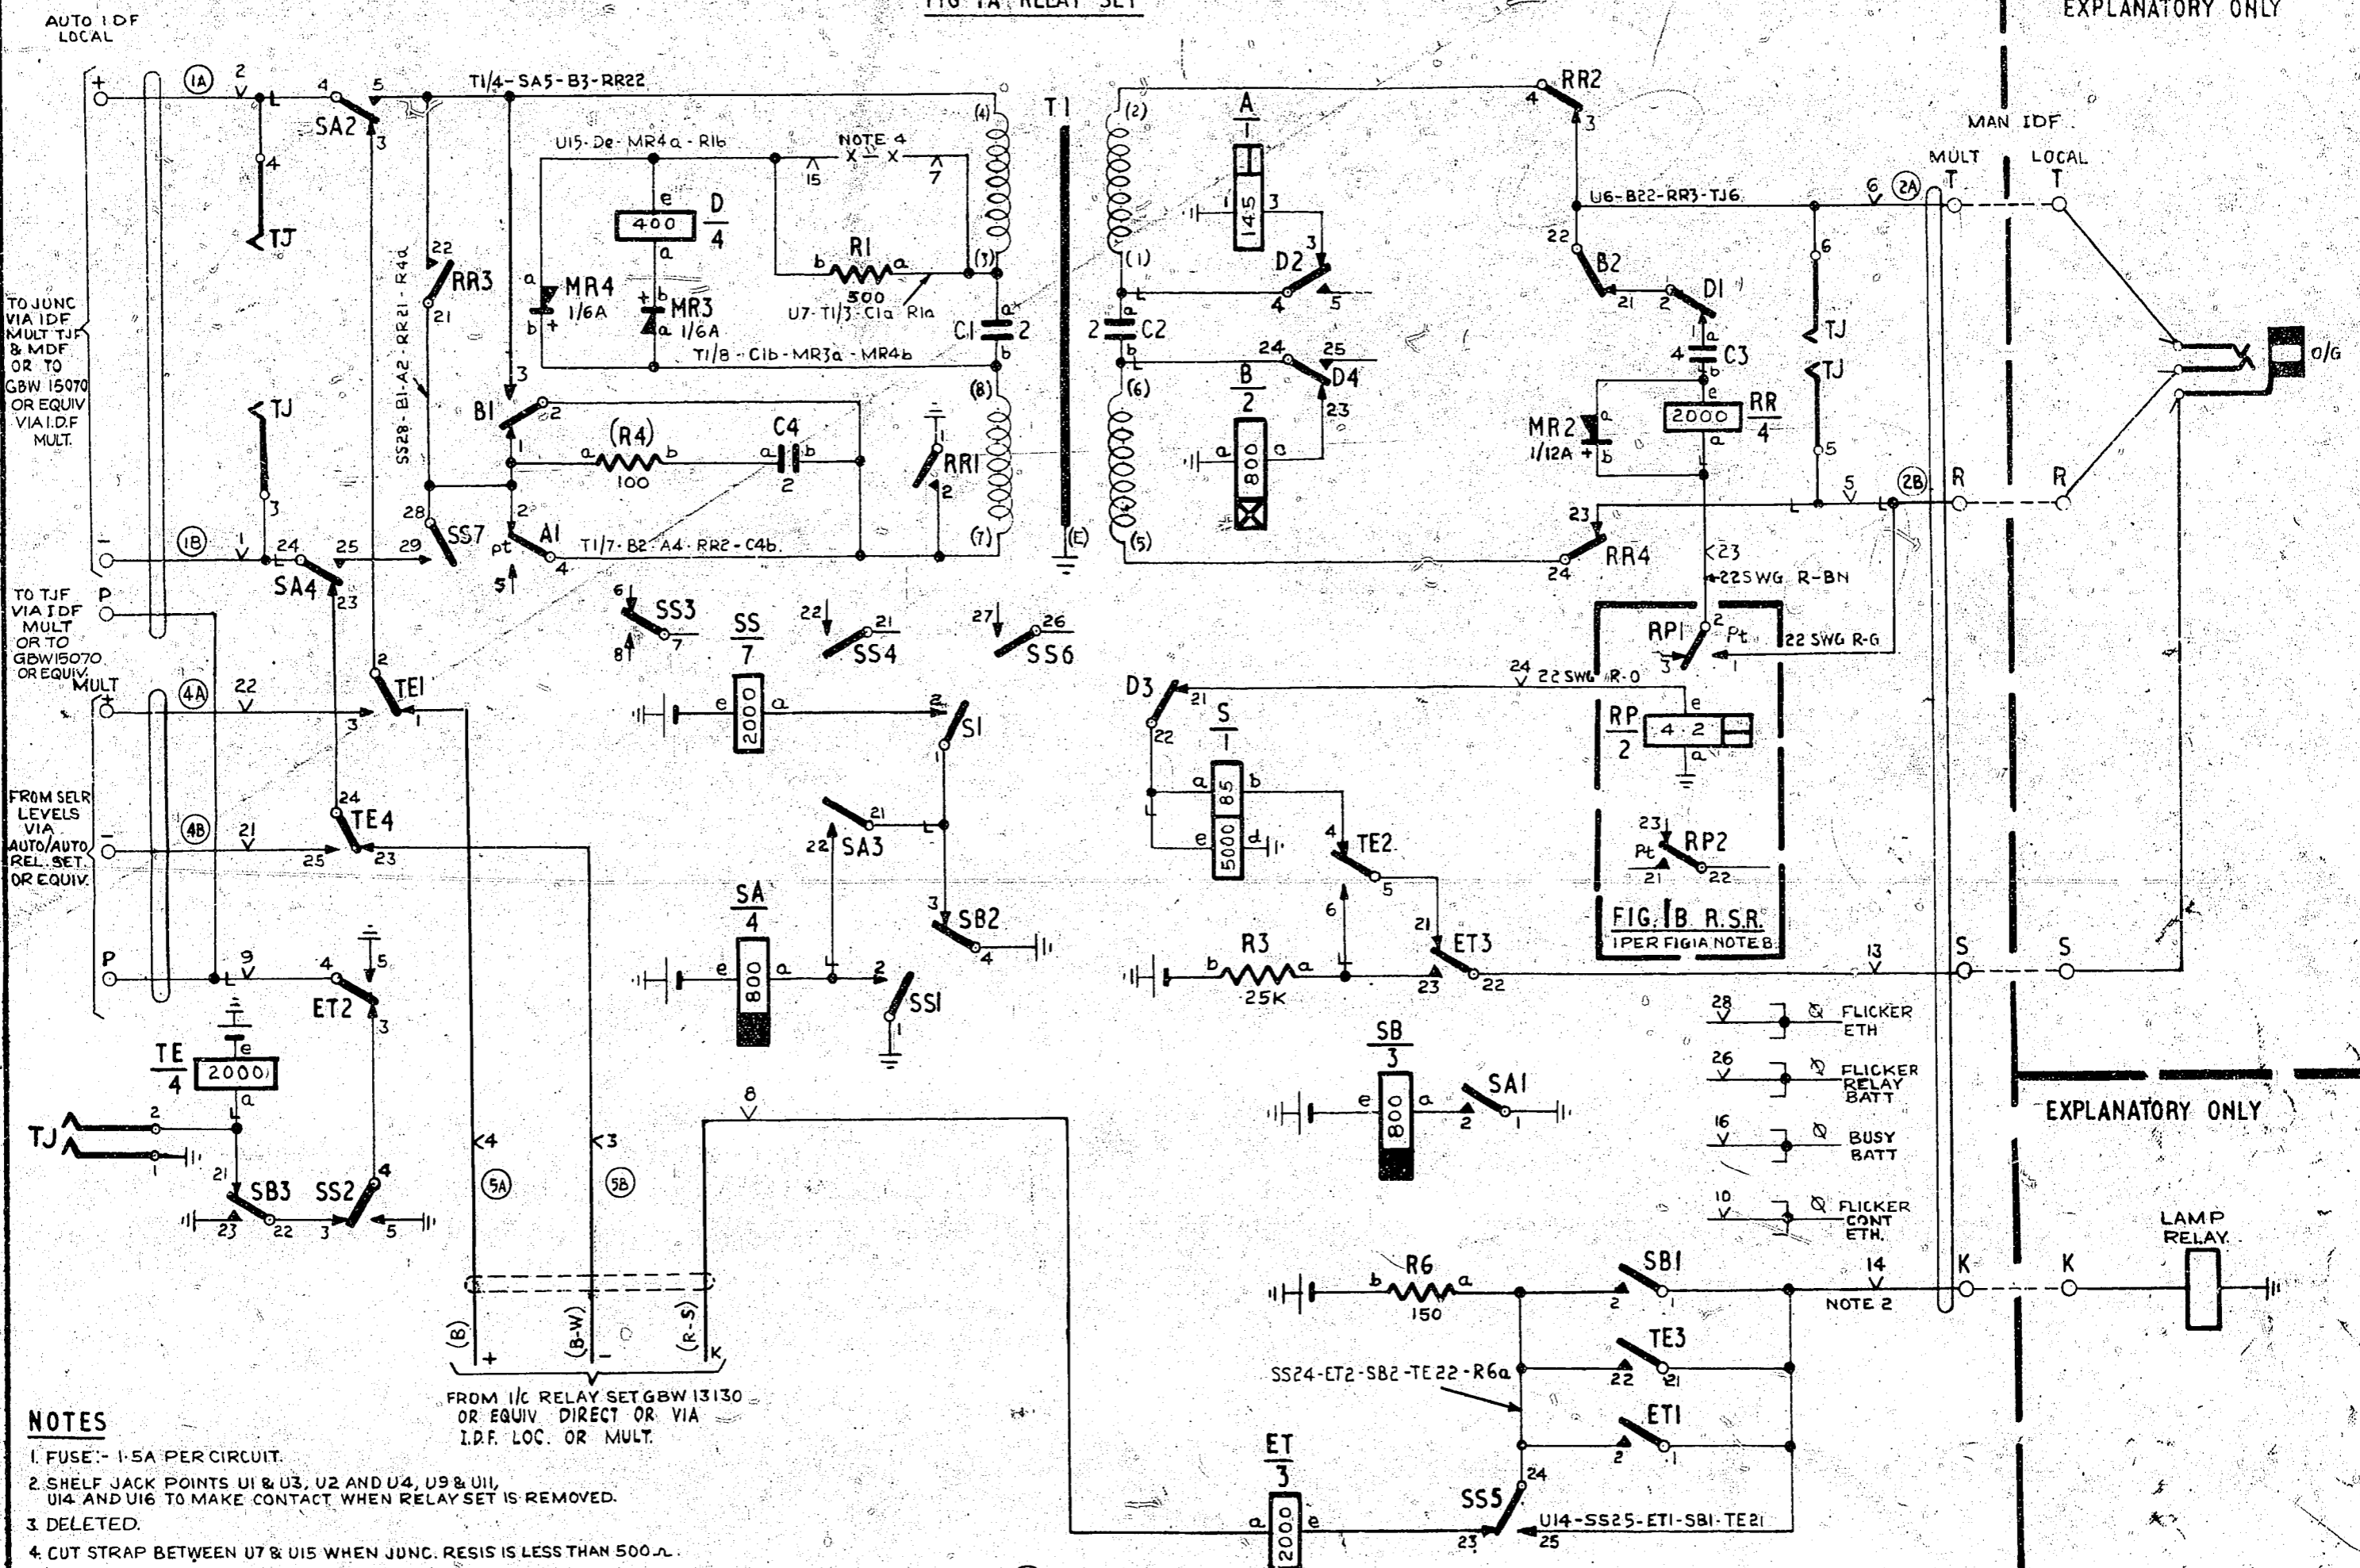

NOTES

1. FUSE:- 1.5A PER CIRCUIT.
2. SHELF JACK POINTS U1 & U3, U2 AND U4, U9 & U11, U14 AND U16 TO MAKE CONTACT WHEN RELAY SET IS REMOVED.
3. DELETED.
4. CUT STRAP BETWEEN U7 & U15 WHEN JUNC. RESIS IS LESS THAN 500Ω.

5. ALL WIRING TO BE 25 SWG UNLESS OTHERWISE SPEC'D.
7. FOR WIRING SEE GBW 10640 OR EQUIV.
8. RELAY RP TO BE MOUNTED ON RH UPRIGHT OF RACK. SEE RACK EQUIPT DRAWING.

BATT. W U12 - SSe - SAe - SBe - TEe - R6b - R2b
 ETH. R U11 - T1/E - Sd - SS1 - SS5 - SA1 - ET5 - SB23 - SB4 - Ba - AI - RRI - TJ1

BATT BK. 22. SWG FUSE U12
 ETH R 22. SWG ETH BAR U11
 RPa (FIG. 1B)

AMENDMENT PARTICULARS	ISSUE	DATE	APPRO
NOTE 3 & ASSOCIATED STRAP DELETED (G0097)	4	11.9.63	DBH
AC.Nº 3 (74933)	3	29.8.63	DBH
NOTE 3 AMENDED. PROVISION MADE FOR N.Z. S.S.	2	13.8.63	DBH
R2, R5, NOTES 3 & 5 & FIG 2. DELETED. NEW NOTE 3. ADDED (74819)	1	1.8.58	DBH
(77712)			

GBW 15350

EXPLANATORY ONLY

LAMP RELAY

