
SERVICE 533A/B TELEPHONE SETS

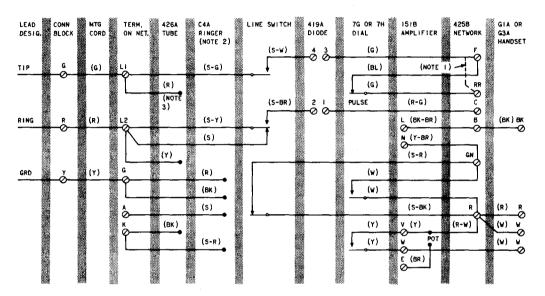

NOTES

- GREEN DIODE LEAD IS CONNECTED TO F TERMINAL IN DIAL SETS AND TO RR TERMINAL IN MANUAL SETS.
- 2. NEGATIVE RING PARTY CONNECTIONS ARE SHOWN. SEE TABLE A FOR OTHER CLASS OF SERVICE CONNECTIONS.
- FOR NEGATIVE STATIONS IN OFFICES WITHOUT ANI, (R) LEAD FROM 426A TUBE MAY BE CONNECTED TO G TERMINAL, IF RINGER OPERATION IS MARGINAL.

Fig. 1-533A/B Telephone Set, Connections

TABLE A
LINE AND RINGER CONNECTIONS
533A, B TELEPHONE SETS

WIRE OR LEAD		COLOR	NEGATIVE (—) AND POSITIVE (+) PARTIES*	
			(—) RING	(+) RING
Mtg Cord	Ring Tip Grd	R G Y	L2 L1 G	L2 L1 G
Ringer Leads†		R BK S S-R	G G A K	L2 L2 A K
426A Tube Leads		R BK Y	L1 K L2	L2 K G

^{*} Reverse tip and ring for negative (-) and positive (+) tip party connections.

[†] To silence ringer permanently; remove R ringer lead and insulate and store.