

HAND TELEPHONE SET CONNECTIONS

COMMON BATTERY

1. GENERAL *SEE ADDENDUM*

1.01 This section covers the sidetone and anti-sidetone common battery hand telephone set connections for the following classes of service:

Individual Lines (Manual and Dial)


Two-Party Selective Message Rate (Manual Only)

Regular P.B.X. Stations (Manual and Dial)

1.02 The 201, 202 and 211 types of hand telephone sets are for use with anti-sidetone subscriber sets and in general differ from the 101 and 102 type sets in that they have an added conductor in the hand set mounting cord required for anti-sidetone connections. Hand telephone sets of the 201, 202 and 211 types may be used with sidetone subscriber sets by taping the black conductor cord tip at the connecting block or subscriber set end and leaving it disconnected.


1.03 Sidetone Reduction Connections when required shall be made at sidetone stations by reversing the conductors to the R and Y terminals of the hand set mounting cord at the subscriber set or connecting block.

HND. TEL.
SET
CONNS.

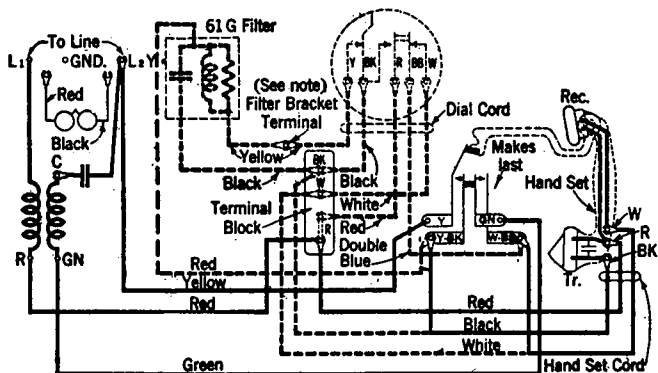

Note: If filter is not provided connect yellow lead from Y of dial to Y-BK mounting contact instead of filter bracket terminal.

Fig. 1—101 Type Sidetone Hand Telephone Sets

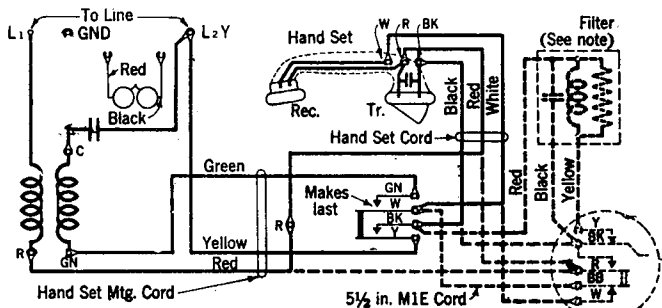


Note: If filter is not provided connect BK mounting contact to Y of dial with 5½ in. M1E cord.

For 102 Type Hand Telephone Set use 31H Filter.


For B1 Type Hand Set Mounting use 61C Filter.

Fig. 2 - 102 Type Hand Telephone Sets and A1 or B1 Type Hand Set Mounting with E1B Type Hand Set - Sidetone Stations

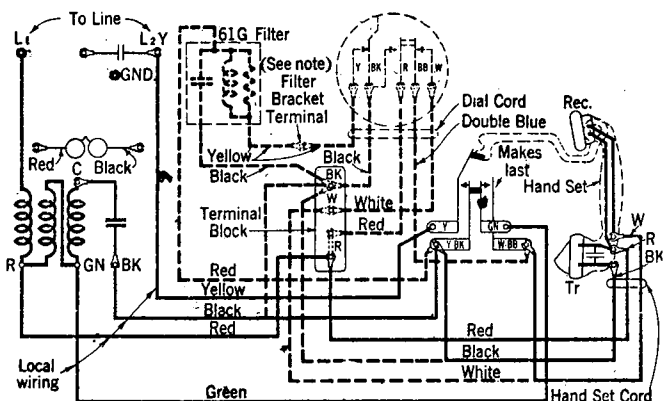

Note: If filter is not provided connect yellow lead from dial to Y-BK mounting contact instead of to filter bracket terminal.

Fig. 3 - 201 Type and Telephone Sets.

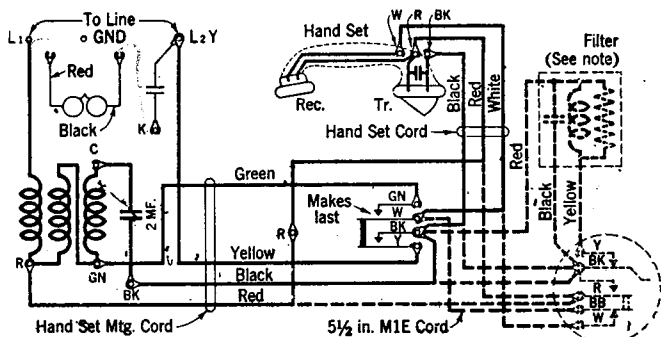

Note: If filter is not provided connect BK mounting contact to Y of dial with 5 1/2 in. M1E cord

For 202 Type Hand Telephone Set use 61H Filter.
For B1 Type Hand Set Mounting use 61C Filter.

Fig. 4 - 202 Type Hand Telephone Sets and A1 or B1 Hand Set Mounting with E1B Type Hand Set - Anti-Sidetone Stations.

HND. TEL.
SET
CONNS.
COMMON
BATTERY

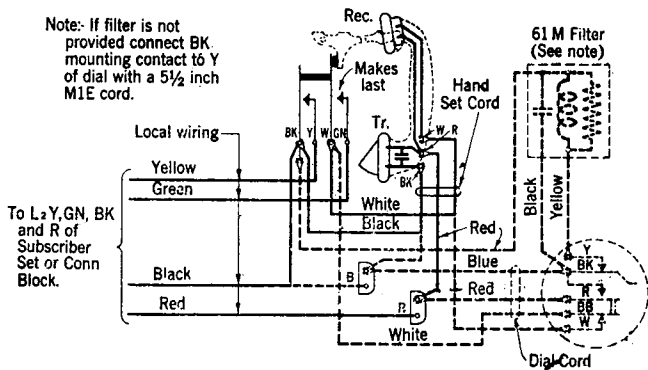


Fig. 5 - 211 Type Hand Telephone Sets

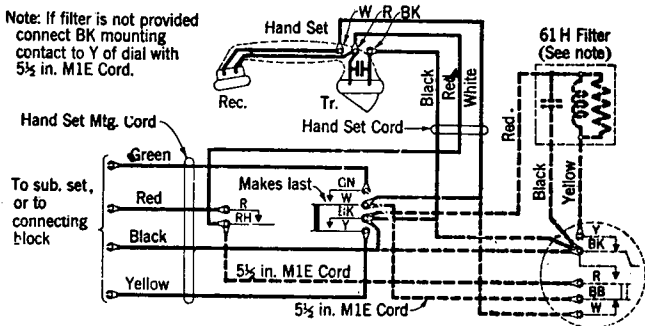


Fig. 6 - 215 Type Hand Telephone Set for Use Where 2 or More Stations are Connected to a Common Anti-Sidetone Subscriber Set.

FIG. 7 SEE ADDENDUM

HAND TELEPHONE SET CONNECTIONS

COMMON BATTERY

GENERAL

This addendum supplements Section C63.323, Issue A and covers the connections for 213 Type Hand Telephone Sets, rewired for use where more than one telephone instrument is to be connected to a single anti-sidetone subscriber set.

ADDITION

The following figure is added to the Section.

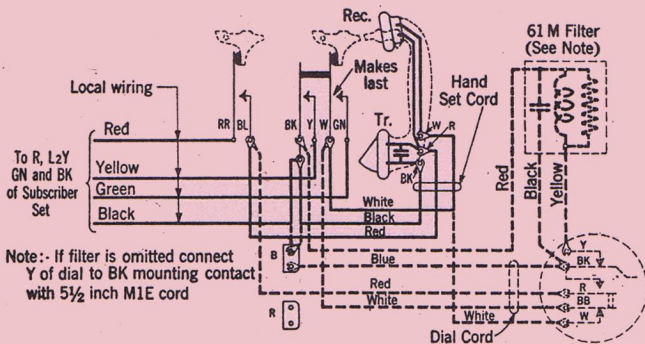


Fig. 7 - 213 Type Hand Telephone Set Rewired.